

Service

Category General

Section Pre-Delivery Service Market USA



### **Applicability**

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2020	ES300H, ES350, GS F, GS300, GS350, GX460, IS300, IS350, LC500, LC500H, LS500, LS500H, LX570, NX300, NX300H, RC F, RC300, RC350, RX350, RX450H, UX200, UX250H	

### **REVISION NOTICE**

October 09, 2020 Rev1:

• The Installation Procedure: Pre-Installed Knob Style section has been updated.

Any previous printed versions of this bulletin should be discarded.

### Introduction

2020 model year Lexus vehicles are equipped with driver side floor mat retaining clips to secure the floor mat in the correct position. In addition, some models may also utilize retaining clips for passenger side and rear seat floor mats. During Pre-Delivery Service (PDS), follow the appropriate Installation Procedure to attach the driver side, and if applicable, the passenger side and rear seat floor mats to the vehicle carpet using the floor mat retaining clips.

### Introduction (continued)

#### **CAUTION**

- ALWAYS verify the floor mat is designed specifically for the model and model year it is being installed in.
- ONLY use floor mats that can be secured using the retainers. ALL OEM Toyota floor mats are specifically designed to fit correctly and be secured using the retainers.
- Make sure the floor mat is properly placed on the vehicle carpet and secured with the retainers.
  If the driver side floor mat is NOT properly placed and secured, it could slip and interfere with the movement of the pedals during driving and may cause an accident.
- Verify the operation of the accelerator, brake, and clutch (if equipped) pedals and clearance to the mat.
- NEVER install more than one floor mat at a time in the driver's seating position.

Rev1

 If applicable, ANY secondary set of floor mats (based upon customer preference, such as the all-weather floor mats or other floor mats) MUST be placed in the trunk with ALL the packaging material intact. Do NOT install the secondary mat on top of the primary floor mat already installed in the driver's seating position.

### **Warranty Information**

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	_	_	_	_

#### **Installation Procedures**

•	Hook Style	2
•	Knob Style	2

### **Installation Procedure: Hook Style**

1. Verify that the driver, and if applicable, passenger side and rear seat floor mats are for the correct model and model year vehicle they are being installed in.




L-SB-0051-18

### **Installation Procedure: Hook Style (continued)**

- 2. Attach the driver, and if applicable, passenger side and rear seat floor mats to the vehicle carpet using the retaining clips.
- 3. Secure the mat by inserting the retaining clips through the grommet holes.

Rev1

Figure 1.

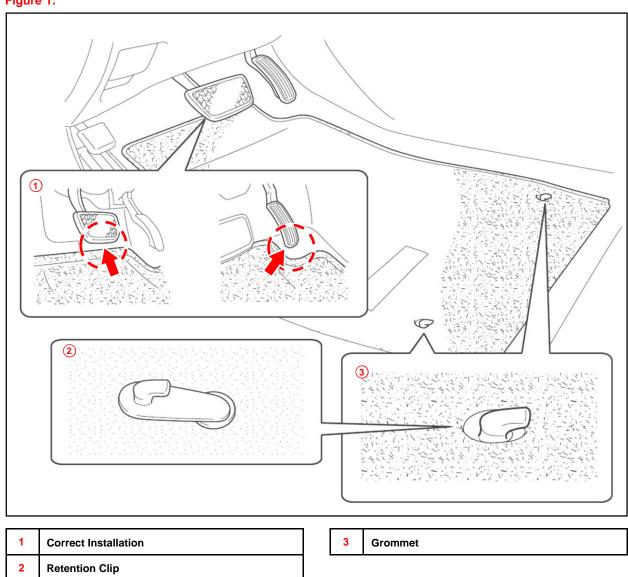



L-SB-0051-18

Rev1

### Installation Procedure: Hook Style (continued)

4. Verify proper installation.

#### NOTE

If applicable, do NOT remove the beige caution tag from the floor mat. ONLY the customer should remove the caution tag.

Figure 2.



Installation Procedure: Pre-Installed Knob Style

#### **NOTICE**

If the vehicle is equipped with two sets of floor mats (carpet and all weather):


- . Do NOT install both sets of floor mats at the same time.
- Install one set according to the current season and store the other set in the luggage compartment.
- Discard the Floor Mat Safety Check insert for the installed set and keep the other with the spare floor mat set for the customer's reference.
- 1. Verify that the driver, and if applicable, passenger side and rear seat floor mats are for the correct model and model year vehicle they are being installed in.



### Installation Procedure: Pre-Installed Knob Style (continued)

2. Align the floor mat holes with the retention clip knobs and place the floor mat holes onto the retention clip knobs.


Figure 3.

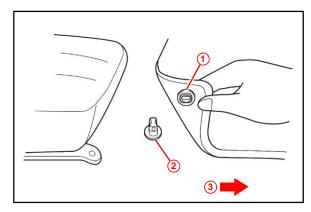

1	Retention Clip Eyelet on Floor Mat
2	Retention Clip
3	Front of Vehicle

- 3. Twist the retention clip knobs a quarter of a turn to lock in place.
- 4. Verify the triangle marks on the retention knobs and floor mat are aligned.

Figure 4.

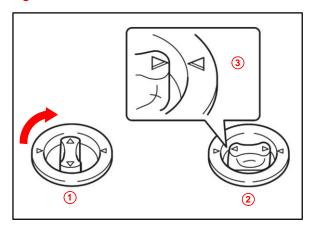

1	Twist Knob
2	Knob in Locked Position
3	Align Triangle Marks



### Installation Procedure: Pre-Installed Knob Style (continued)

L-SB-0051-18

Rev1

5. Verify proper installation.

#### NOTE

If applicable, do NOT remove the yellow caution tag from the floor mat. ONLY the customer should remove the caution tag.

Figure 5.

