

QUARANTINE NOTICE

Reference number:	QN-30-1471	Issued: 17 December, 2020
Subject:	Headliner Foam Block Installation	
Model(s):	DBX	
VIN range:	Refer to the separately published list of affected Vehicle Identification Numbers (VINs)	
Applicable to:	USA & Canada	
Distribute to:	After Sales Manager Service Manager Sales Manager	Warranty Staff Technician(s) Parts Staff

Reason for this Quarantine Notice

Aston Martin has found that some vehicles do not have the headliner foam blocks installed.

Do the workshop procedure that follows to install the headliner foam blocks on both sides of the vehicle.

Workshop Procedure

CAUTION MAKE SURE TO USE SUITABLE PROTECTIVE EQUIPMENT TO PREVENT DAMAGE TO THE VEHICLE.

1. Find the headliner clipping point on the B pillar (refer to Figure 1).

Note: Access to the roof liner clipping point is the same on both sides of the vehicle.

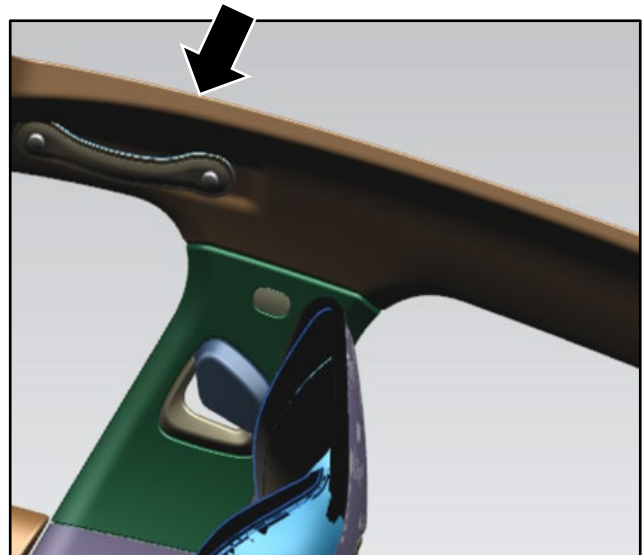


Figure 1

2. Carefully move the headliner down and push it back to disengage the clip (refer to Figure 2). This will let you access the recess for the headliner foam block.



Figure 2

3. Remove the double-sided tape from the headliner foam block (refer to Figure 3).

Note: *The foam blocks supplied may differ in colour and finish from those shown in the images.*



Figure 3

4. Put the headliner foam block into position between the roof rail and the headliner (refer to Figure 4).

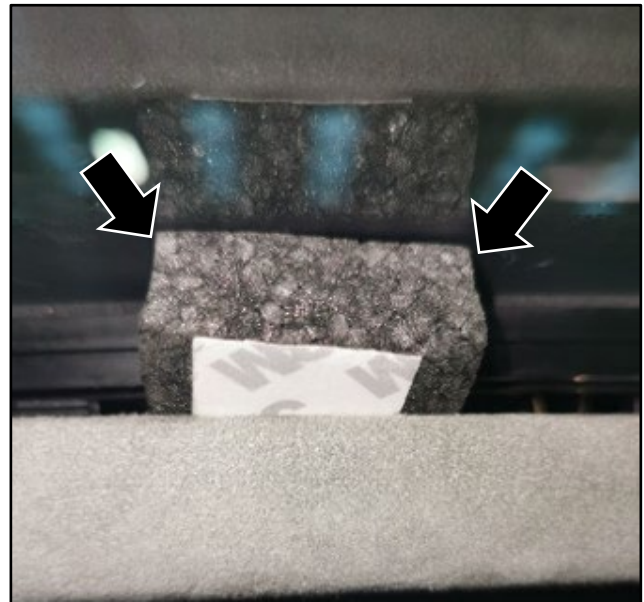


Figure 4

5. Install the headliner foam block on to the headliner assembly between the marks shown (refer to Figure 5).

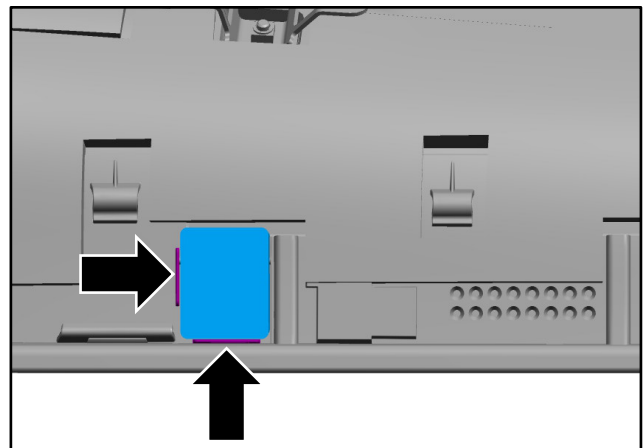


Figure 5

6. Push the headliner up to make sure the tape is attached correctly.
7. The headliner clip must be in the correct position before you install the headliner (refer to Figure 6).

Note: Take care when you install the headliner. The clips can be damaged if not in the position shown.

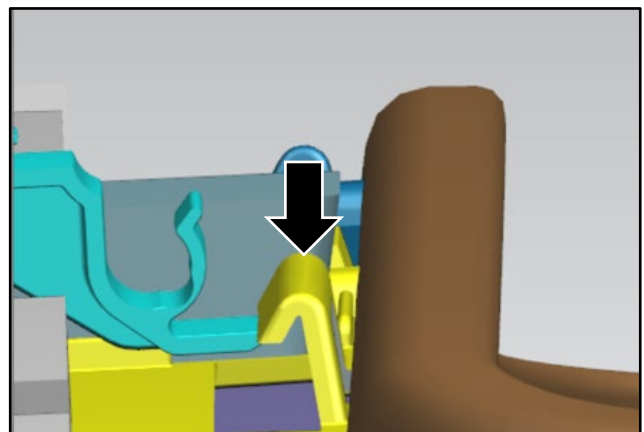


Figure 6

Note: The clip for the headliner can disengage. If this occurs, you must clip the headliner in place before you install the opposite side.

- 8. Install the headliner into position (refer to Figure 7). You will hear a click when the clip is engaged correctly.

Note: *If you do not hear a click you must do steps 7 and 8 again.*

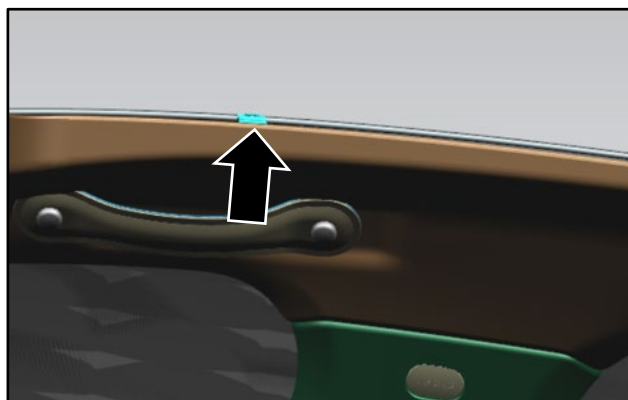


Figure 7

- 9. Do steps 1 thru 9 for the opposite side of the vehicle.

Part Data

Description	Part Number	Quantity
Foam Block	MY83-83-10035	2

Warranty Data

Procedure and Labour Time

Description	Labour Time
Install the Headliner Foam Blocks	0.1

If you have any questions related to this document, please refer to the 'Contact Us' link on this webpage, or contact your local Dealer or After Sales Manager.

The English version of this document is written in Simplified Technical English to ASD-STE100™.