



DEALER HOLD

Release Date: December 17, 2020

SLI

Communication #: TDH-20-03

Model Year(s): 2021

— Confidential and Proprietary —

VERSION: R02 (December 21, 2020)

****REPAIR PROCEDURE ADDED****

IMPORTANT STOP SALE NOTICE!
Stop selling affected vehicles immediately.

SUBJECT: CENTER HIGH MOUNT STOP LAMP INSTALLATION

PURPOSE

Polaris recently found that some Slingshot S models equipped with the technology package were assembled with a center tail light plug instead of a center high mount stop lamp.

This dealer hold outlines the procedure of center high mount stop lamp installation. Reference Unit Inquiry for specific VIN(s).

AFFECTED MODELS

MODEL YEAR	MODELS	VEHICLE IDENTIFICATION NUMBER RANGE
2021	Slingshot S (Models equipped with technology package) T21AATHDAA	Reference Unit Inquiry on the dealer website or the Service Communications list on the STOP site to lookup affected VINs.

WARRANTY CLAIM PARTS INFORMATION

SLINGSHOT S	
Dealer Hold #	TDH-20-03
Claim Type	DH (Dealer Hold)
Labor Allowance	0.2 hours (12 minutes)
Part Number / Description	2413294 (QTY 1) LAMP-CNTR HI MNTD STOP
Parts Availability	Available to order
University of Polaris Video Training Required	NO

The information contained within this document is confidential and protected by U.S. and international copyright laws, and is the property of Polaris Inc. This document is provided for the sole use of authorized Polaris dealers and distributors. This document is not to be distributed, duplicated, or copied, digitally or otherwise, without the written consent of Polaris Inc.


REPAIR PROCEDURE

TOOLS REQUIRED


- 4mm Allen Wrench / Socket
- Ratchet
- Trim Removal Tool
- Torque Wrench

REPAIR PROCEDURE

1. Remove the rear trim panel by gently prying on the front edge.

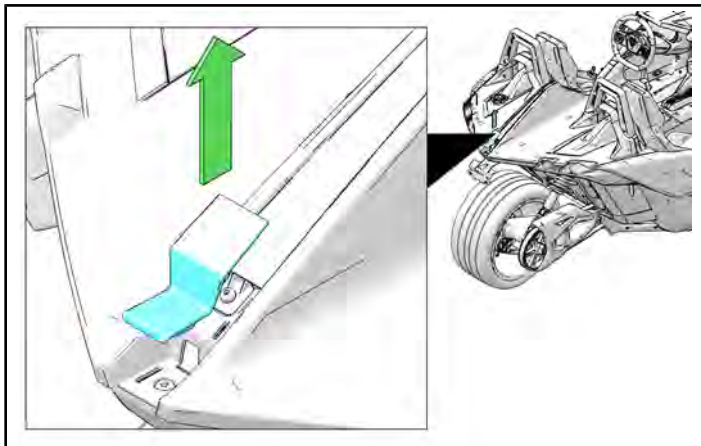


2. While starting on the top edge and working toward to the bottom, gently pry off the front trim panel.

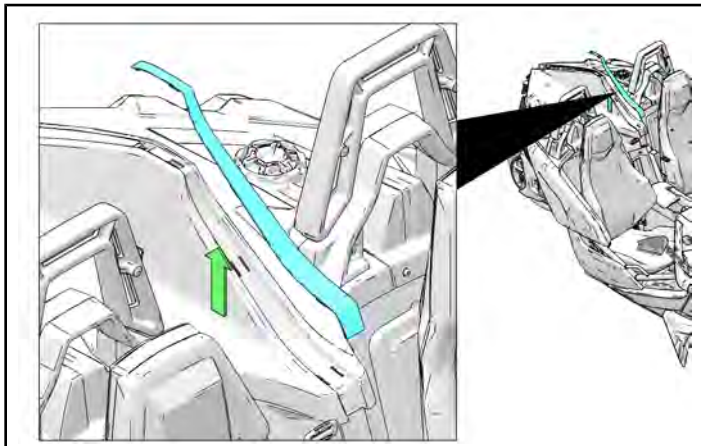


3. Remove the fasteners ① from the center tail light plug ②. Remove and discard the center tail light plug ② from the vehicle.

IMPORTANT


Retain the fasteners for installation.

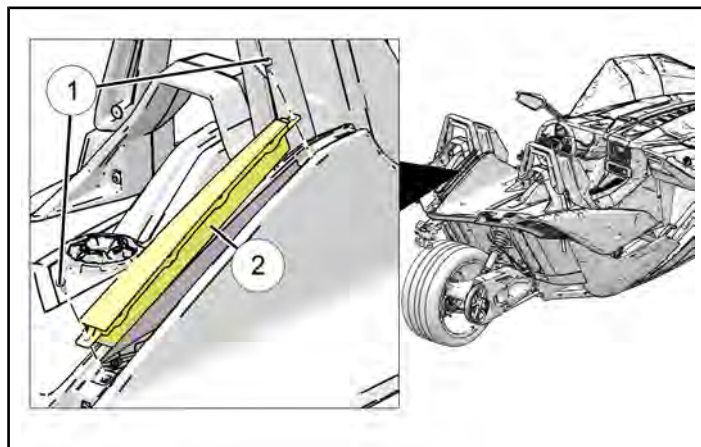


4. Locate the loose electrical connector ③ and connect the center high mount stop lamp assembly. Verify that the antenna module ④ is present and the inline electrical connector ⑤ is connected.

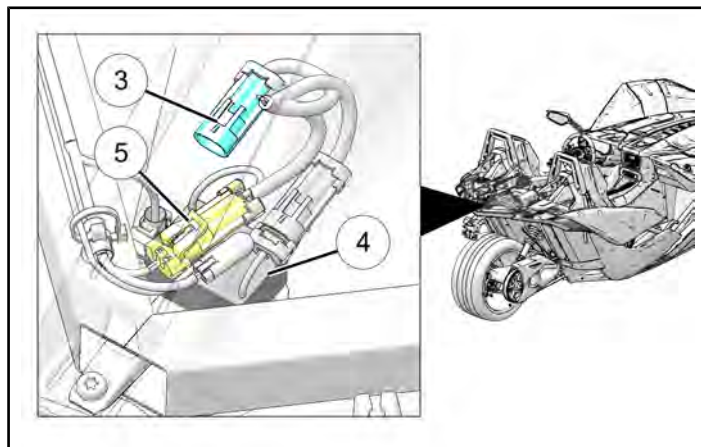

5. Install the center high mount stop lamp assembly ⑥. Install the fasteners ⑦ and torque to specification.

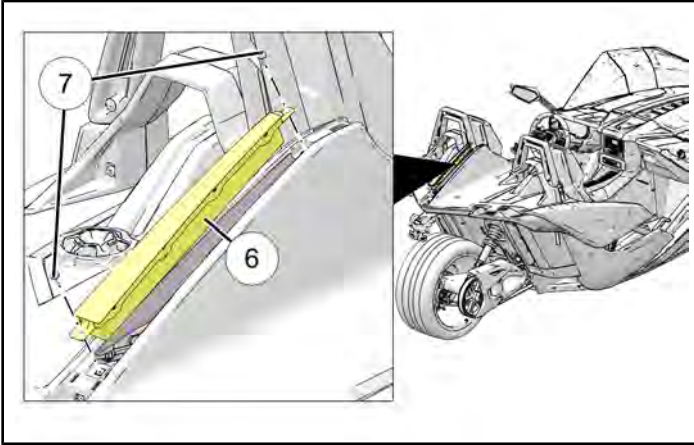

7. Install the rear trim panel. Make sure the trim panel is fully seated.

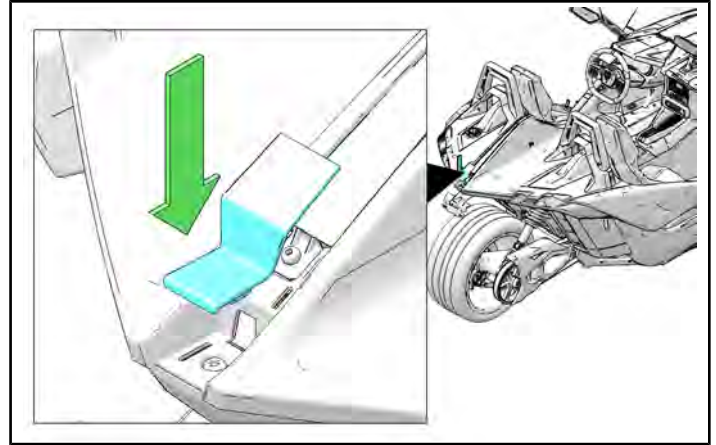

TORQUE

Center High Mount Stop Lamp Fasteners:
36 in-lbs (4 N·m)

8. Verify center high mount stop lamp operation and check for FM radio reception.
9. File a Dealer Hold claim for TDH-20-03.

6. Install the front trim panel. Make sure the trim panel is fully seated.

