

FLA COE  
FLB COE  
FLD Conventional  
Business Class  
FLC 112 Conventional

Century Class Conventional  
Argosy  
Cargo  
Columbia  
122SD and Coronado

Business Class M2  
Cascadia  
108SD/114SD  
> New Cascadia

**Freightliner  
Service Bulletin**

## Parts

New Cascadia Cab Door Part Numbers			
Part Name	Old Part Number	New Part Number	Quantity
DOOR-CAB, SERVICE P4, LH	Z18-72616-000	Z18-72587-000	1
DOOR-CAB, SERVICE P4, RH	Z18-72616-001	Z18-72587-001	1
RATCHET FASTENER 25	—	WWS 4021-3408	4

Table 1, New Cascadia Cab Door Part Numbers

## Plugging Pre-Drilled Holes in Replacement Doors

Replacement doors for New Cascadia vehicles are now pre-drilled with two holes for the installation of turning vanes. If turning vanes are not installed, the pre-drilled holes need to be plugged with ratchet fasteners. See [Fig. 1](#) and [Fig. 2](#).

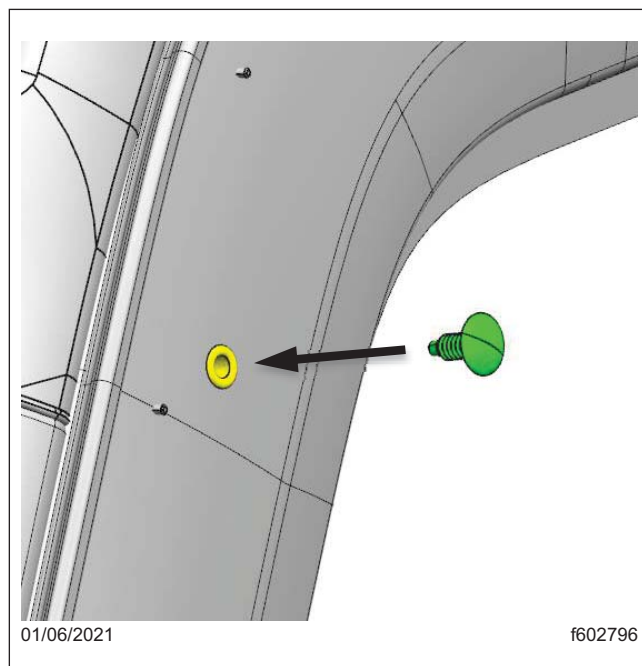


Fig. 1, Installing the Ratchet Fastener

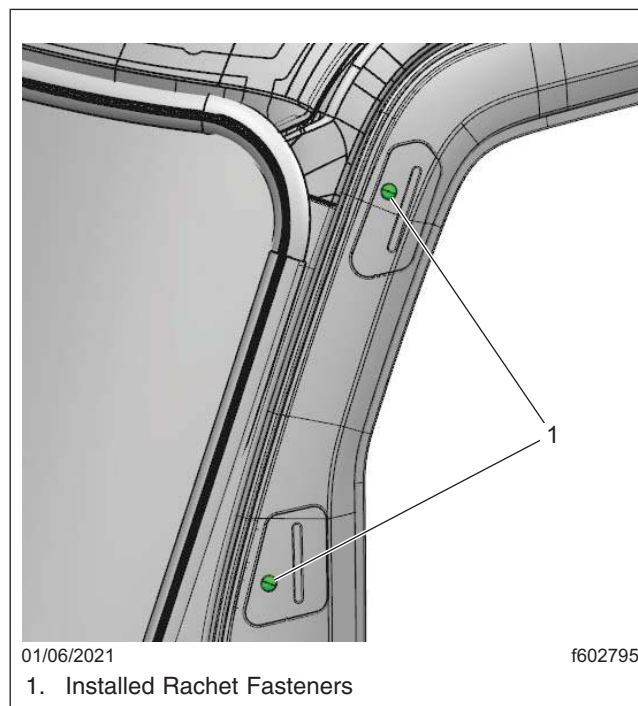


Fig. 2, Door Holes Plugged

1. Park the vehicle on a level surface, shut down the engine, and set the parking brake. Chock the tires.
2. Line up a ratchet fastener with an eyelet.
3. Fully insert the ratchet fastener into the eyelet.

## Warranty

This is an informational bulletin only. Warranty does not apply.