

Volvo Chassis - Model VN - Hood Latch/Cable Sticking Or Binding



If the hood latch/cable is found to be sticking, refer to the repair instructions below.

1. Remove the inboard fastener for the latch, indicated below. Loosen the cable adjustment jam nut and remove the cable from the latch.




2. Acquire an L-bracket (part number 8073912 or similar) with a slot and thickness of 3 mm (1/8 in) or greater as pictured below.



3. Install the L-bracket with the bolt removed in Step 1. Position the slot so that it is aligned in the same direction as the original cable mount, as shown below.



4. Remove the cable adjustment jam nut and thread the cable through the L-bracket.

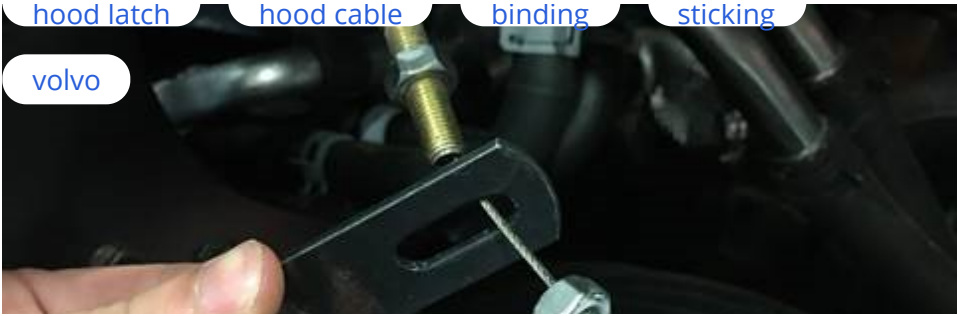

Related links and attachments

No links or attachments available



Feedback

[Give feedback](#)

to help improve the content of this article