


MOBILEYE FUSE RELOCATION

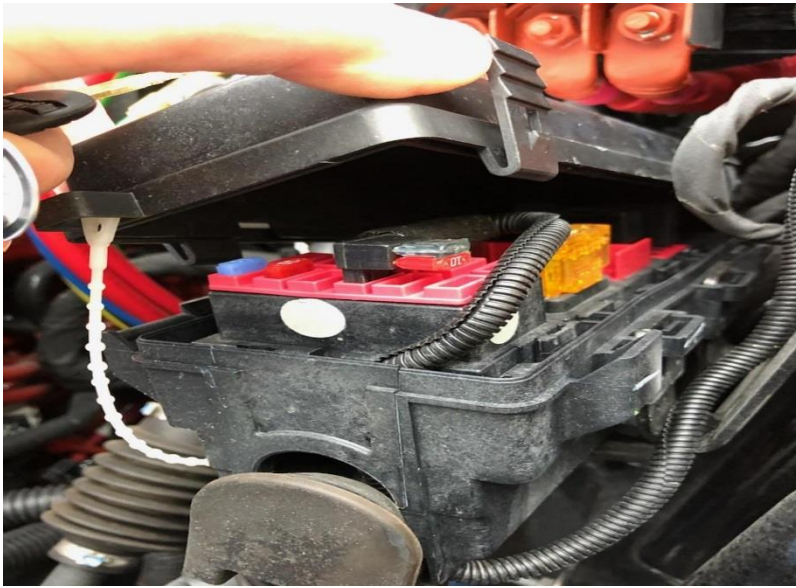

Remove the add-a-fuse assembly from the fuse block. Remove the 10 amp fuse from the add-a-fuse assembly and insert in fuse block where add-a-fuse assembly was removed. Cut the add-a-fuse assembly from the Mobileye harness and discard, then pull the harness through firewall into cab area. Route the harness over to the radio area.

Once you have access to the radio wiring harness, look for a Red and Yellow set of wires of the radio harness that are not being used. Under normal circumstances the Red would be used for the Mobileye power. However, it was discovered that the Red and Yellow wires have been swapped in some harnesses. Therefore, one should verify which of the Red and Yellow wires works off the key. The wire that has no power with key off is the wire needed to power the Mobileye.

