



SERVICE BULLETIN

Classification:

BT21-002

Reference:

NTB21-035

Date:

April 26, 2021

2018-2021 LEAF AND 2017-2020 ROGUE; STEERING WHEEL CHROME FINISHER REPLACEMENT

APPLIED VEHICLES: 2018-2021 LEAF (ZE1)
2017-2020 Rogue (T32)

SERVICE INFORMATION

If the chrome finisher on the steering wheel needs to be replaced, the chrome finisher can be ordered separately from the steering wheel.



Figure 1

Nissan Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. **NOTE:** If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Nissan dealer to determine if this applies to your vehicle.

SERVICE PROCEDURE

1. Remove the driver side air bag module.

- For removal of the driver side air bag module, refer to the Electronic Service Manual (ESM), section **REPAIR – RESTRAINTS – SRS AIRBAG – REMOVAL AND INSTALLATION – DRIVER AIR BAG MODULE**.

NOTE:

- When removing the chrome finisher from the steering wheel, reference Figure 2 for the 6 attachment points.
- During removal of the chrome finisher (step 2 on page 3), pull on the chrome finisher just enough to release the pawls from the steering wheel.

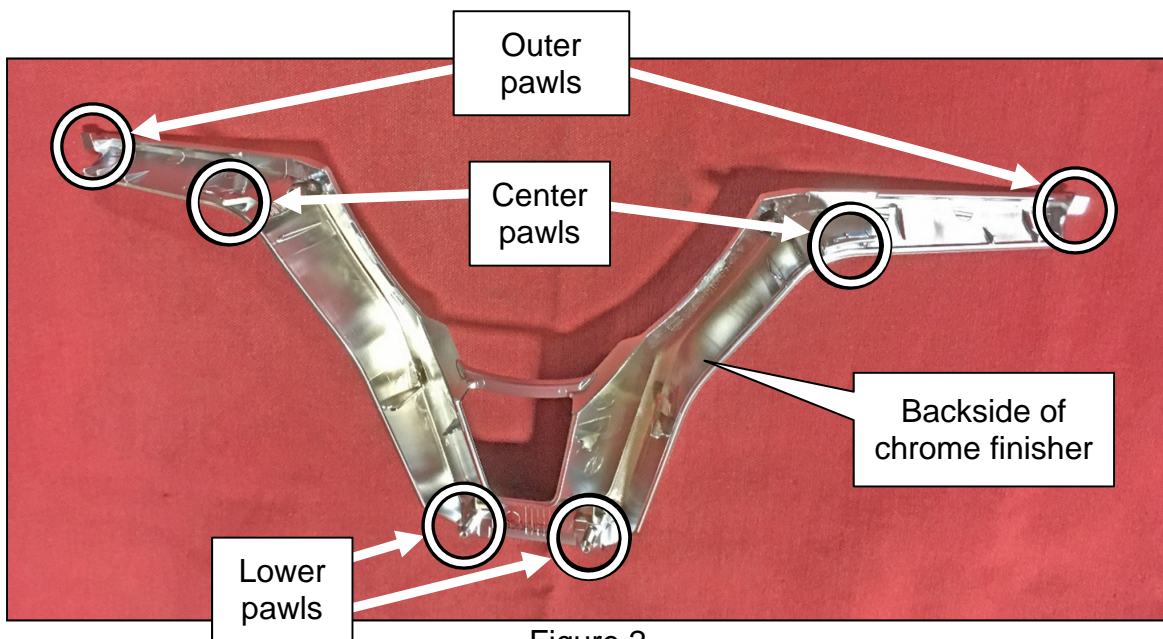


Figure 2

2. Carefully pull the center portion of the chrome finisher slightly up and away from the center of the steering wheel to release the 2 center pawls.

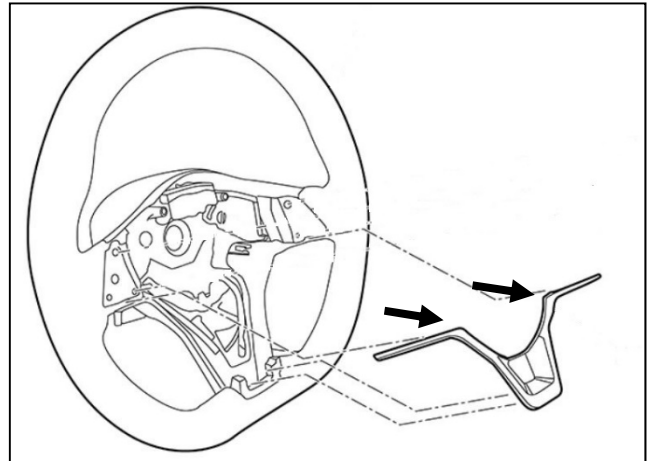


Figure 3

3. Carefully pull the lower portion of the chrome finisher away from the steering wheel to release the 2 lower pawls.

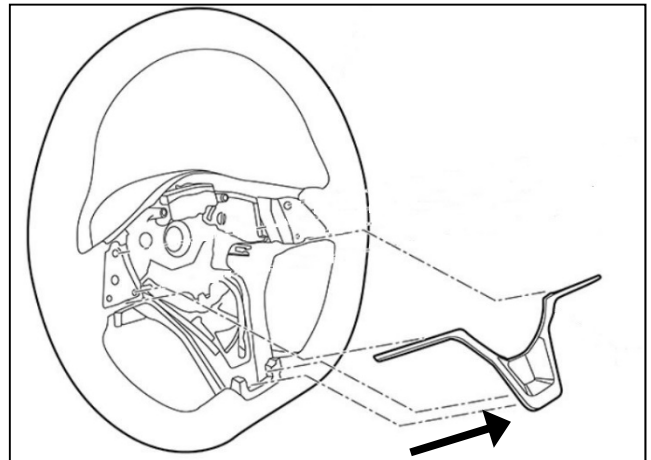


Figure 4

4. Carefully pull the outer ends of the chrome finisher toward the center of the steering wheel to release the 2 outer pawls.

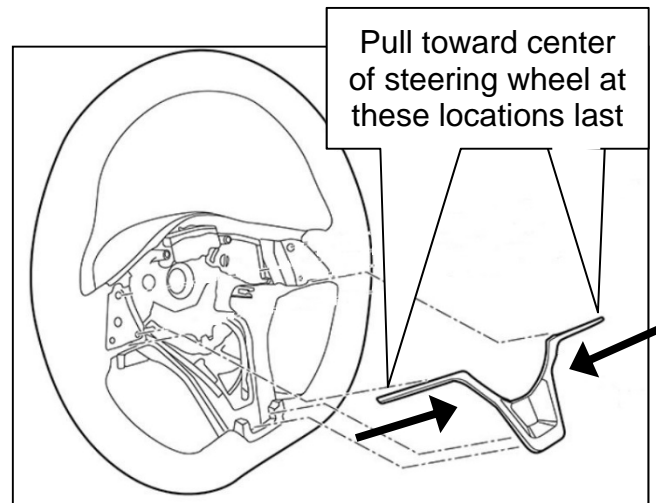


Figure 5

5. Using the new chrome finisher listed in **PARTS INFORMATION**, carefully pull the outer ends of the chrome finisher toward the center of the steering wheel, and then guide the 2 outer pawls into position on the steering wheel.

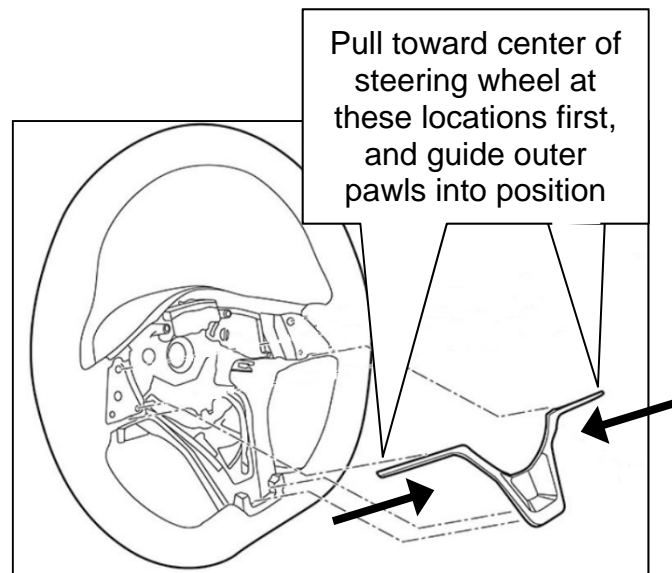


Figure 6

6. Push the lower portion of the chrome finisher toward the steering wheel to engage the 2 lower pawls.

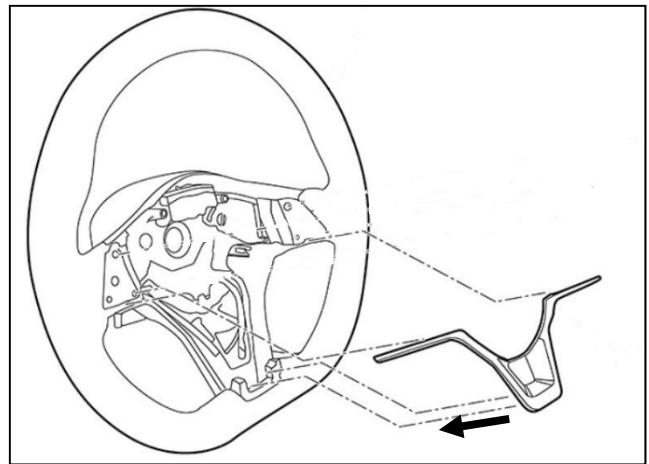


Figure 7

7. Push the center portion of the chrome finisher toward the center of the steering wheel to engage the 2 center pawls.

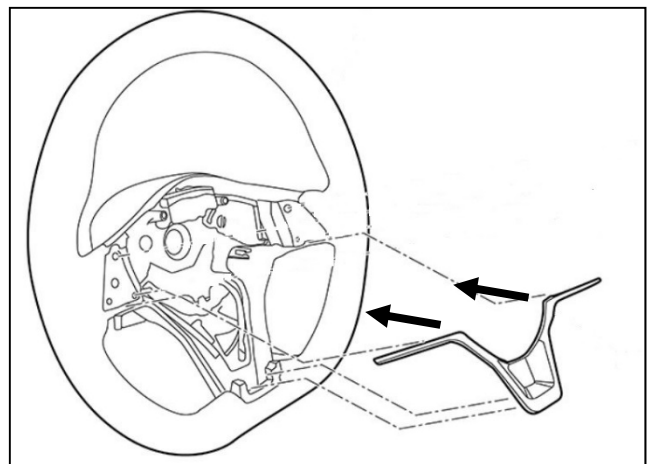


Figure 8

8. Install the driver side air bag module.
 - For installation of the driver side air bag module, refer to the Electronic Service Manual (ESM), section **REPAIR – RESTRAINTS – SRS AIRBAG – REMOVAL AND INSTALLATION – DRIVER AIR BAG MODULE.**

PARTS INFORMATION

DESCRIPTION	PART NUMBER	QUANTITY
LID STRG, LWR (Steering Wheel Chrome Finisher)	48467-5SW0A	1

CLAIMS INFORMATION

Submit a Primary Part (PP) type line claim using the following claims coding:

DESCRIPTION	PFP	OP CODE	SYM	DIA	FRT
Replace Steering Wheel Chrome Finisher	(1)	QX43AA	ZE	32	0.4 hrs

- (1) Reference the Parts Information table above and use the Steering Wheel Chrome Finisher as the Primary Failed Part (PFP).

AMENDMENT HISTORY

PUBLISHED DATE	REFERENCE	DESCRIPTION
April 26, 2021	NTB21-035	Original bulletin published

