




Leese Neville Alternator Stud Cable Arrangement



> Internal Content

For Volvo and Mack trucks equipped with the Leese Neville Alternator and an engine pre-heater, the arrangement of the cables may result in not having full engagement of the fastening nut on the mounting stud.

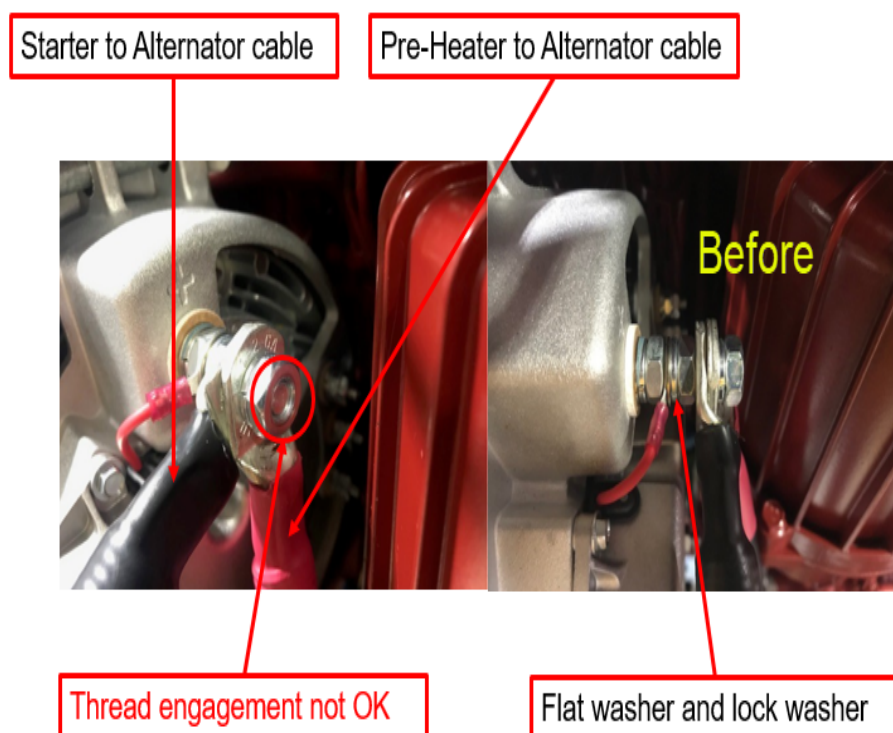

Recommended Repair



Remove the lock washer and flat washer seen below.

Ensure Starter to Alternator cable (Bottom cable. Keep it away from the alternator housing.) is spaced away from the alternator housing.

Stack-up on Alternator terminal (After with pre-heater cables)

Remove flat washer and lock washer from middle assembly keeping the rest of the hardware and torque the same.

Thread engagement OK

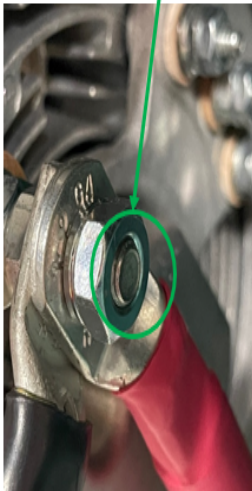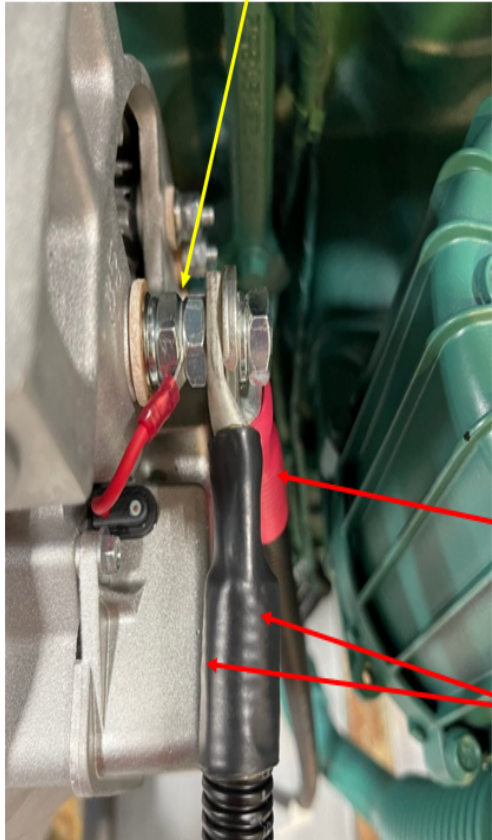

Pre-Heater to Alternator cable (top cable)

Starter to Alternator cable (bottom cable keep it away from Alternator housing)



Tags

mack

volvo

alternator

cable

Live UI

Related links and attachments

No links or attachments available



Feedback

[Give feedback](#)

to help improve the content of this article