



Importing A Template Into Premium Tech Tool (PTT) For Sensor And Parameter Values Recordings; eService Request For Data - US10+OBD13 And Newer Emissions (Vehicles With A Sixteen Pin Diagnostic Connector)



> Internal Content



Begin by down loading the applicable template for the chassis from the CBR solutions below.

For US10+OBD13 - US14+OBD16 chassis refer to section I in CBR solution CBR-864.


For US17+OBD16 - Current chassis refer to section I in CBR solution CBR-862.

To Import the Template, go to the Test tab and run Operation [1700-08-03- 06, Sensor and Parameter Values, Monitoring](#).


1. From the "Available Signals" screen, select Templates and then "Open"

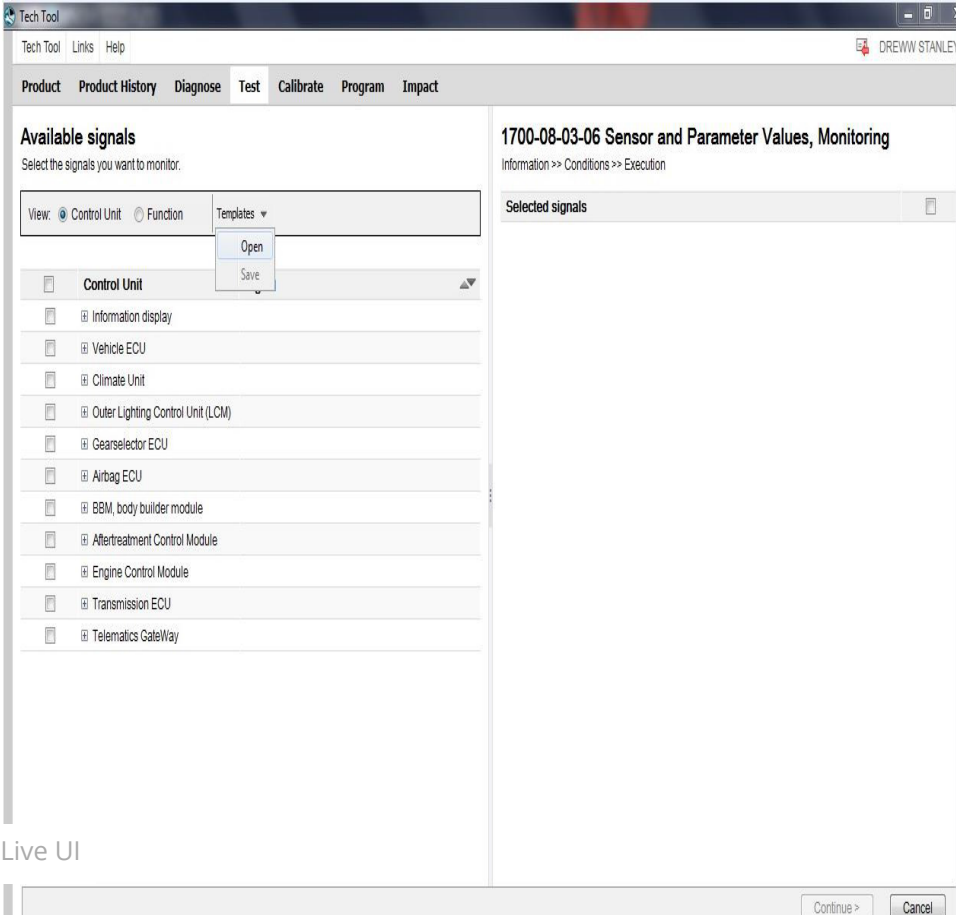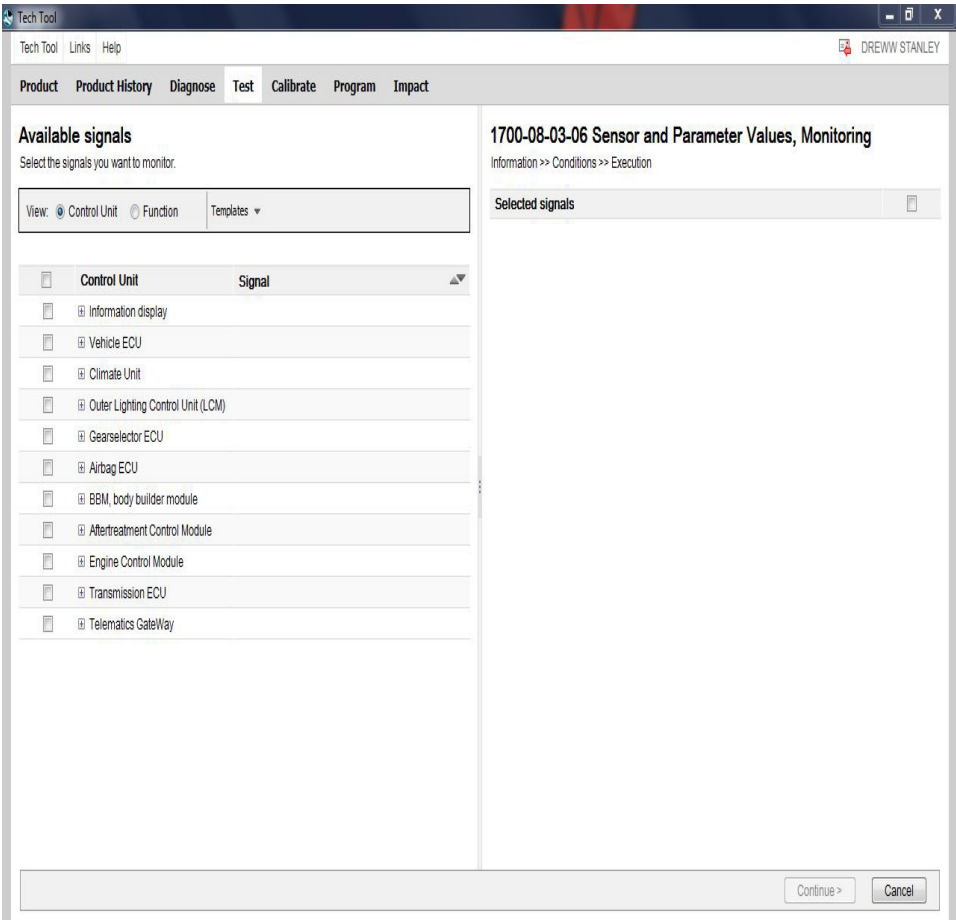

2. After selecting Open, navigate to the folder where OBD SENSORS_TRANS_GEAR_ADDED.xml is saved. Select the template, then click Load Template File.

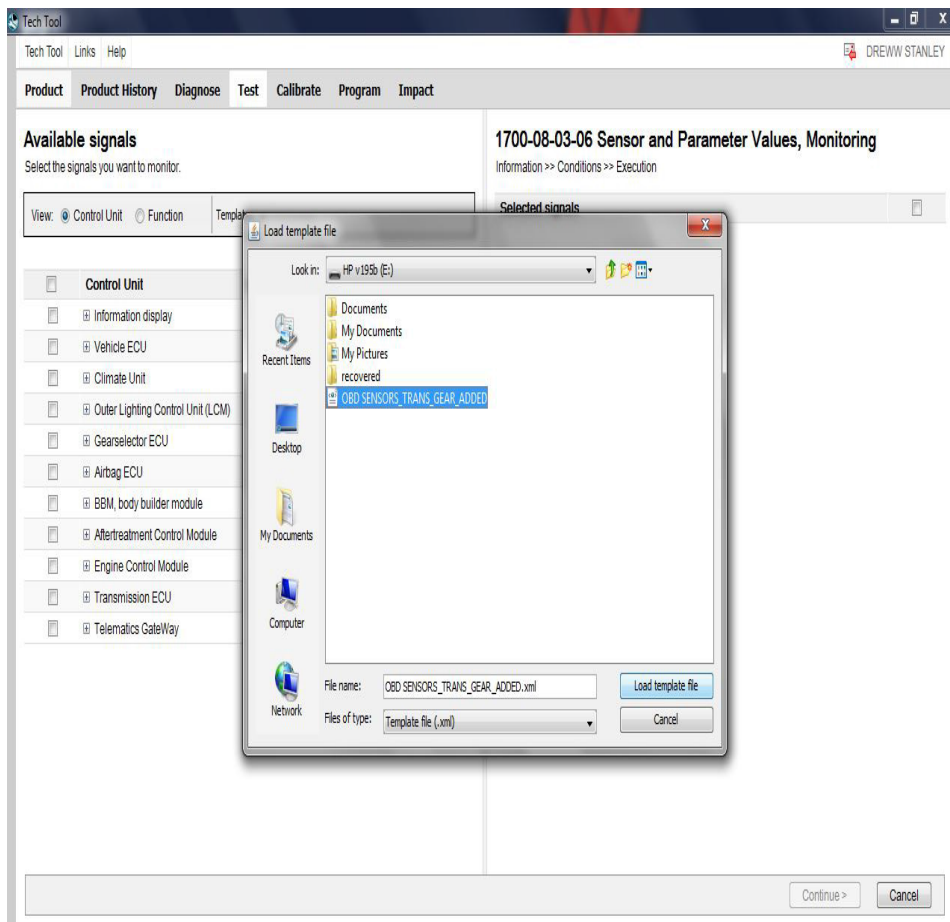

3. After loading the template file the parameters to be selected will be on the right hand portion of the screen.

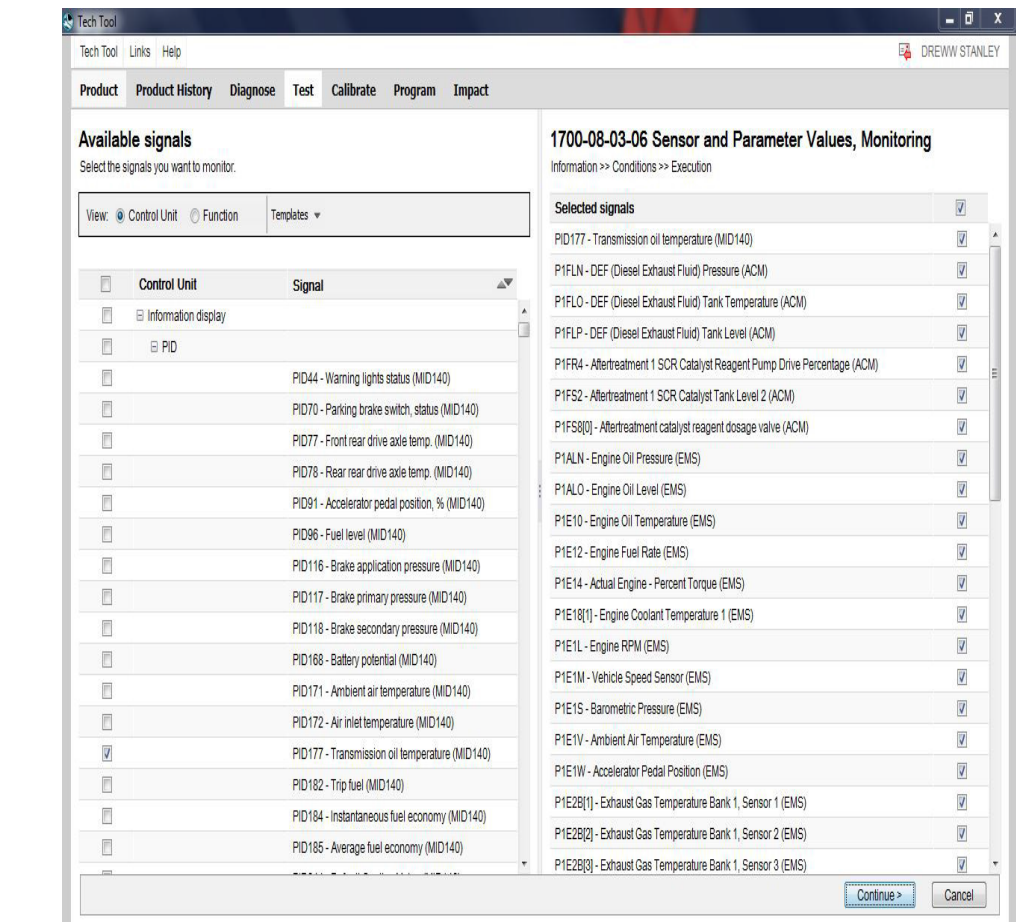

- 4. Click continue and proceed to record data as normal.
- 5. Instructions for extracting the sensor monitoring data can be found in CBR solution CBR-245.



Tags

[volvo](#)

[mack](#)

[k23073251](#)

Related links and attachments

No links or attachments available



Feedback

[Give feedback](#)

to help improve the content of this article



Live UI



Road Test Data Files And Regeneration Data Files / CSV File Extraction (Windows 7 And 8); Locating And Extracting Premium Tech Tool (PTT) Data Files; Locating Hidden PTT Folders




> Internal Content


Locating and Extracting Excel CSV Files from Hidden Tech Tool Folders


Windows 7 and Windows 8


Extracting CSV Files from Hidden Tech Tool Folders (csv: comma separated values)


Windows 7

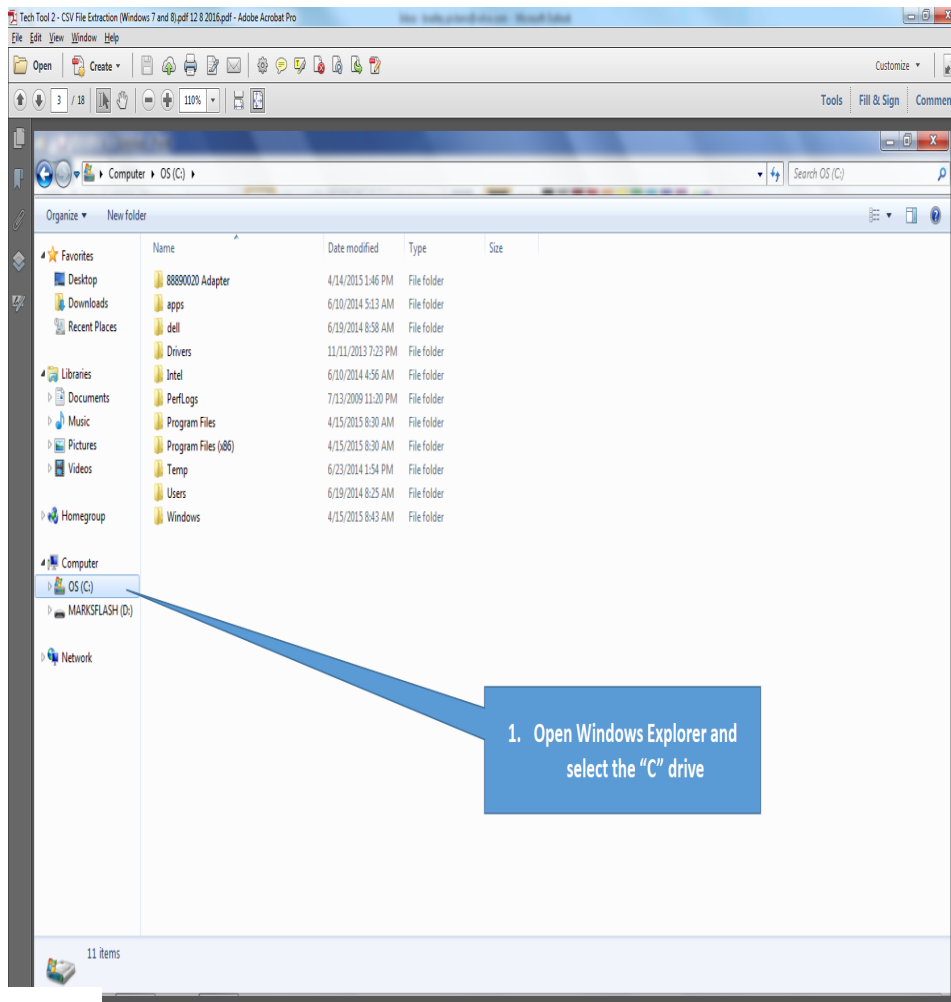


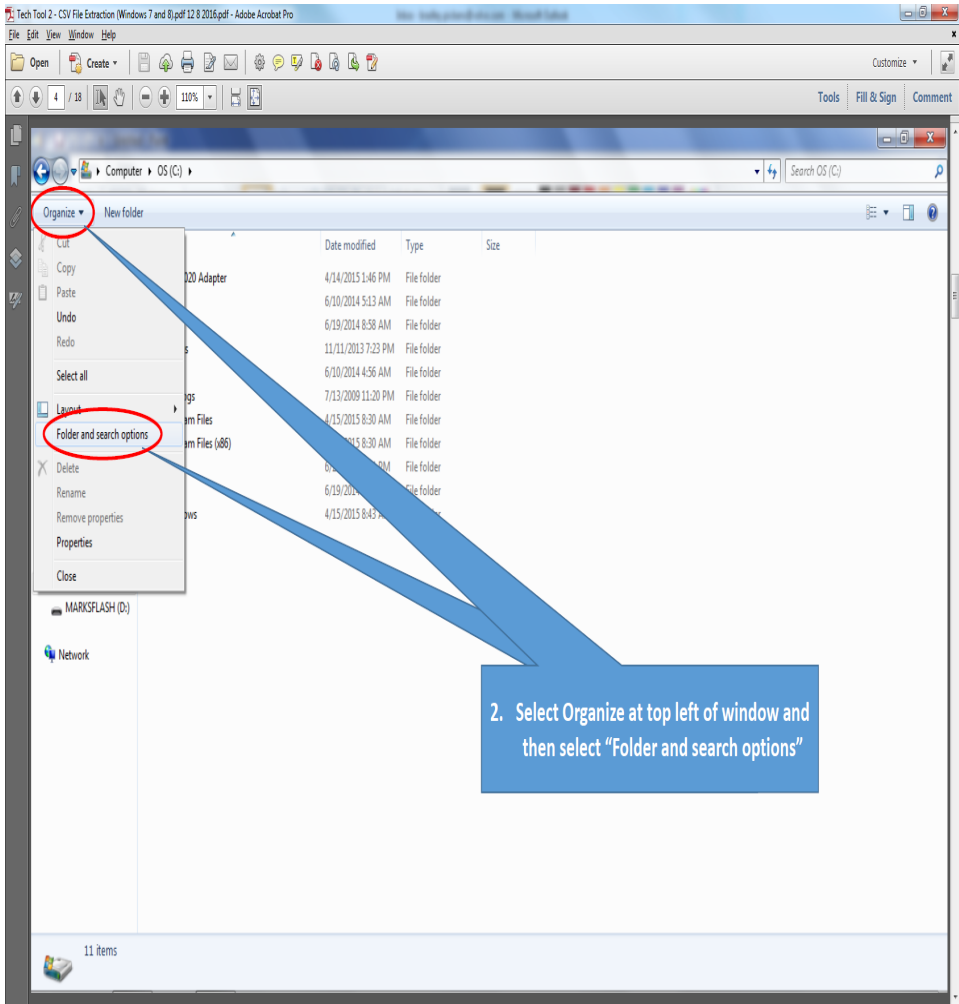


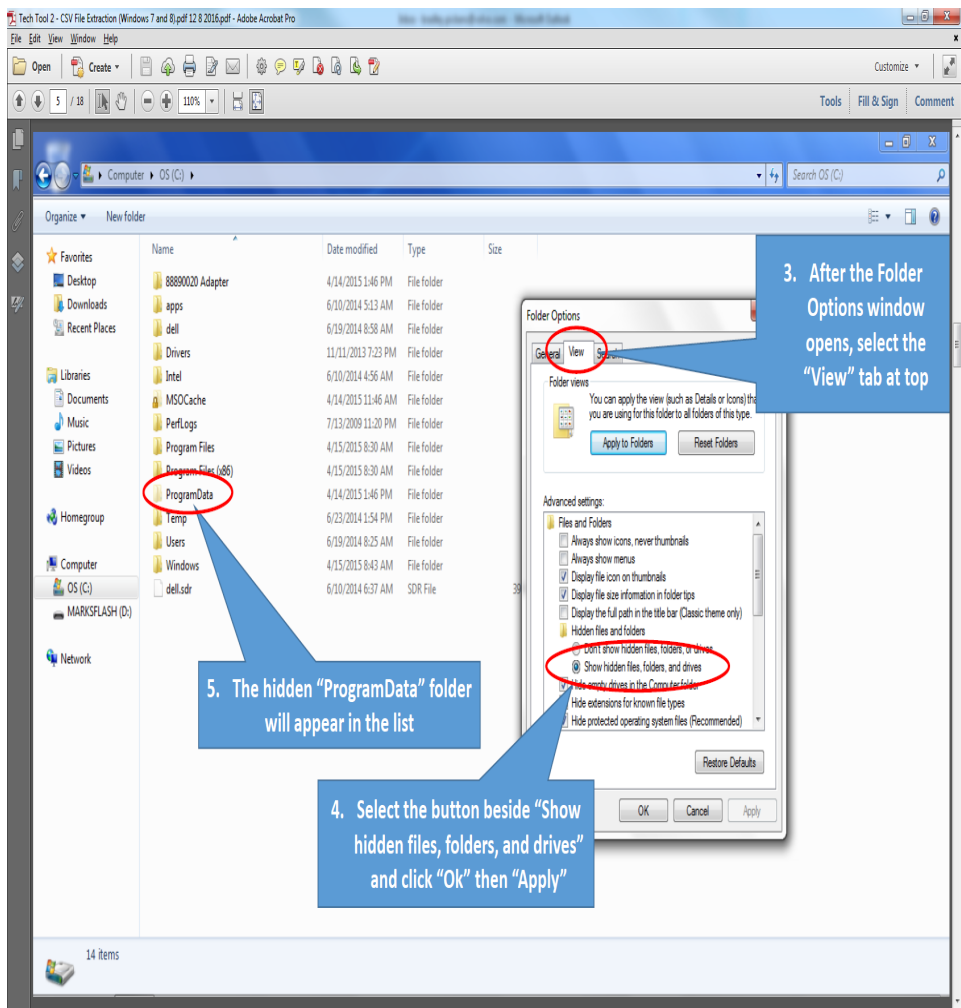


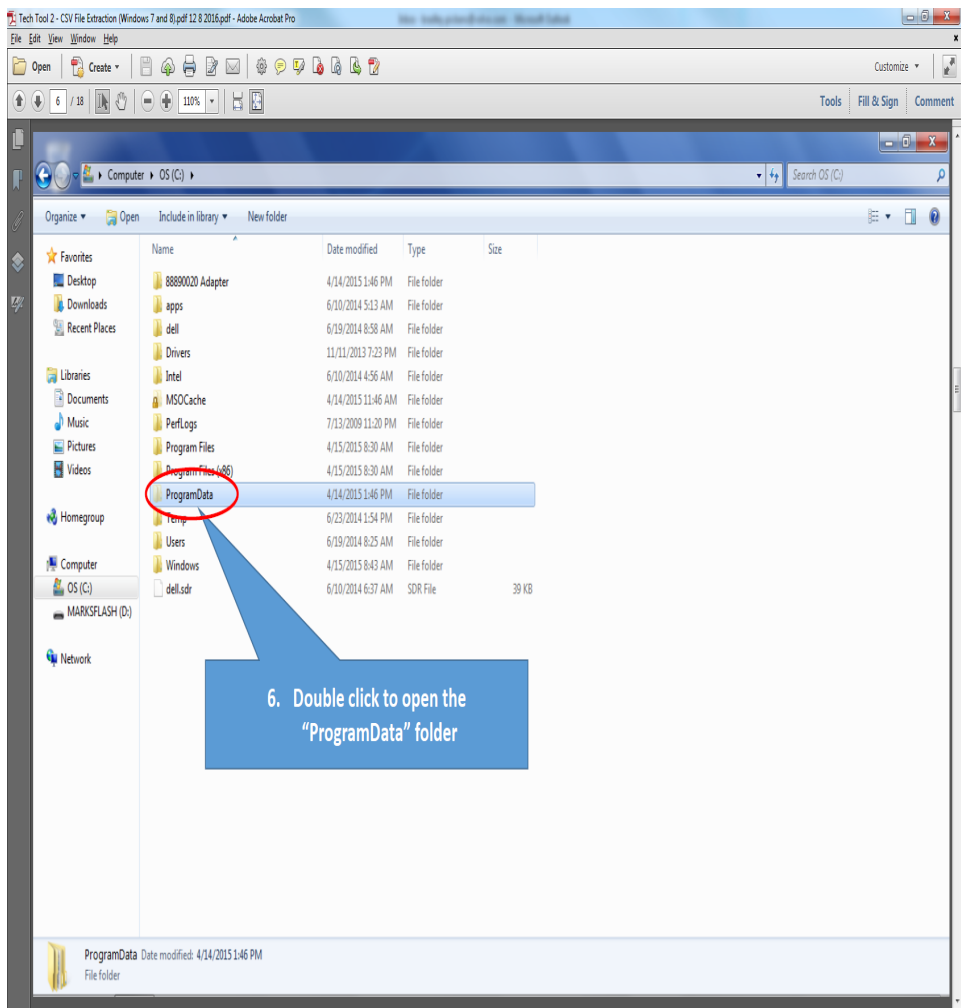

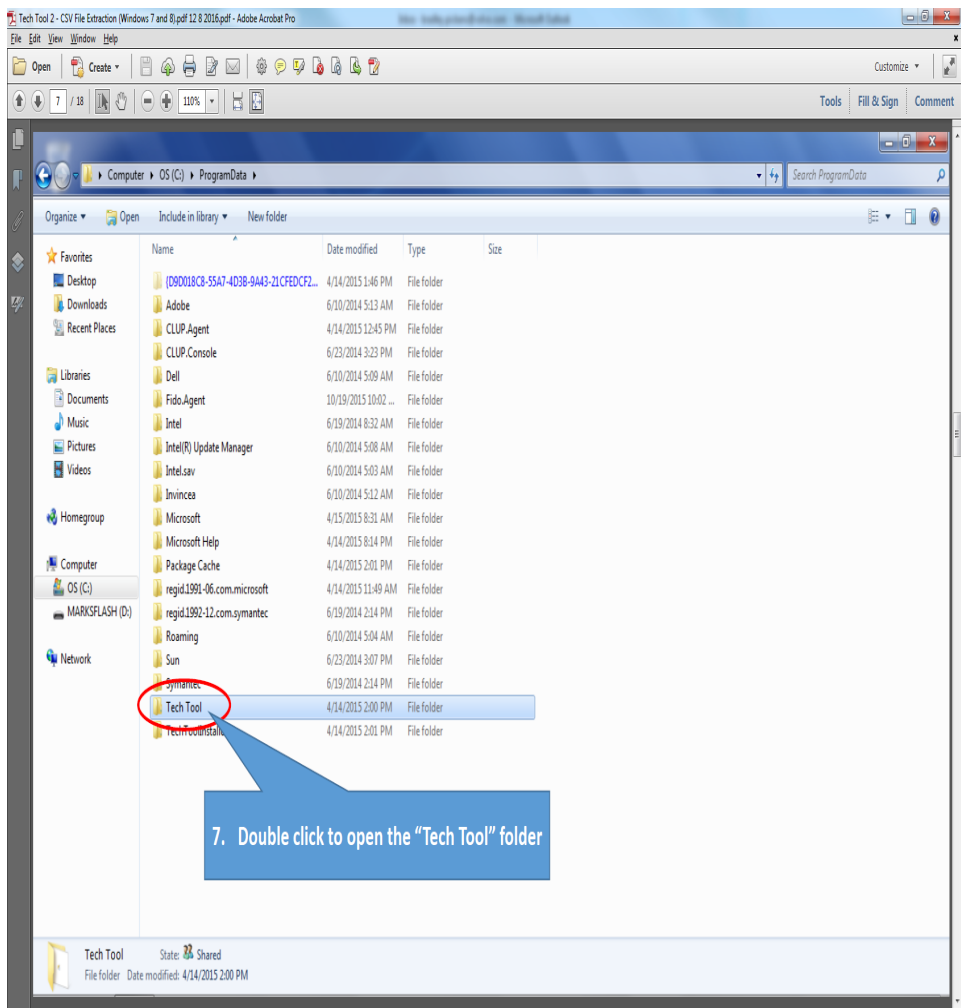


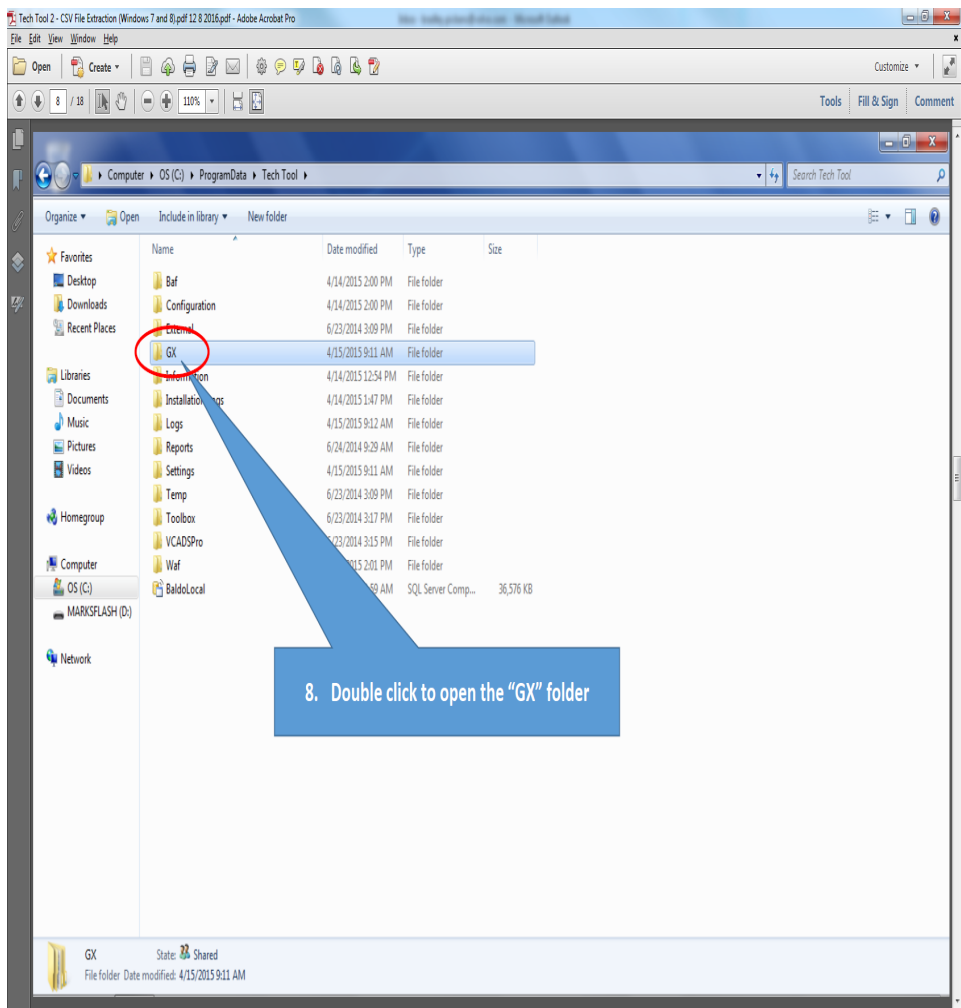


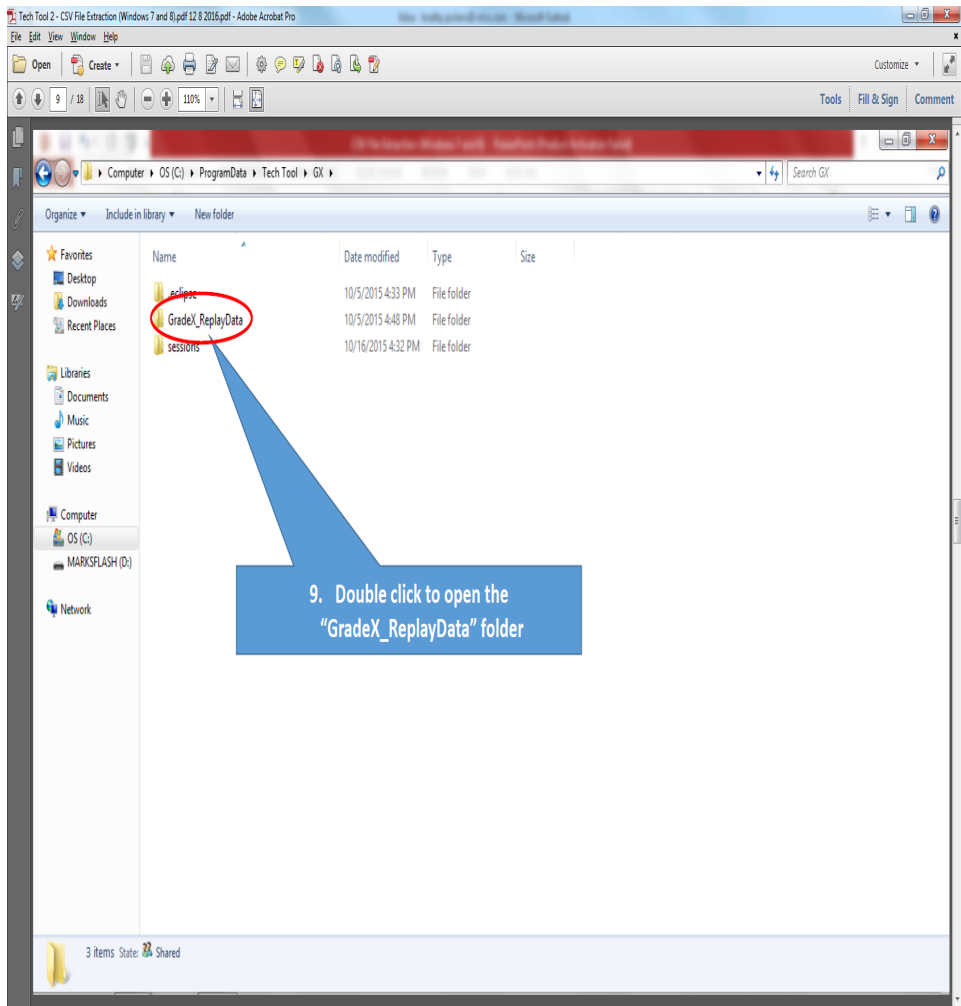


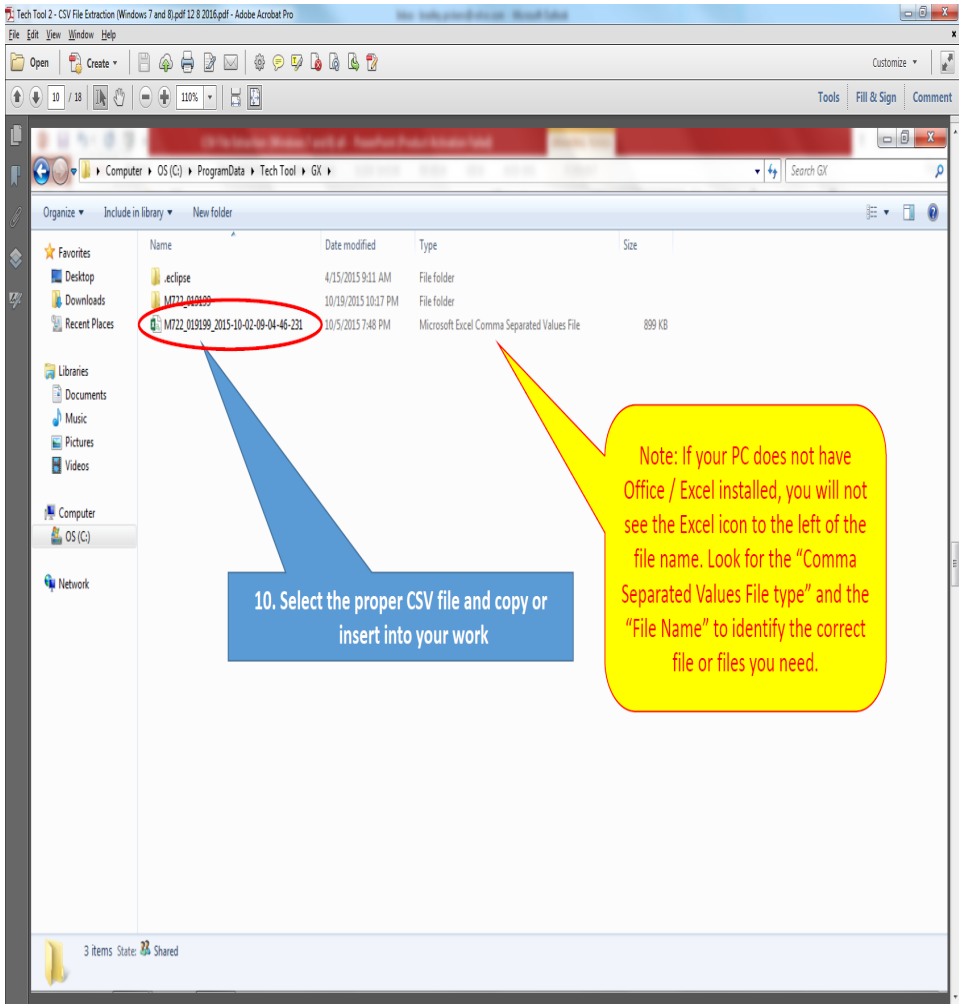



Windows 8

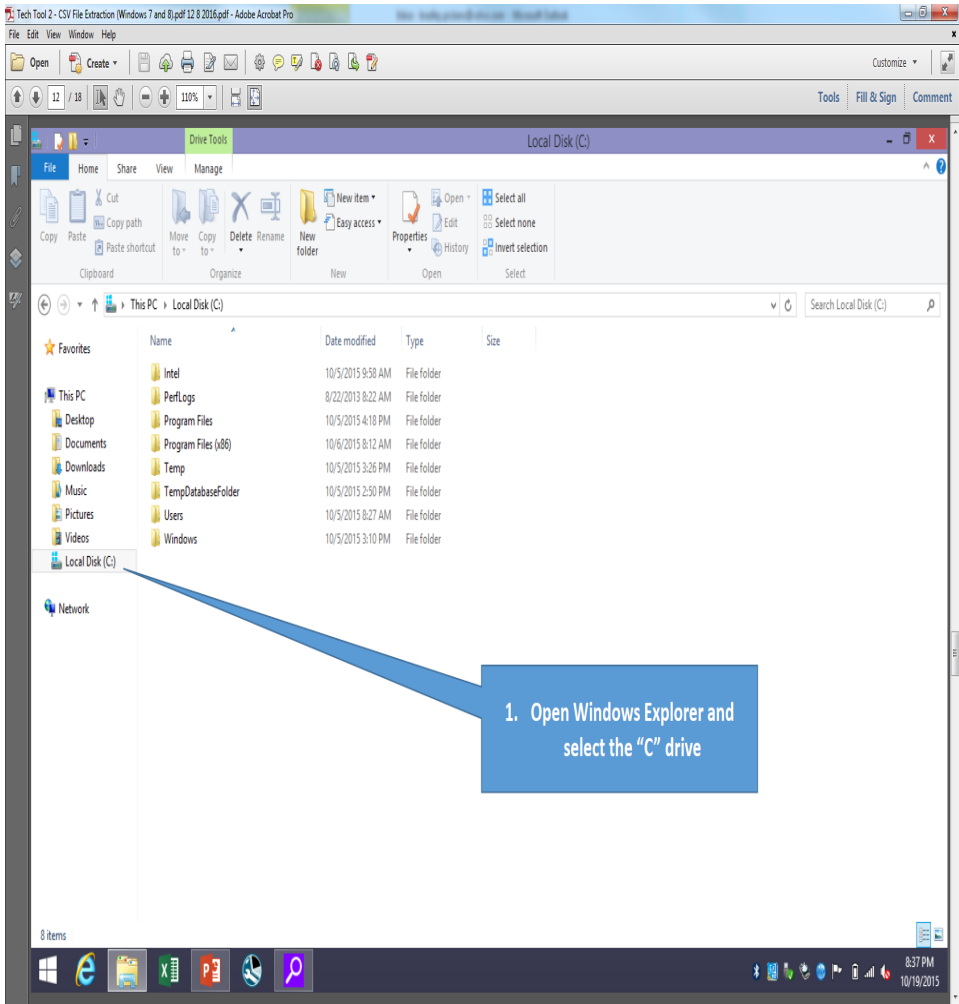


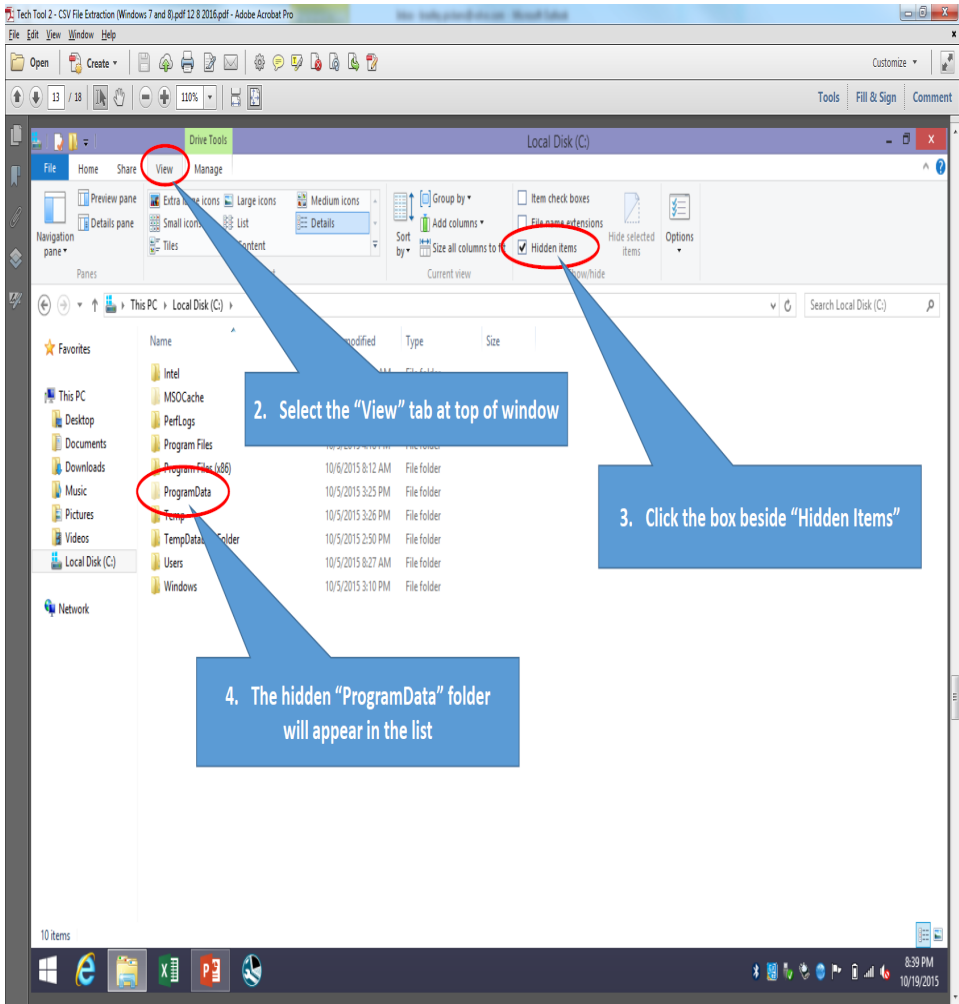


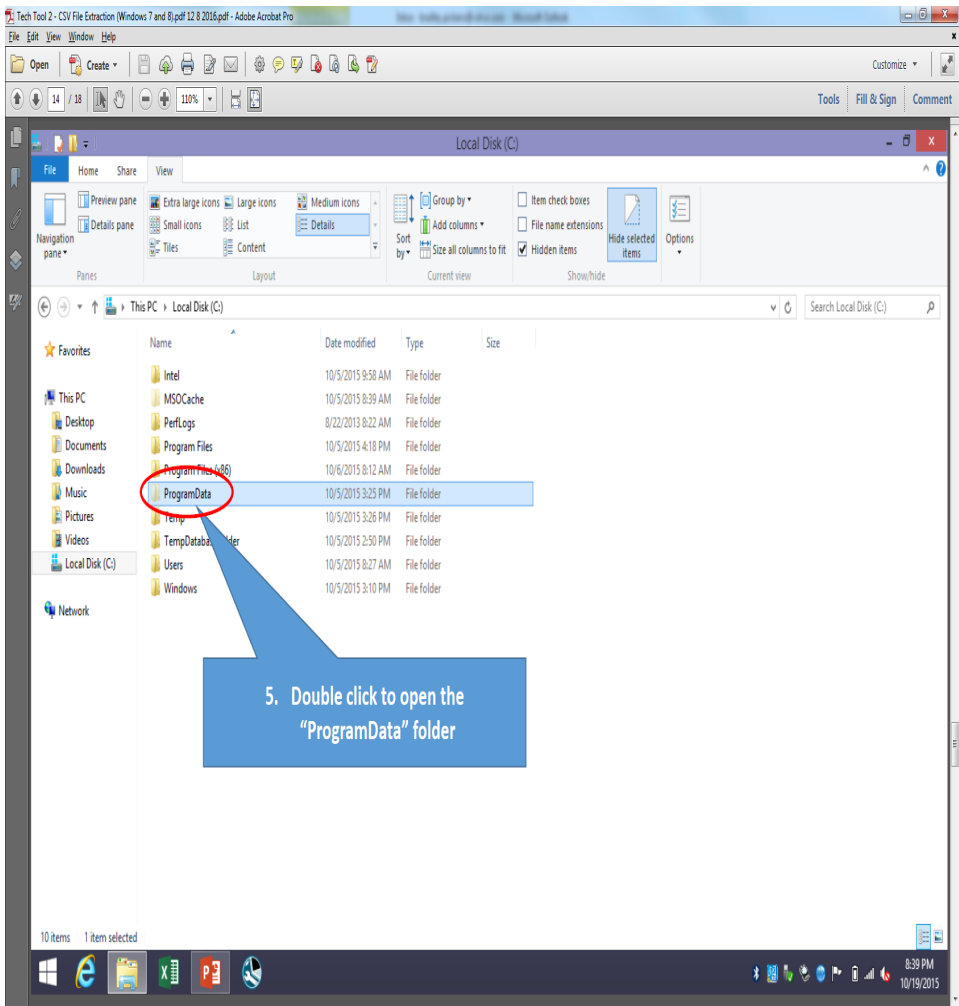

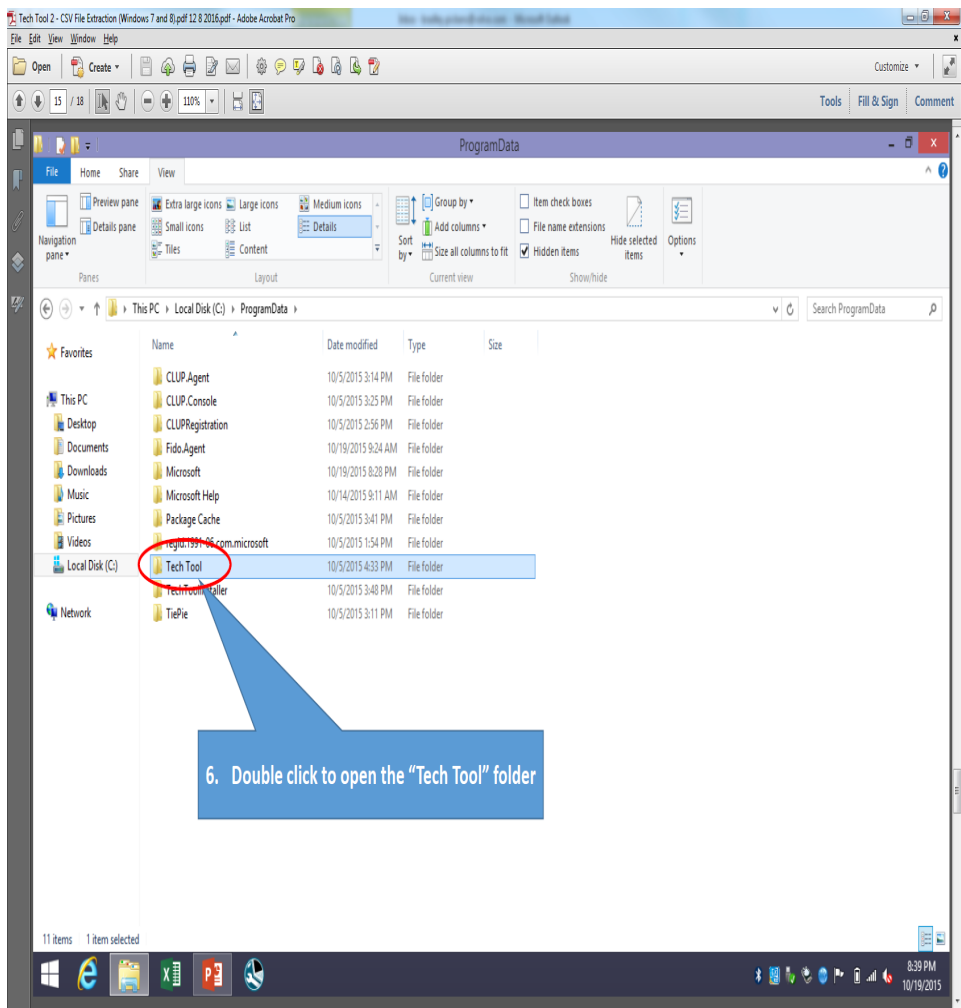

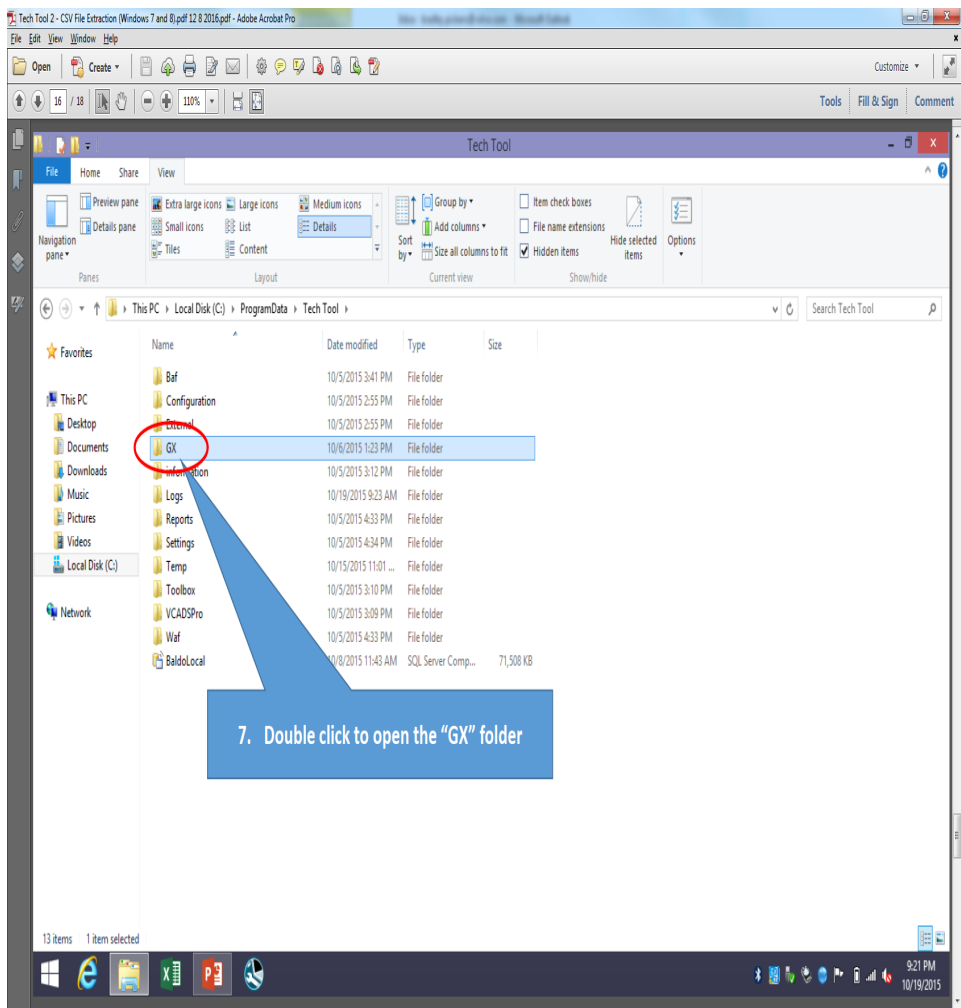

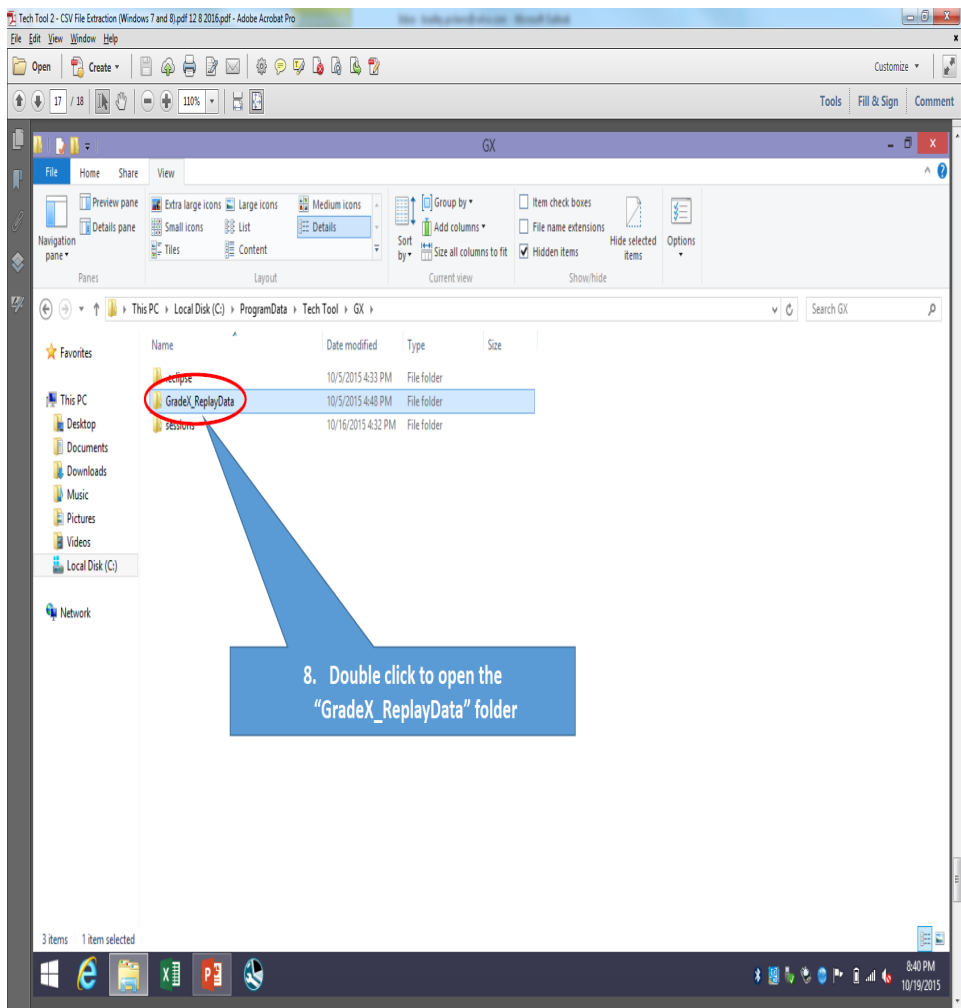

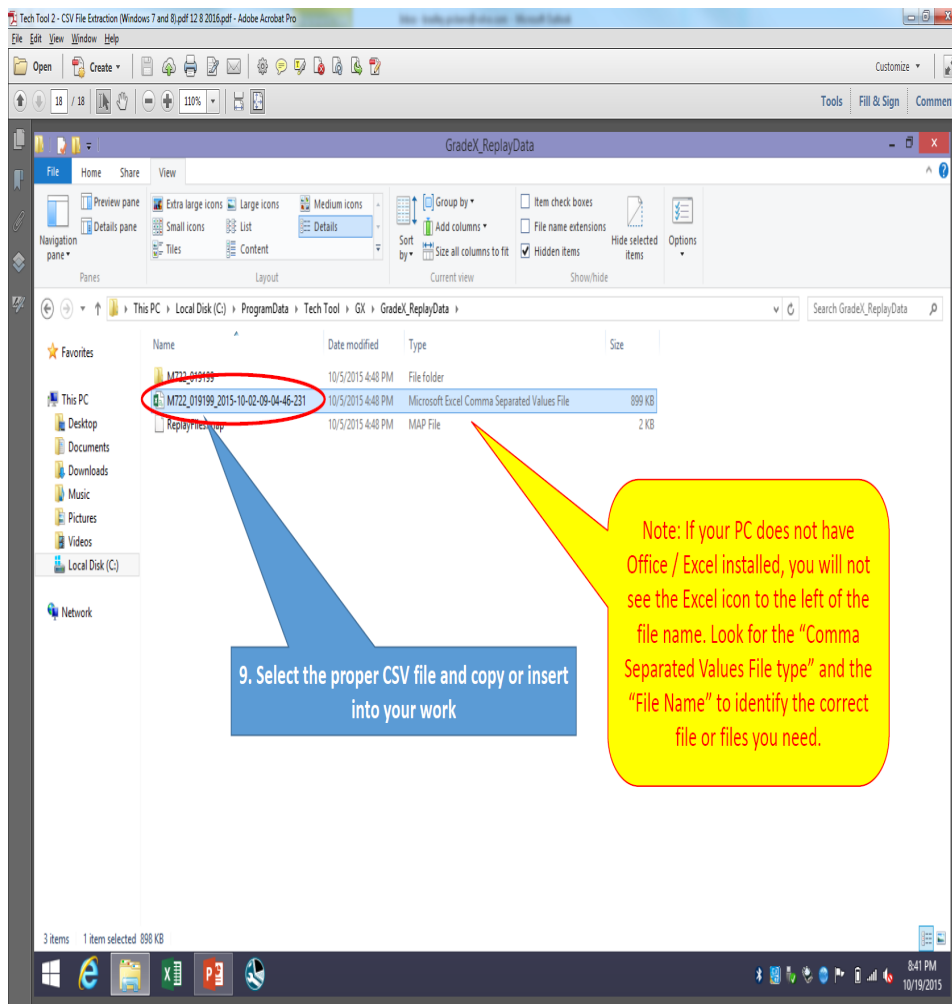

NOTE: Please refer to CBR Solution Number CBR-270 for steps to import a template to monitor sensor and parameter values.



Tags

[mack](#)

[k39227888](#)

[volvo](#)

Related links and attachments

No links or attachments available



Feedback

[Give feedback](#)

to help improve the content of this article