



Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. • 302 Portage Avenue • Saskatoon • SK • S7J 4C6

Rekon 4x4 Exterior Shower Winterize Kit Install

TSB 2021-11-01

1. CONTENTS

1. CONTENTS
2. INTRODUCTION
3. TOOLS
4. PARTS
5. INSTALLATION



Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. • 302 Portage Avenue • Saskatoon • SK • S7J 4C6

2. INTRODUCTION

This manual will instruct how to install the new exterior shower winterizing kit on the Pleasure-Way Rekon 4x4. Included in this document is a list of tools required, as well as instruction with pictures to help with the installation.

The time allotted is 1.5 hours.



Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. • 302 Portage Avenue • Saskatoon • SK • S7J 4C6

3.TOOLS



1. Knife
2. #2 or #8 Robertson screwdriver
3. #1 or #6 Robertson screwdriver
4. Phillips screwdriver
5. Small flat screwdriver
6. Pipe cutter
7. ½" Crimp ring pliers



Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. • 302 Portage Avenue • Saskatoon • SK • S7J 4C6

#4 PARTS



1. Replacement lower panel with access door
2. Hot and Cold Valve Lines
3. Valve mounting plate
4. ½" pipe clamps
5. #2 or #8 - 5/8" Robertson screws
6. Pipe caps
7. L- brackets
8. #1 or #6 - 1 ¾" Wood screw (to secure RH side of mounting plate)
9. ½" Crimp rings



Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. • 302 Portage Avenue • Saskatoon • SK • S7J 4C6


5. Installation

Start by moving the driver's seat as far forward as possible to allow for the easiest access for the installation.


Remove Table



Remove Upper Panel

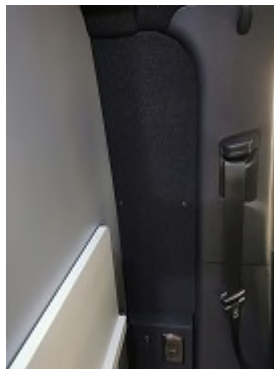

Remove Outlet Faceplate

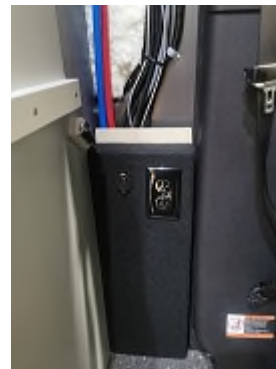

**Remove Outlet Box
Mounting Screws**



Remove Outlet Box



**Remove Bottom Screws
and Panel**





Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. • 302 Portage Avenue • Saskatoon • SK • S7J 4C6


**Disconnect USB
(Top Wire Red Stripe)**





**Transfer USB to
New Lower Panel**



**Disconnect fittings from Shower
cap lines and twist out of the way**

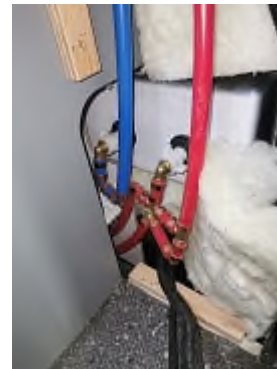

Install L-brackets on valve mounting plate. Install Valve Mounting 10.5" above floor. Make sure USB and outlet wires above it

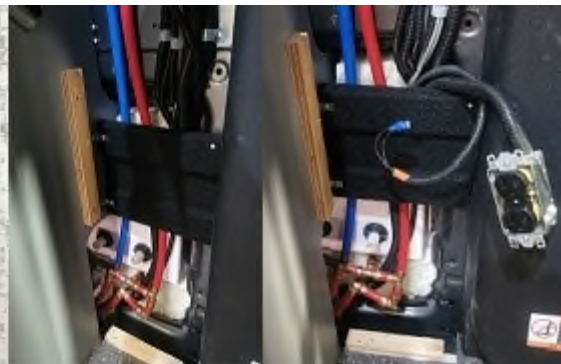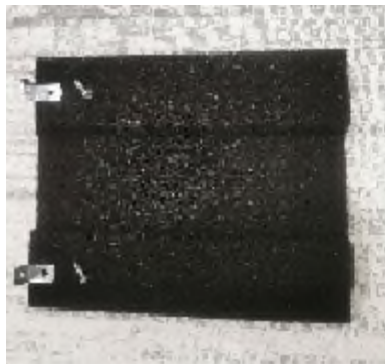

Attach new Valve Lines to shower



Pleasure-Way


phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. • 302 Portage Avenue • Saskatoon • SK • S7J 4C6


**Mark pipe where
Brass T will insert**




**Line up Brass T
Mark upper pipe**

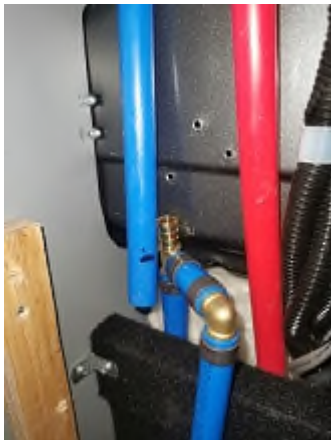

**Cut just above
mark on pipe**

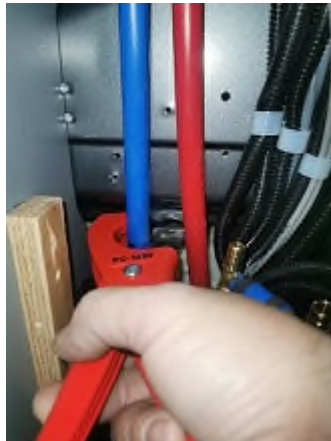



Cut just below mark

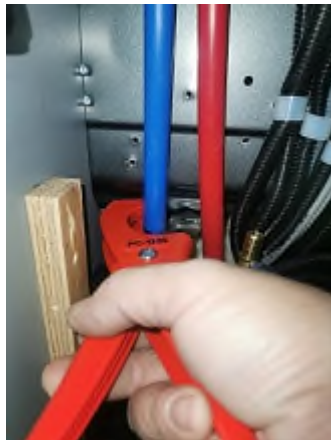

**Install crimp ring and Brass T
and crimp**



**Crimp upper pipe and
secure to wall**

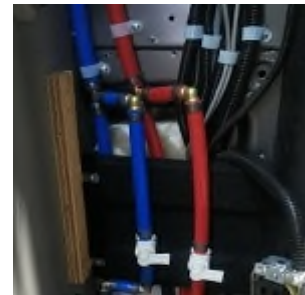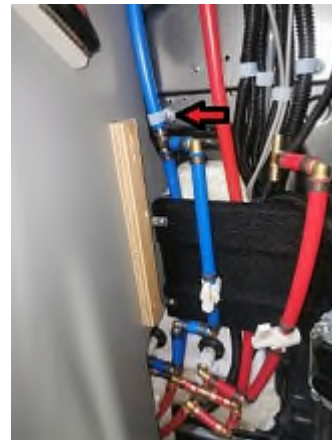

Repeat above page with Hot Line (red pipe).




Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. • 302 Portage Avenue • Saskatoon • SK • S7J 4C6

**Secure valves to mounting plate
Clamp above and below valve**

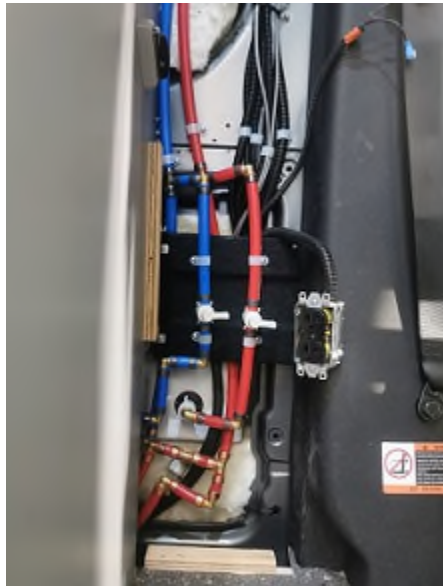

**Pressure test water system for leaks before
putting panels and electrical back together**

