



Volvo I-Shift AMT Will Not Calibrate After Incorrect Flywheel Housing Is Installed



> Internal Content

Confirm that the correct flywheel housing part number is installed. Refer to the (**D13**) Engine related Technical Parts Information ([TPI](#)) [262 - 018](#) Coolant Line Bracket



Tags [k32082107](#) [volvo](#) [tpi 262-018](#)

Related links and attachments

[TPI 262-018](#)




Feedback

[Give feedback](#)

to help improve the content of this article

TPI 262-018, Coolant Line Bracket

When transferring transmission coolant line bracket (part number 20567404) during flywheel housing replacement, use studded flange screw (part number 20714050), flat washer (part number 3083887) and flange locknut (part number 990950) to mount the bracket to the flywheel housing in the correct angle and clearance.

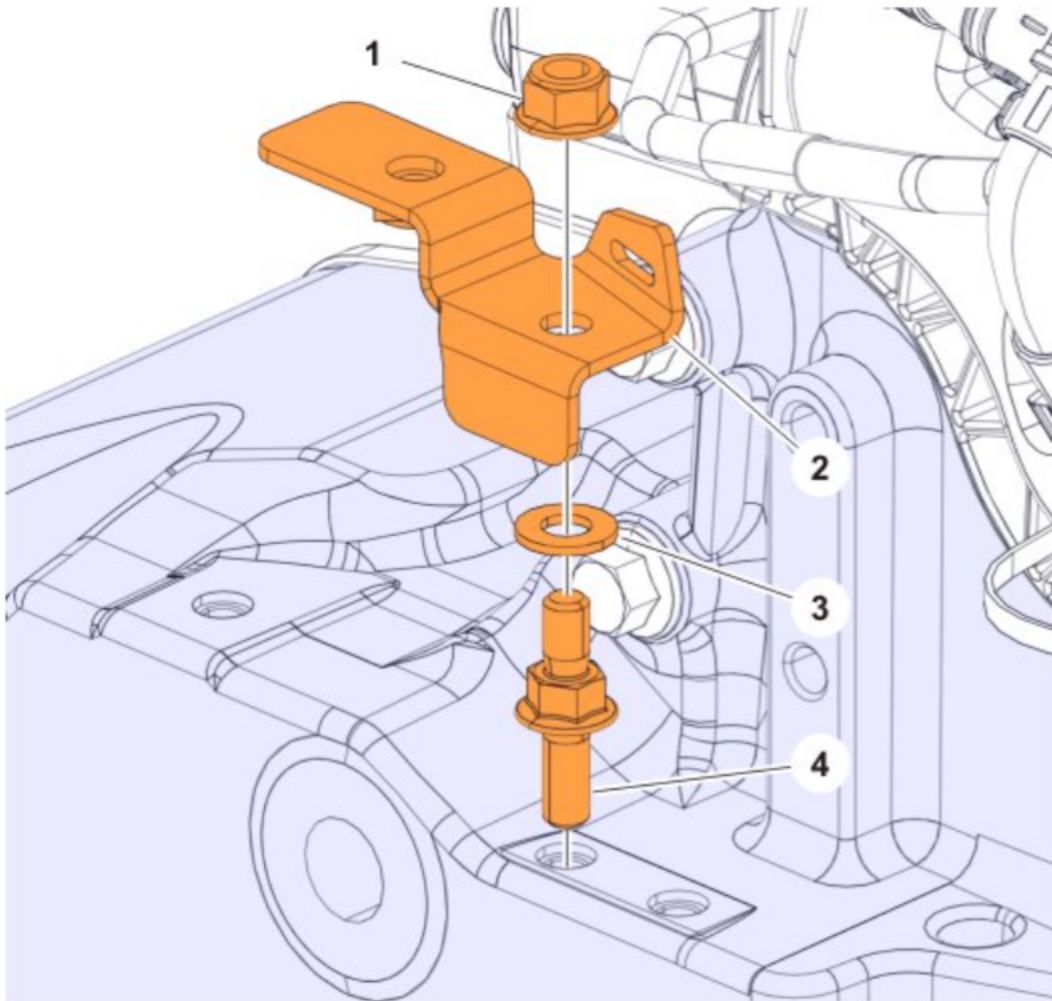

1. Lock nut
2. Bracket
3. Washer
4. Flange screw

- Install the flange screw in the flywheel housing and tighten to 24 ± 4 Nm (18 ± 3 ft-lb). Place the flat washer on the flange screw.
- Place the bracket over the flange screw, secure with flange locknut and tighten to 24 ± 4 Nm (18 ± 3 ft-lb).