8K MID/REAR JACK REPLACEMENT, ORIGINAL (8 HOLES) VS. CURRENT (7 HOLES)

QR-146

LEVELING AND STABILIZATION

Purpose

This document compares the differences between the original eight-hole 8K jacks and the current seven-hole 8K jacks and lists procedures to ensure proper installation of the current jacks. The current jack is also an inch shorter in height.

Procedures

1. Before removing the original jack, note the location of the mounting holes on the jack and the mounting bracket (Fig. 1).

NOTE: Count the number of mounting holes from the first bolt to the bottom of the jack.

2. Measure the distance from the ground to the footpad of the retracted jack (Fig. 1).
3. Remove original jack.
4. To install current jack, match the number of mounting holes from the first bolt to the bottom of the jack (Fig. 2).
5. Put current jack in place and install bolts in the same location based on the number of mounting holes to the bottom of jack.
6. Measure distance from footpad to the ground to verify installation is correct (Fig. 2).

Fig. 1


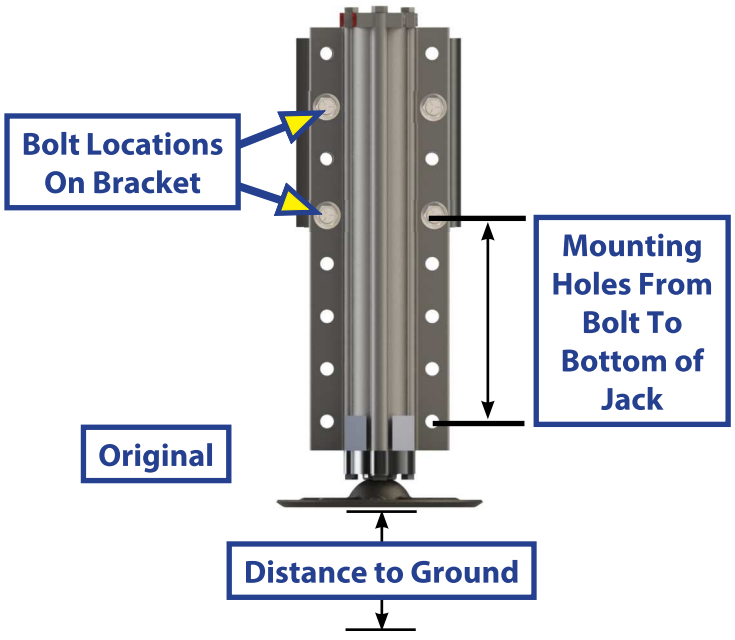


Fig. 2

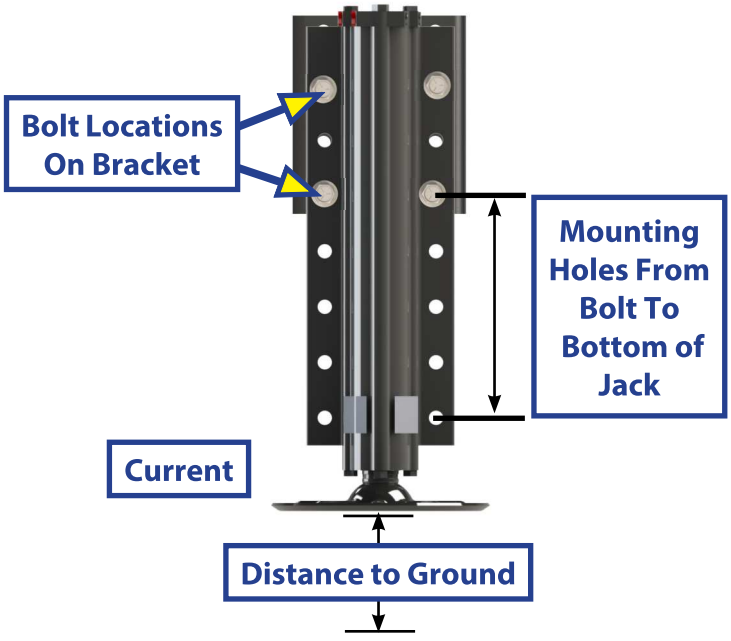

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at 432-LIPPERT (432-547-7378) or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lippert.com or by downloading the LippertNOW app.