


Notes:

1. Monitor Panel wire to rear tank only
2. Probe Rear Tank Only
3. City Water Fill Attached To Front Tank Only
4. Water Pump Attached To Front Tank Only
5. Water should fill evenly between both tanks
6. Plug all unused fitting locations
7. Low Point Drains should be 1-1/2" with pull valve.

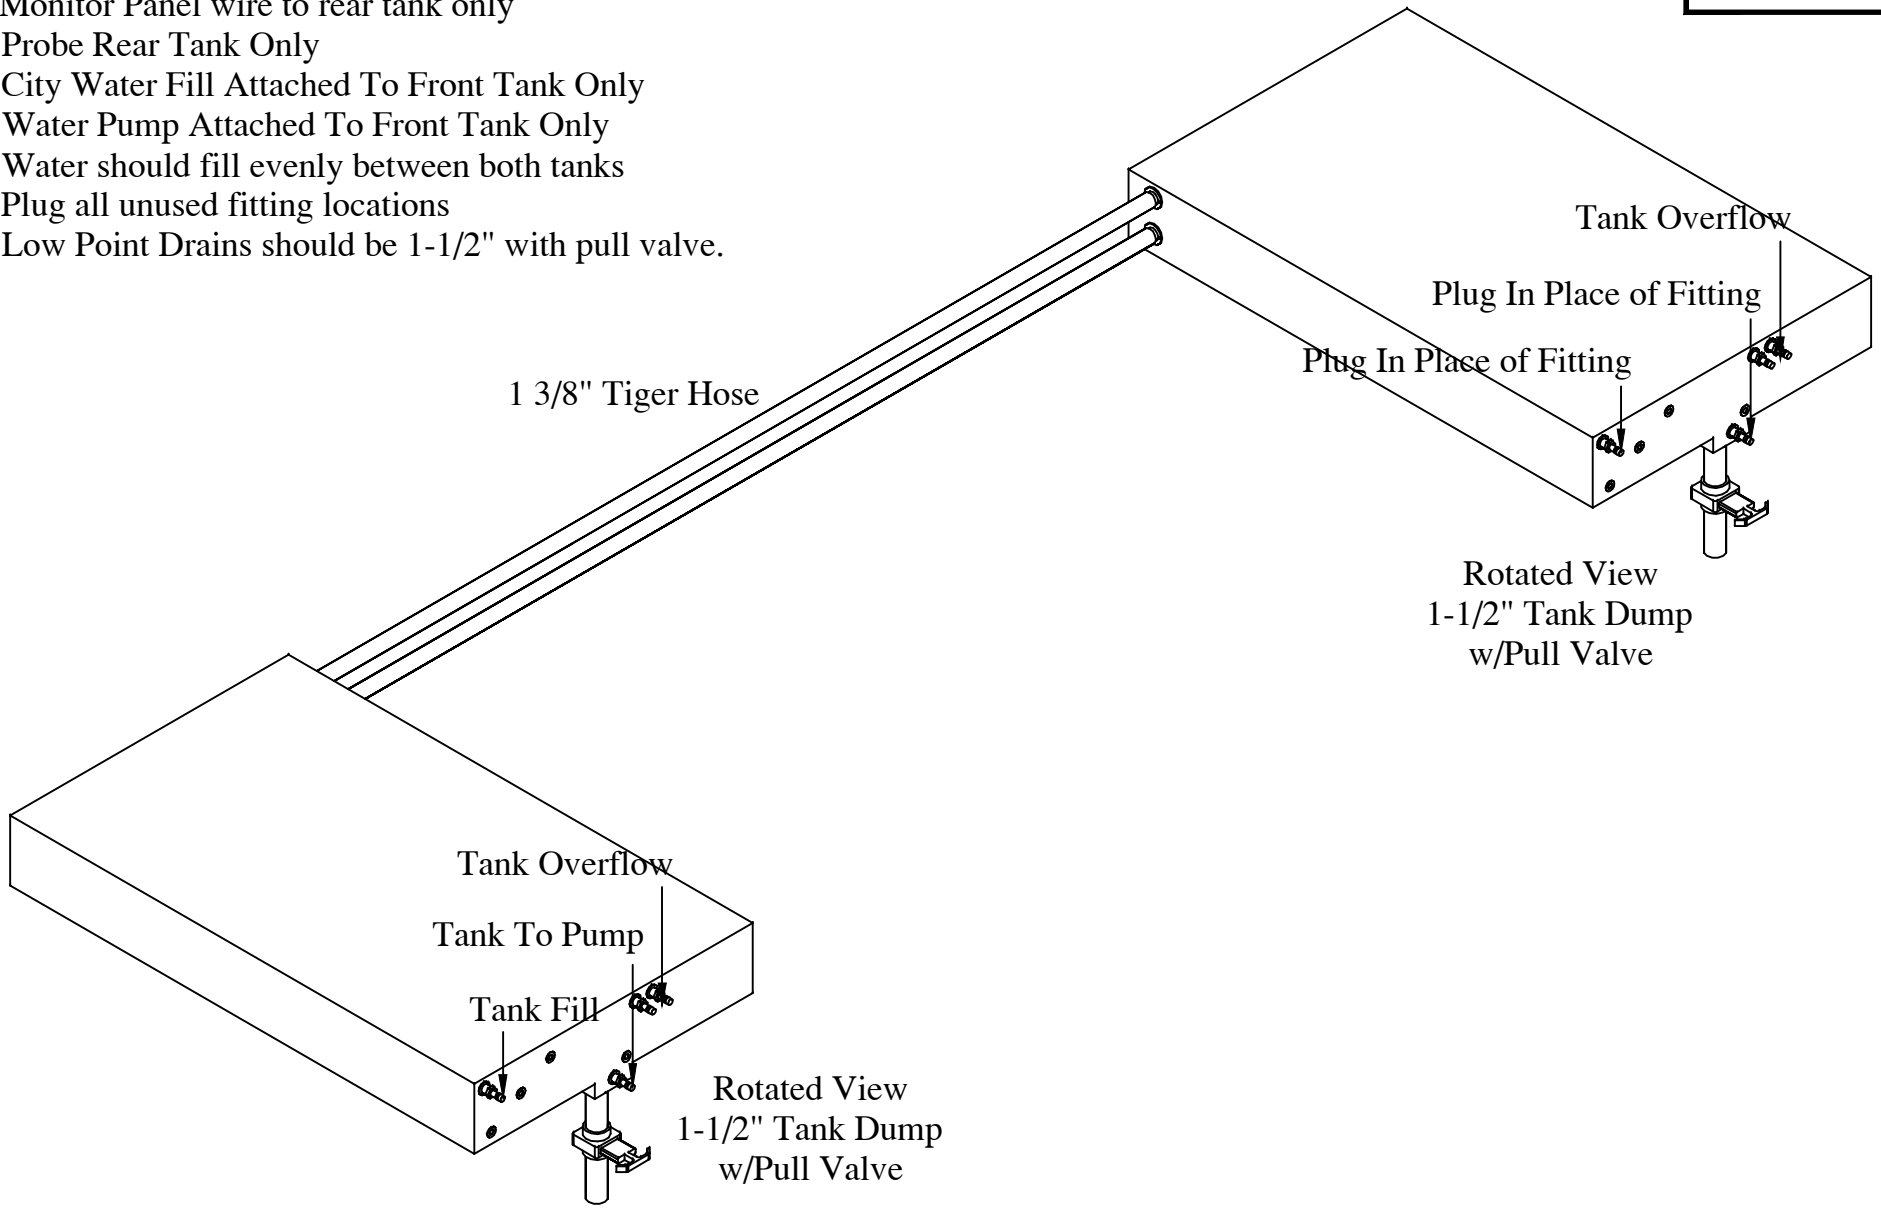

East to West RV claims exclusive rights to the information documented herein. Manufacture of material shown in part or full is prohibited without the written consent from East to West RV.

TOLERANCES: UNLESS OTHERWISE STATED
DIMS ARE IN INCHES
.X = ± .1 FRACTIONS = ± 1/16
.XX = ± .01 ANGLES = ± .1°

Rev	Description	Date	ECN#
A	Released For Production	10/05/22	
B	Revised, Tanks To Take 1-1/2" Tank Drain	02/20/23	

Title:	<i>Fresh Tank Layout Potable Water</i>
Model Usage:	<i>Alta: 2400KTH</i>
File No.	.

Date:	<i>10/05/22</i>
Drawn By:	<i>BCW</i>
Sheet:	<i>1 of 1</i>
Drawing No.	06-00100

