

Adjustment Screw: Black – for tension (or if wont extend), Grey – where the shade will stop when rolling


1. You will need to look upward and look at the tip of the two stainless brackets.

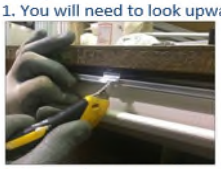

2. Using a flat screw driver or butter knife, pry off the shade from the two brackets from left and right side of the shade (picture above).
3. Once the shade falls off, lift the back part of the shade to remove it completely.

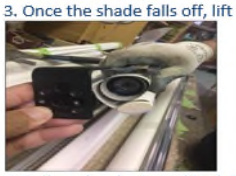

4. Roll up the shade and look for a circular plastic adjustment screw. Using your flat screw driver, push it as deep as possible and then turn the black screw clockwise for 8-9 times.

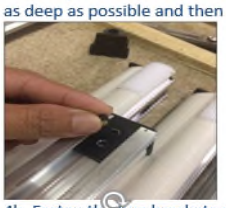

4b. Fasten the two brackets on each side by using tightening screws. (Picture above)
5. While the shade is removed try to use the shade and check if there is tension.



6. Hook the back part of the shade to the bracket and then push it upward to lock it in place. Push the shade upward until you hear a click which means the shade is in lock position.