DCM3 RESET PROCEDURE:


1. Make sure not connected to shore power, generator not running and engine not running.
2. Turn off battery disconnect switch on touch screen by sliding door. Remove charge line disconnect (red key) at back of coach under the power sofa on top of battery box.



3. Remove "ECO-ION" battery cover then open battery box door.



4. Inside battery box, remove positive terminal lug from post (picture below in yellow box) and leave disconnected for 5 minutes. Make sure to cover the removed positive cable-terminal lug with electrical tape the whole time it's disconnected from the post so it doesn't accidentally touch anything grounded and create a short circuit.

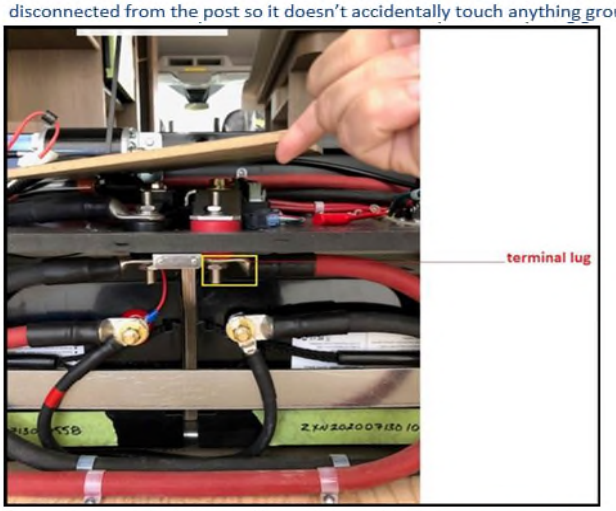

5. Then re-connect back the positive cable-terminal lug to post and tighten down the nut.
6. Re-insert back charge line disconnect (red key) and turn ON battery disconnect switch on touchscreen.
7. Then test by connecting to shore power or run engine. Check functions on Spyder screen for updated battery information.