

Measurements to install Redwood Floor Base:


From the Access Panel measure $19\frac{3}{4}$ " to the edge the Left Floor Base

From Sofa/Bed Cabinet measure $6\frac{1}{2}$ " to the edge of each Floor Base

From the edge of the Left Floor Base to the edge of the Right Floor Base measure $6\frac{3}{4}$ "

From the edge of the Right Floor Base to the wall measure $29\frac{1}{4}$ "

**The is the standard location we place these on the production line, however, the Floor Bases may be adjusted to your preferred location

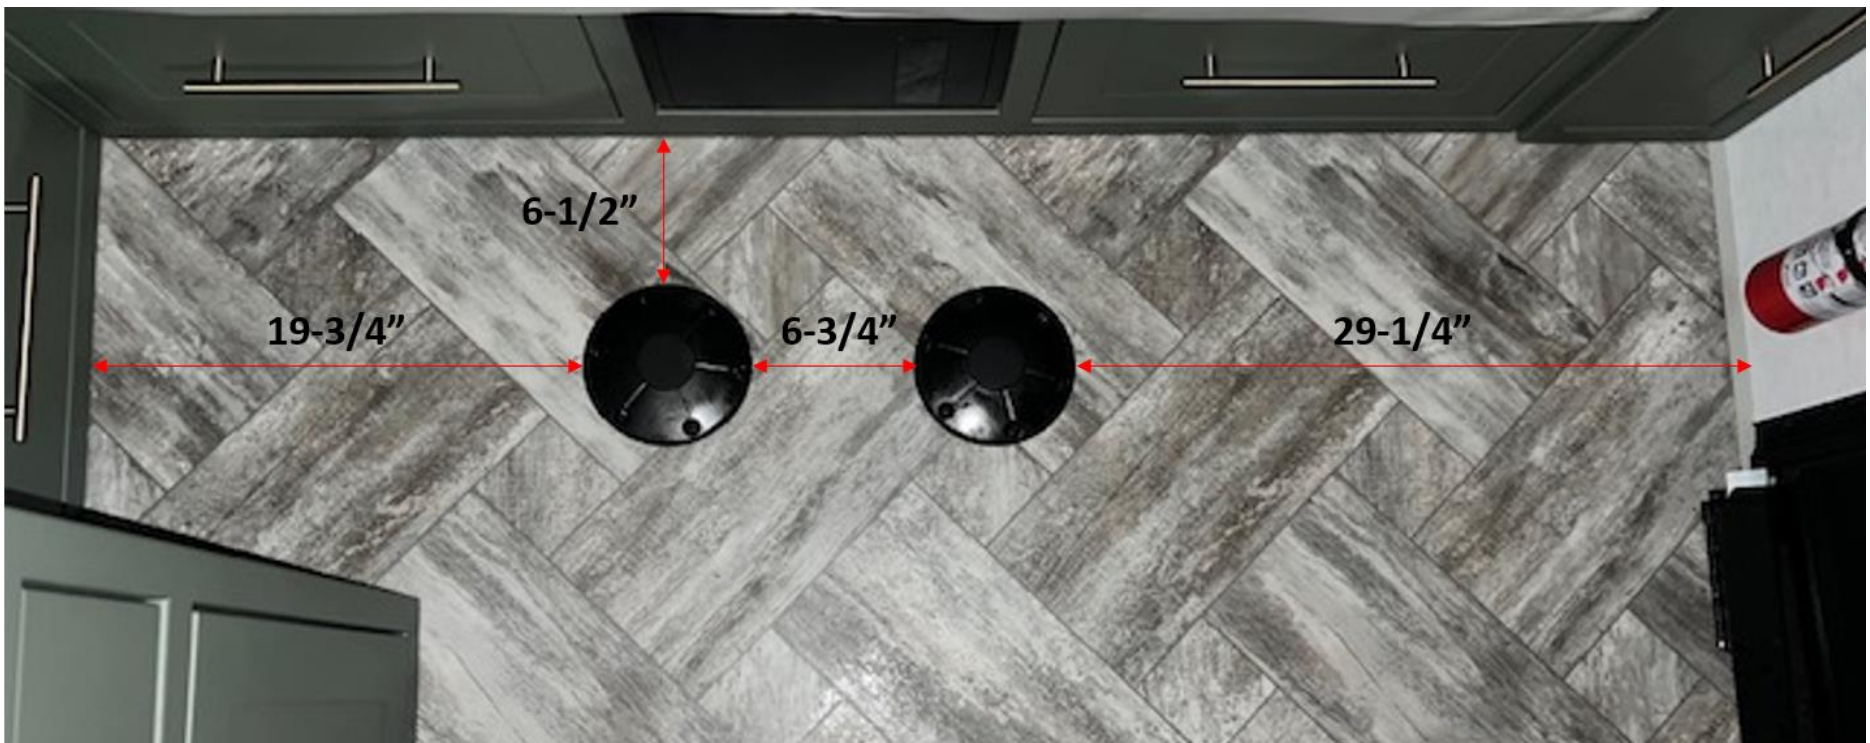

Measurements to install Redwood Table Bases:

From the Left side of the countertop measure 8.5" to the exterior edge of the Left Table Base

From Top of the countertop measure 5.5" to the top of each Table Base

From the inner edge of the Left Table Base to the inner edge of the Right Table Base measure 9"

From the exterior edge of the Right Table Base measure 8.5" to the Right side of the countertop



We left the Table Bases off the countertop to allow you to position and fasten the countertop to your preferred distance. On the production line, we install the table bases 9" away from each other, 5.5" from the top, and 8.5" from either side.

Installation Instructions for the Redwood Table Bases:

1. Position and rotate 29" Redwood Table legs.
2. Set and clip the table bases onto the table legs.
3. Set Countertop on table bases.
4. Position and mark where you would prefer the countertop to set.
5. Drill through the backer with a 3/32" bit.
6. Use 6 x 5/8" screws to fasten the table bases to the countertop.