

DTNA Solutions > Service Solutions > Thomas Built Bus
> SS 288TBB HDX / EFX front lighting replacement

SS 288TBB HDX / EFX front lighting replacement

This Service Solution does not imply any special warranty coverage. Standard warranty guidelines and coverage apply. This Service Solution is to provide and assist the Dealers/Customers in resolving the issue of replacing the rear lights.

Rear stop/ tail / turn signal lights no longer available from the vender

Applicable Vehicles

EF/EFX/ER/HDX/Minotour

Issue

Light are no longer available

Solution


Attach is the spreadsheet for which light is replaced with the new light assembly. Depending on your unit some modification is needed. The Old light the wiring pass thru was one inch. The new light a 3 inch hole is needed. Attach photo example of a tool that can be made, not purchase from TBB to help on the process

Labels :

Transit-Liner

Add tags

Attachments

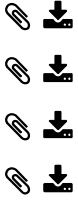

Comment









*DTNA Predecessor part #	Previous Weldon Part #	Vendor Reference#	form and function (y/n)	* what are the differences?	Mounting Hole Diameter	Change to wiring	Vehicle Harness is changing	Ground Wire is Added	*Description (Max 40 characters)
WTE 1000 1159 21 (52004654)	1000-1159-21	1000-2106-21	No	The new lamp needs a 3" clearance hole for the mounting area.	3"	No	No	No	TURN ARROW, PB, AMBER, 2 POS PACK WP
WTE 1010 1106 20 (52005327)	1010-1106-20	1010-2106-20	No	The new lamp needs a 3" clearance hole for the mounting area.	3"	No	No	No	TURN, PB, AMBER, 2 WIRES
TBB 52005328	1010-1106-21	1010-2106-21	No	The new lamp needs a 3" clearance hole for the mounting area.	3"	No	No	No	TURN, PB, AMBER, 2 POS PACK WP
WTE 1010 1126 10 (80520334)	1010-1126-10	1010-2126-10	No	The new lamp needs a 3" clearance hole for the mounting area.	3"	No	No	No	STOP/TAIL, PB, RED, 3 WIRES
TBB 52005326	1010-1126-11	1010-2126-11	No	The new lamp needs a 3" clearance hole for the mounting area.	3"	No	No	No	STOP/TAIL, PB, RED, 3 POS PACK WP
TBB 52005703	1010-7126-21	1010-2126-21	No	The new lamp needs a 3" clearance hole for the mounting area.	3"	No	No	No	TURN/PARK, PB, AMBER, 3 POS PACK WP
WTE 1000 1100 20 (22021372)	1000-1100-20	1000-2106-20	No	The new lamp needs a 3" clearance hole for the mounting area, and the ground wire will need to be connected to the body harness or mounted to the sheet metal.	3"	Yes	No	Yes	TURN ARROW, PB AMBER, 2 WIRES
WTE 1010 1100 10 (22022372)	1010-1100-10	1010-2106-10	No	The new lamp needs a 3" clearance hole for the mounting area, and the ground wire will need to be connected to the body harness or mounted to the sheet metal.	3"	Yes	No	Yes	STOP, PB, RED, 2 WIRES
WTE 1010 1100 20 (22023372)	1010-1100-20	1010-2106-20	No	The new lamp needs a 3" clearance hole for the mounting area, and the ground wire will need to be connected to the body harness or mounted to the sheet metal.	3"	Yes	No	Yes	TURN, PB, AMBER, 2 WIRES
WTE 1010 1120 10 (22019379)	1010-1120-10	1010-2126-10	No	The new lamp needs a 3" clearance hole for the mounting area, and the ground wire will need to be connected to the body harness or mounted to the sheet metal.	3"	Yes	No	Yes	STOP/TAIL, PB, RED, 3 WIRES
WTE 1010 1120 20 (52000008)	1010-1120-20	1010-2126-20	No	The new lamp needs a 3" clearance hole for the mounting area, and the ground wire will need to be connected to the body harness or mounted to the sheet metal.	3"	Yes	No	Yes	TURN/PARK, PB, AMBER, 3 WIRES
WTE 1010 1100 30 (52000137)	1010-1100-30	1013-2106-30	No	The new lamp needs a 3" clearance hole for the mounting area, and the ground wire will need to be connected to the body harness or mounted to the sheet metal.	3"	Yes	No	Yes	BACKUP, PB, CLEAR, 2 WIRES
WTE 1010 1109 31 (52004039)	1010-1109-31	1013-2106-30	No	The new lamp needs a 3" clearance hole for the mounting area. Also the harness that was used is unavailble, customer will need to use bare wire version. The connector on the vehicle harness will need to be cut off.	3"	Yes	Yes	No	BACKUP, PB, CLEAR, 2 WIRES
TBB 52003975	1010-1129-11	1010-2126-10	No	The new lamp needs a 3" clearance hole for the mounting area. Also the harness that was used is unavailble, customer will need to use bare wire version. The connector on the vehicle harness will need to be cut off and the ground wire will need to be connected to the vehicle harness or mounted to the sheet metal.	3"	Yes	Yes	Yes	STOP/TAIL, PB, RED, 3 WIRES
TBB 52004033	1010-1100-21	1000-2106-20	No	The new lamp needs a 3" clearance hole for the mounting area. Also the harness that was used is unavailble, customer will need to use bare wire version. The connector on the vehicle harness will need to be cut off and the ground wire will need to be connected to the vehicle harness or mounted to the sheet metal.	3"	Yes	Yes	Yes	TURN ARROW, PB AMBER, 2 WIRES
WTE 1010 7129 21 (52004061)	1010-7129-21	1010-2126-20	No	The new lamp needs a 3" clearance hole for the mounting area. Also the harness that was used is unavailble, customer will need to use bare wire version. The connector on the vehicle harness will need to be cut off and the ground wire will need to be connected to the vehicle harness or mounted to the sheet metal.	3"	Yes	Yes	Yes	TURN/PARK, PB, AMBER, 3 WIRES