



Can-Am Spyder 2024-25 Backup Camera Retrofit / Turn Off- 144022

Summary:

Help document on retrofitting the backup camera to some MY 2024-25 Can-Am Spyder or turning it off after software update

Type:

General

TST Detail:

Problem:

The MY24 Spyder RT and F3 T/LTD rear fender does not allow the installation of the backup camera kit 219401199

No retrofit possible for F3-S

Its possible the cluster was updated to the latest software 710010643 and the unit is not equipped with the backup camera creating a blue screen when reverse gear is engaged

(see image in inspection section, camera needs to be turned OFF)

Solution:

Retrofit the corresponding MY25 rear fender along the backup camera kit 219401199 (refer to shop manual for procedures)

Spyder RT: **Rear Fender** 1x 219800618 **Bracket** 708304955 (included in 219401199)

Spyder F3 T/LTD: **Rear Fender** 1x 219800607 **Bracket** 708304953 (included in 219401199)

Cluster will need to be updated the to MY25 software 710010643 or BRP Connect V3.1.0 if done Over The Air


The connector should be just to the left of the backup light.

Inspection Procedure:

After installation and software update access the **Backup camera tab** through the **Preference** menu **(this also applies to MY25 that the camera was not factory installed)**

Switch the camera to **ON**

Start the unit and engage reverse gear to confirm camera operation

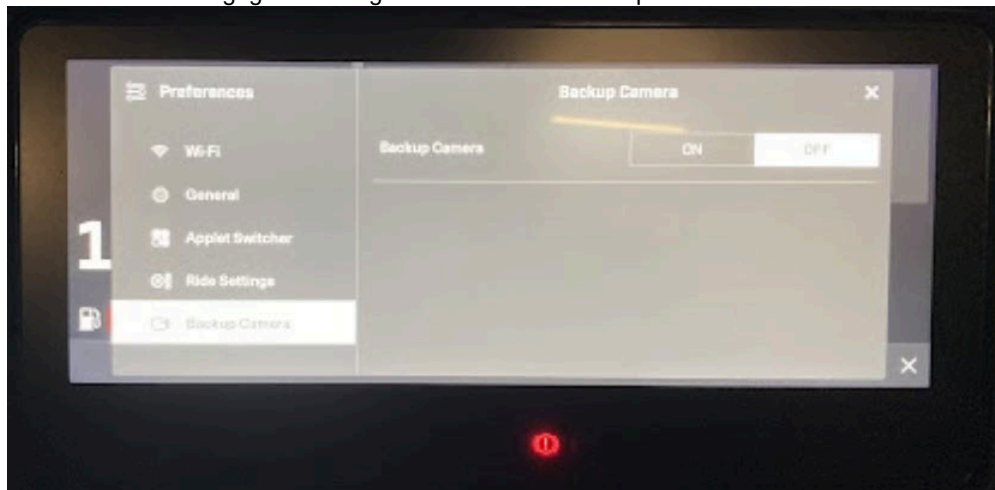

Warranty:

No warranty applies as it is an accessory

Attachment:

First Published By: Marc Andre Beaubien **on** 2025-04-17

Last Modified By: Marc Andre Beaubien **on** 2025-04-17