

## **Allegro Open Road Front Side Marker Lights Installation Instructions**

**Models Involved:** 2025 – 2026 Allegro Open Roads

**Purpose:** To provide instructions on installing the front side marker lights.

### **Tools Needed:**

1 inch hole saw  
Screw Driver

### **Parts Needed:**

2 of 34132, light  
4 1 ¼" Phillips pan head stainless steel screw (shop supplies)

### **FLAT RATE CODE & TIME ALLOWED**

**9508DC03 for 1 hour, list "MCD008" as authorization for the claim**

### **Repair Instructions**

1. On the driver's side of the motorhome, drill a 1-inch hole, 3 9/16-inches in front of the belt line/hinge rail as seen in figure 1a & 1b below. The hole should be the same height as the belt line/hinge rail.

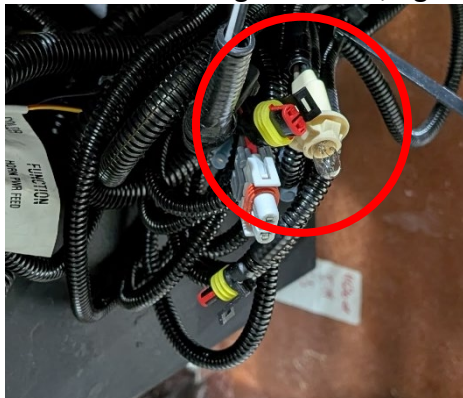


**Figure 1a**

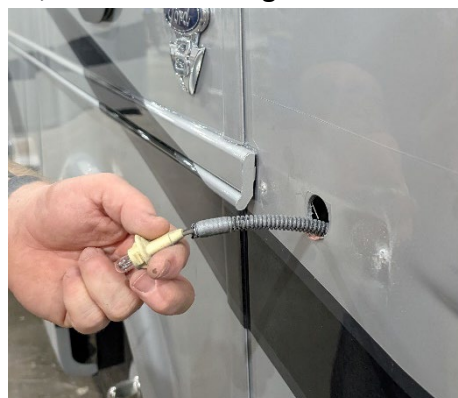


**Figure1b**

2. Open the hood and locate the wiring harness and light bulb for the side marker lights, figure 2a. Pull harness through the hole, figure 2b, and install the light bulb in the lens cover, figure 1a.



**Figure 2a**



**Figure 2b**

3. Using the screws, fasten the light to the side wall in line with the belt line/hinge rail, figure 3a & 3b.



***Figure 3a***



***Figure 3b***

4. Repeat procedure on the passenger side of the motorhome to install second light.