




Pleasure-Way


phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. | 302 Portage Avenue | Saskatoon, SK | S7J 4C6


Turn off the battery disconnect switch and charge line disconnect key. The G12 is located in the rear driver's side bench in the garage area. Remove the defective G12 from its mounted location and then mount the new one in place.

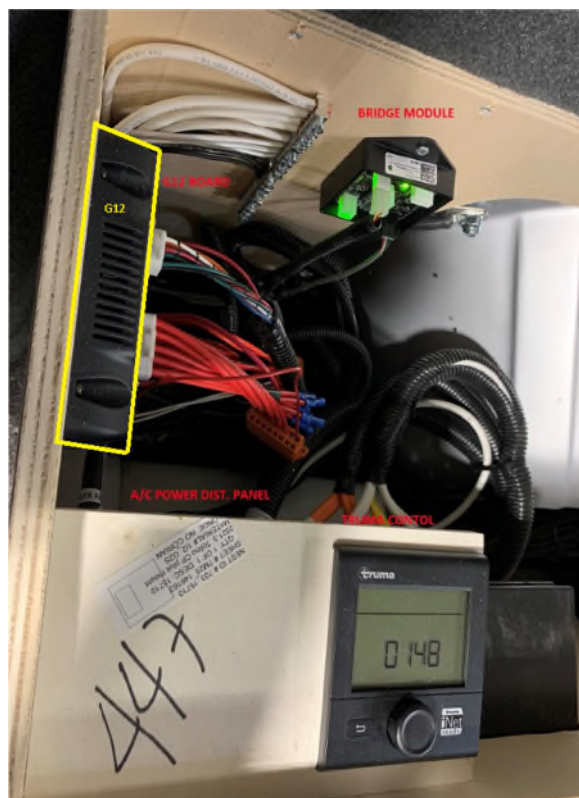

Start by cutting the butt connector from the thin red wire directly beside the 12v + post for battery disconnect input. Strip the wire and re-crimp onto the new board. Then move the time clock spade connector onto J17 of the new board. This will be easier without the other plugs installed in the way.

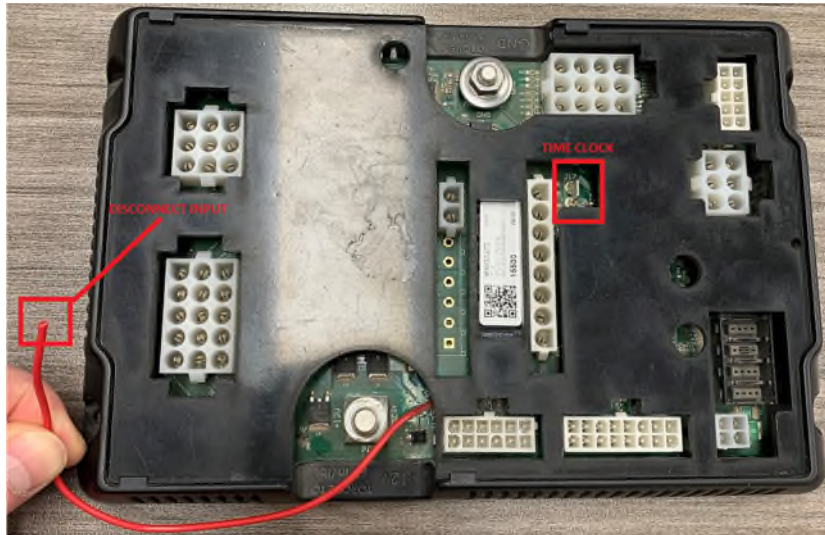

Next move all the white plugs onto the new board. They are all different shapes so they cannot be mixed up. Unplug 1 at a time and move to the new board. Move the row of grey communication cables onto the new board. The order of install does not matter, just plug the grey cables into any open communication port. Note the Tofino will only have 4 network ports. There is a small lever arm on the side of the plug which needs to be depressed in order to remove.

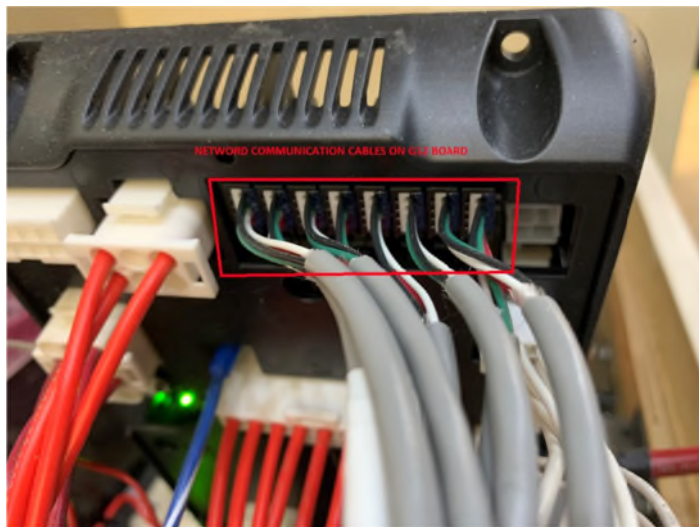

Lastly, connect the 12v power. Start with the ground and then the positive line. Turn on the battery disconnect switch and charge line disconnect key. The G12 should already be loaded for Tofino programming and everything should be back in operation.

