
Pro Display USB Update Instructions



SPYDER CONTROLS CORP

1

Plug a USB stick into your laptop or desktop computer. Open the USB stick on your computer and ensure it meets the requirements defined below. This may involve deleting and reformatting the USB stick before using it.

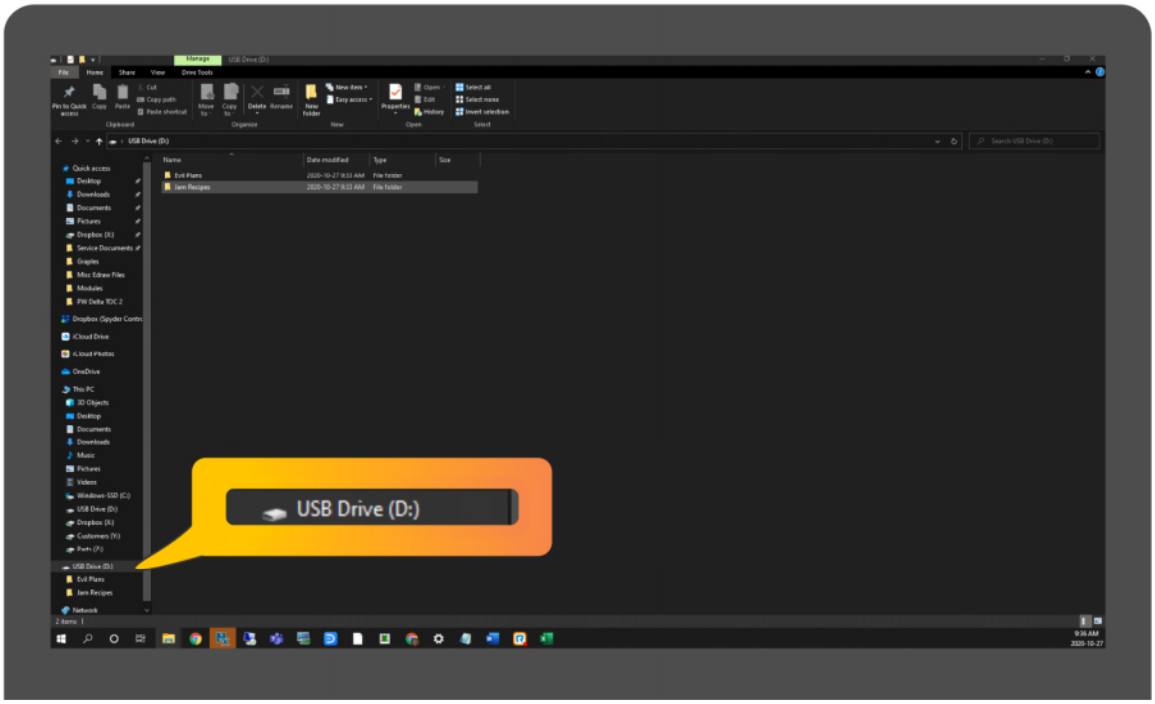




!

USB Stick Requirements

1) The USB stick used for uploading must have at least 1GB of storage capacity
2) The USB stick used for uploading must be no larger than 32GB
3) The USB stick must be formatted to FAT or FAT32

2


Download the SpyderConfig.Zip folder sent to you by email. Locate this folder in your downloads, right click and press extract. The computer will ask you where you would like the folder extracted to. Extract the folder to the USB stick.

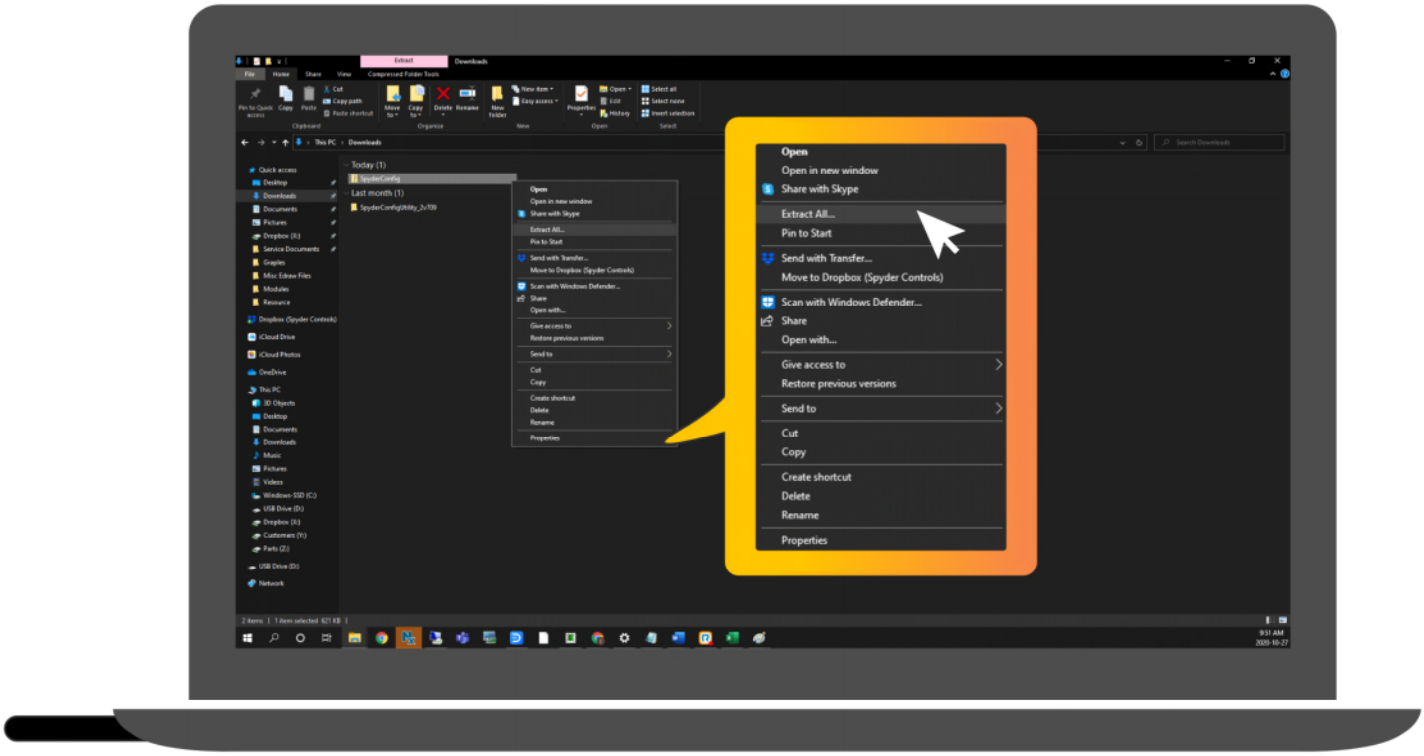

3

Verify a folder called SpyderConfig is in your USB drive.

Remove the USB Stick.

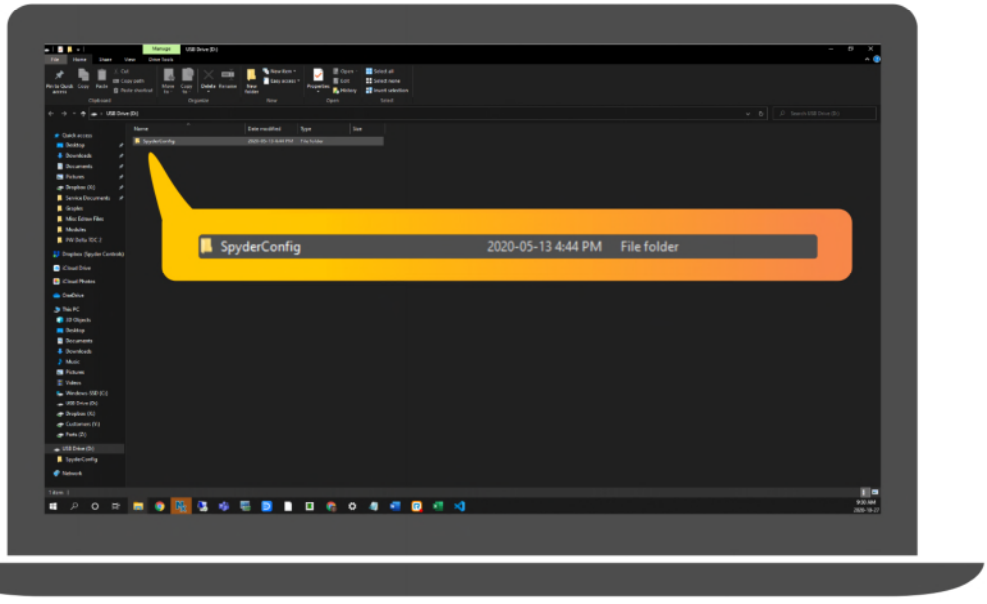


4

Remove the screen by pulling the side or top of the enclosure away from the wall. You should hear an audible click as each corner separates from the mounting bracket.



5

Plug the USB stick into the back of the LCD

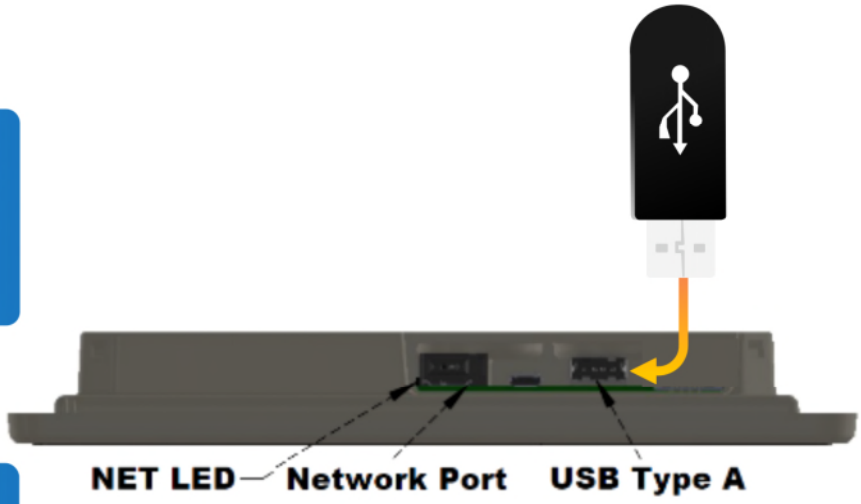

!

A 7" Pro LCD is depicted in this example.


The same steps apply to all 7" and "10 Pro Displays.


6

Unplug the network cable from the LCD being updated.

Wait for the LCD screen to go black.

Plug the network cable back in.

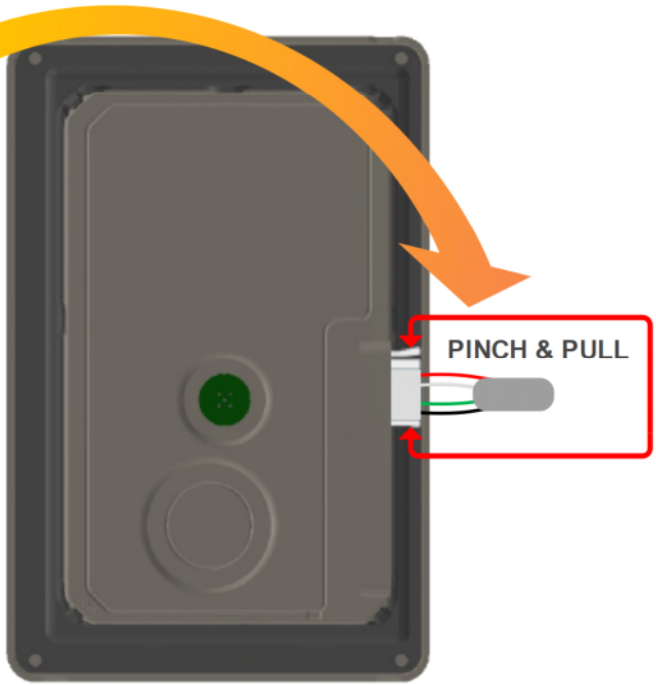

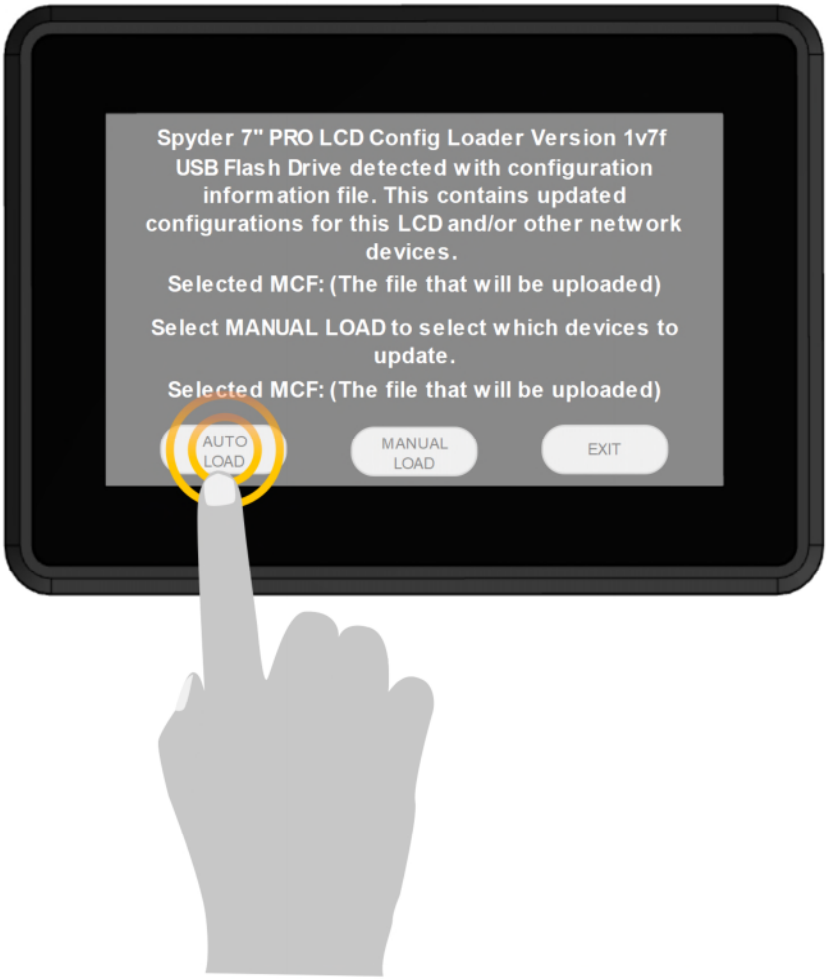

7

Press "AUTO LOAD"

8

Press "START AUTO LOAD"



9

Once the message "AUTO LOAD Successful" is displayed remove the USB Stick. The screen will return to normal operation once the USB stick is removed.



10

Press the screen into the mounting bracket until you hear an audible click from all four corners.



If you have any questions or would like further instructions please contact Spyder Support.

866-919-9092