



Technical Service Bulletin

GROUP	NUMBER
CAMPAIGN	26-01-006G
DATE	MODEL(S)
JANUARY 2026	GV70 (JK1) GV80 (JX1)

SUBJECT: WATER LEAK FROM CLOGGED SUNROOF DRAIN HOSE
(LIMITED COVERAGE CAMPAIGN L08G)

This TSB supersedes 24-BD-008G-1 to update the Subject, Parts Information, and Service Procedure with a new drain hose plug kit consisting of 2 plugs. The gluing of the drain hose to the plug has also been removed from the Service Procedure.

★ IMPORTANT

Retailers must perform this field action on all affected vehicles within 5/60,000 New Vehicle Limited Warranty (NVLW) prior to retail delivery to a guest and whenever an affected vehicle is in the shop for any maintenance or repair. See Warranty Information section for more details.

Access the “Vehicle Information” screen via WebDCS to verify “Warranty Start Date” and ensure the vehicle is within NVLW, observing mileage prior to any repair work.

Description: Certain GV70 (JK1) and GV80 (JX1) vehicles may exhibit water leakage inside the vehicle due to the sunroof drain hose plugs being clogged with foreign material or a water gurgling noise from the sunroof while driving in the rain. Follow the procedures in this bulletin to replace the front sunroof drain hose plugs and modify the rear drain hose plugs by cutting off a portion at the end.

Applicable Vehicles (Certain):

Model Year	Model	Production Dates
2022 – 2023	GV70 (JK1)	03/10/2021 - 05/31/2022
2021 – 2022	GV80 (JX1)	07/27/2020 - 02/26/2022

Parts Information:

Model	Part Name	Part Number	Figure	Remarks
GV70 (JK1) & GV80 (JX1)	Kit-Sunroof Front Drain Hose Plug	81686-T6031QQH		Kit contains 2 plugs

Required Supplies:

Name	Product Number	Figure	Remarks
Cutting Tool	N/A		Utility knife or equivalent (commercially available)
Tape Measure (any brand)	N/A		Commercially available

Warranty Information:

Model	Op. Code	Operation	Op. Time	Causal Part	Nature Code	Cause Code
GV70 (JK1) & GV80 (JX1)	50D301R0	Front Sunroof Drain Hose Plugs Replacement and Rear Sunroof Drain Hose Plugs Modification	0.8 M/H	81686-D2200	B33	ZZ1

NOTE 1: Submit claim on Claim Entry Screen as “Campaign” type.

NOTE 2: 5/60,000 New Vehicle Limited Warranty (NVLW) applies to the part(s) and repair procedure(s) outlined in this TSB. Prior to beginning any repair work, ensure the part(s) associated with the repair procedure are within NVLW, observing mileage and Warranty Start Date or date of first use. If the subject part(s) are out of warranty coverage, the retailer has the option to submit a PA Request for goodwill consideration on a case-by-case basis.

NOTE 3: If any part(s) not subject to this TSB are found in need of replacement while performing the repair procedure, and the affected part(s) are still under warranty, the retailer may submit a separate claim using the same repair order. If the part(s) not subject to this TSB are out of warranty coverage, the retailer has the option to submit a PA Request for goodwill consideration on a case-by-case basis.

NOTE 4: This TSB includes repair validation photos. Op times include VIN, mileage, and repair validation photo(s) as outlined in the Digital Documentation Policy.

NOTE 5: The incident parts are subject to callback through the normal Warranty Technical Center (WTC) parts return process. **Claim is subject to debit if the part is not returned.**

Service Procedure:

DIGITAL DOCUMENTATION



This TSB includes repair validation photos. Refer to the latest Warranty Digital Documentation Policy for requirements.

NOTICE

Applying the recommended torque to all fasteners is essential to reduce potential issues from occurring after the service procedure.

Table of Contents

- Front Left Sunroof Drain Hose Plug Replacement.....3
- Front Right Sunroof Drain Hose Plug Replacement9
- Rear Sunroof Drain Hose Plug Repair.....13

Front Left Sunroof Drain Hose Plug Replacement


1. Move both front seats as far rearward as possible.
2. Disconnect the negative (-) battery terminal (A).

Tightening Torque:

lb-ft	6.5
lb-in	78
N.m	8.8



2. Open the front door and remove the front door body side weatherstrip (B).

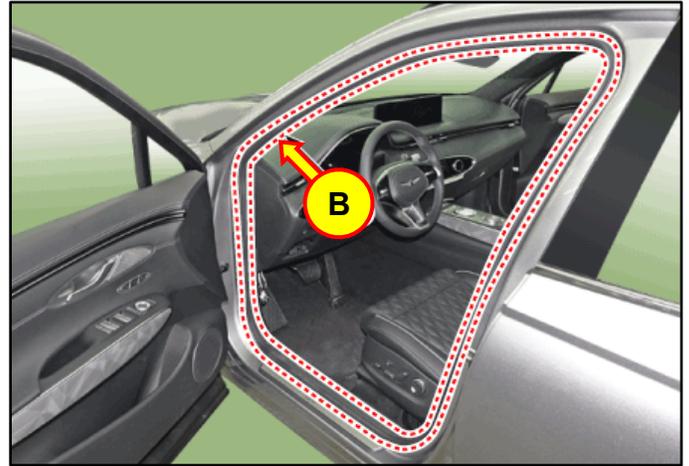

3. Remove the crash pad side cover (C).


CAUTION

Wear gloves to prevent hand injuries.


NOTICE

Use a plastic trim removal tool when removing components to prevent damage.


Be careful **NOT** to bend or scratch components during removal.

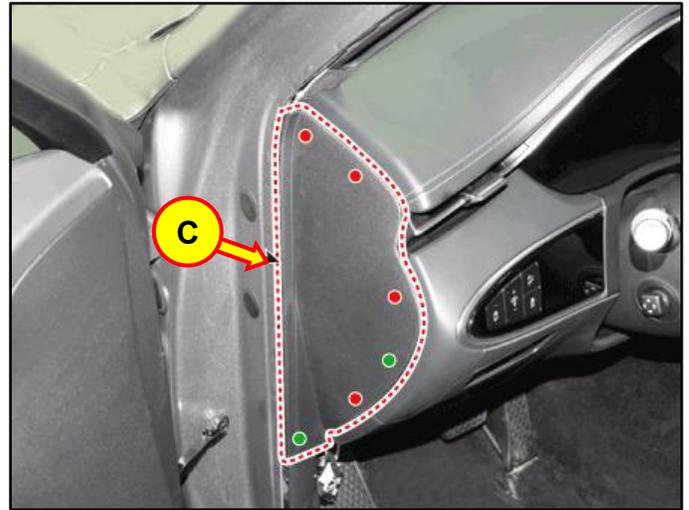


4. Remove the crash pad lower panel (D) after removing the screws.

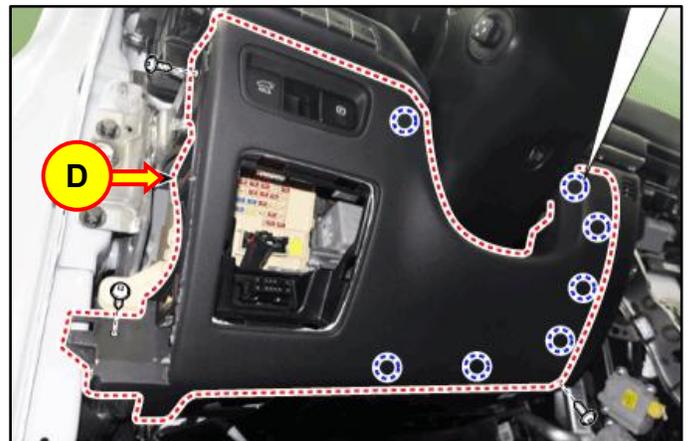

5. Disconnect the crash pad lower panel connector (E) by pressing the locking pin.

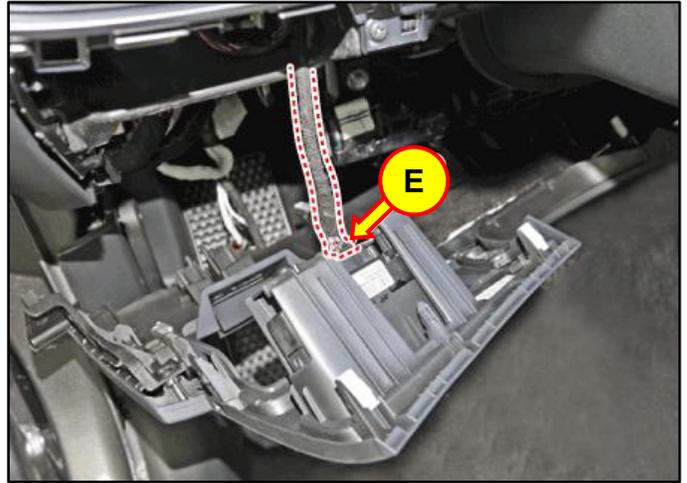


6. Disconnect the DLC connector (F) by pressing the locking pin.

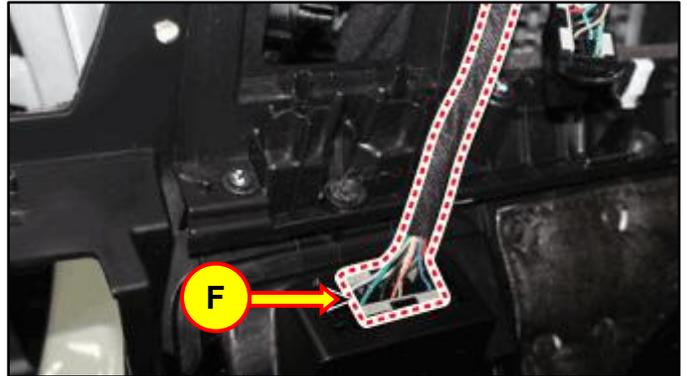


7. Remove the knee airbag module (G) after removing the bolts.

Tightening Torque:


lb-ft	7.3
lb-in	87
N.m	9.8

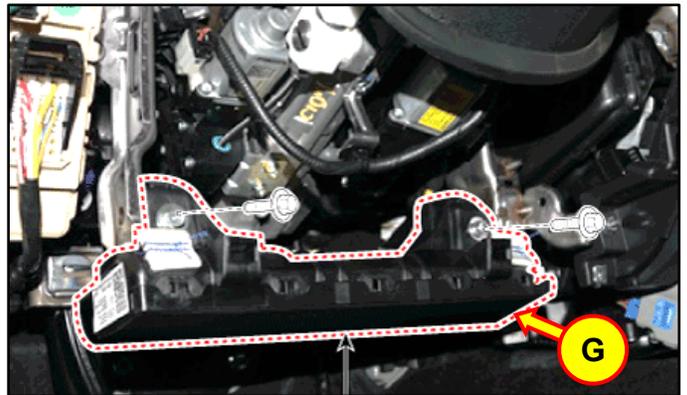

8. Disconnect the knee airbag connectors (H) by pressing the locking pins.

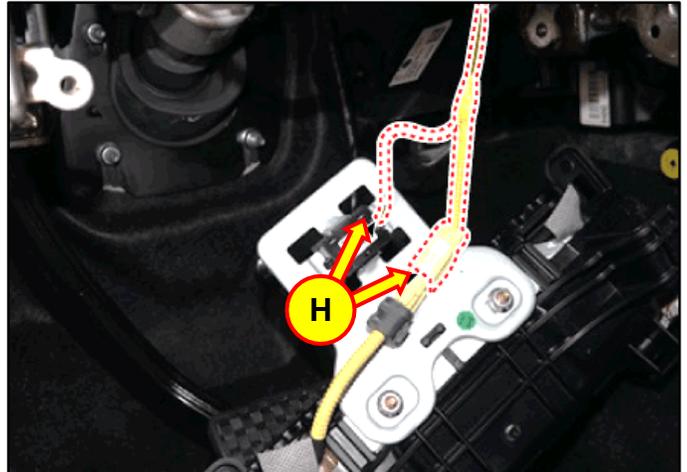



9. Locate the front left side sunroof drain hose plug underneath the crash pad and behind the Integrated Central Control Unit (ICU) (I).

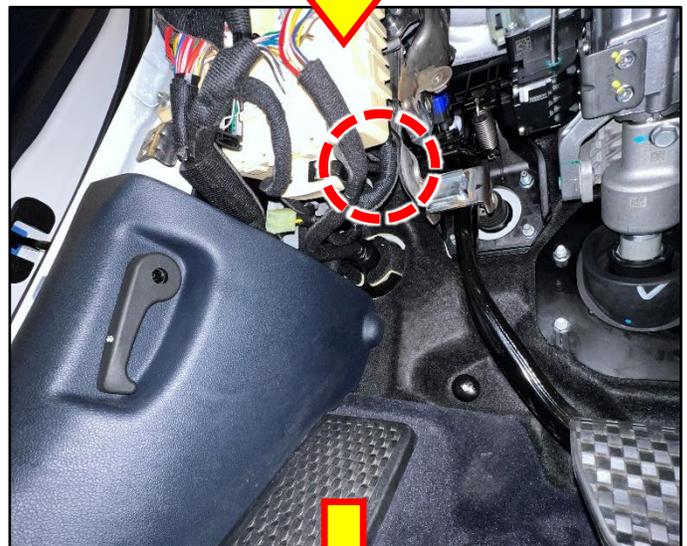

10. Remove the front left side sunroof drain hose plug (J).

i Information



Squeeze the plug by hand several times to facilitate removal.

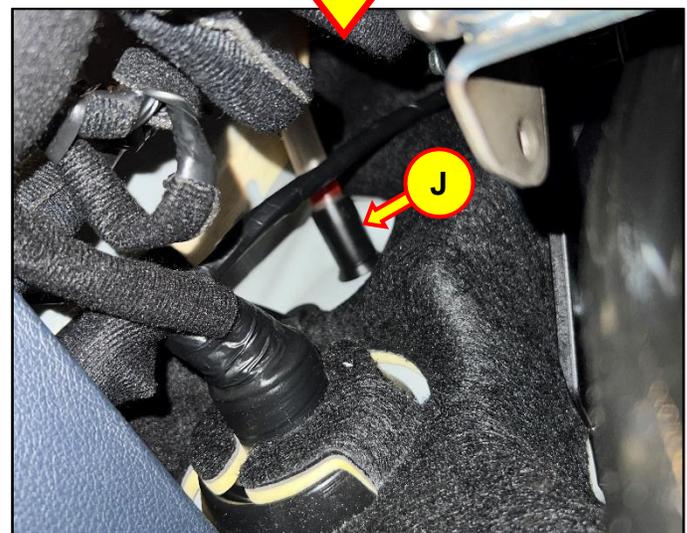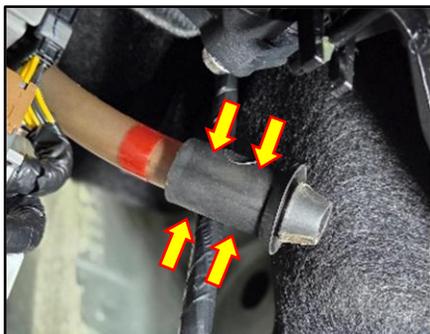

11. Install the drain hose into the new drain plug.

i Information



- When inserting the drain hose, be sure to push the taped portion (K) all the way into the drain plug.
- After installation, lightly shake the hose by hand to confirm it is properly seated in the drain hose plug.

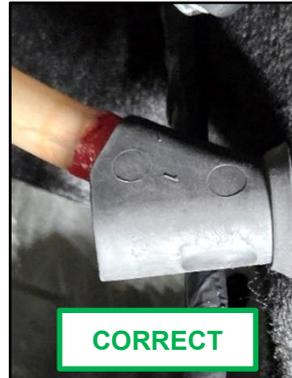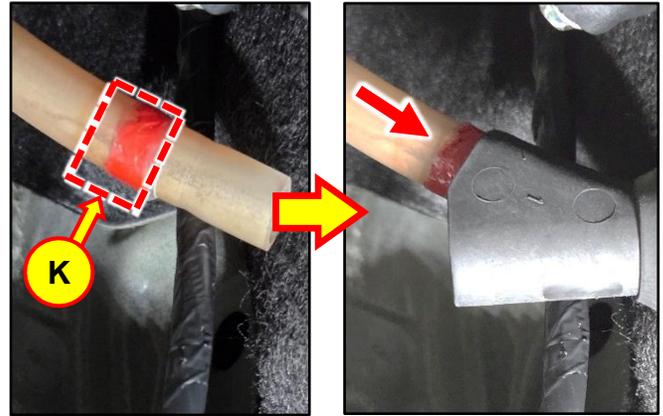

12. Install the new drain hose plug (L) into the vehicle body as shown.

i Information

Ensure that the rim (M) of the plug is flush with the vehicle body panel when installed.

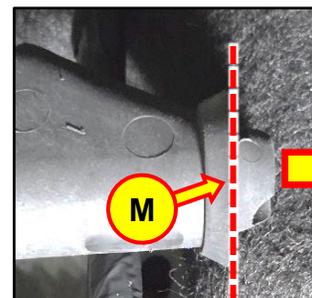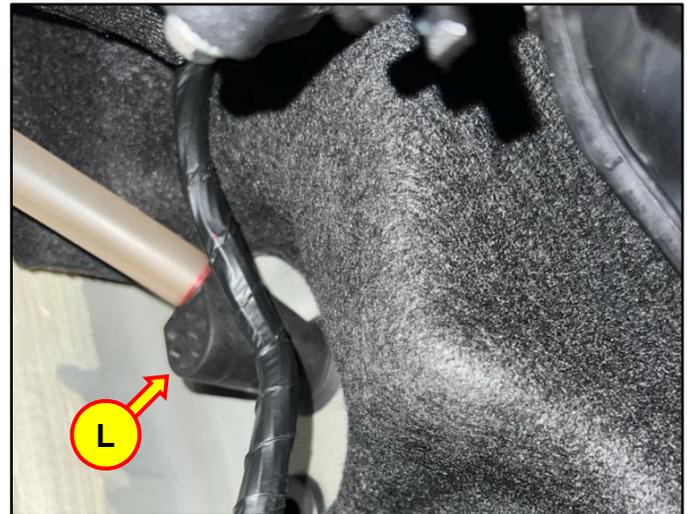

13.

DIGITAL
DOCUMENTATION



Using the STUI camera function, take a photo of the new drain hose plug and drain hose installed on the vehicle body.

Upload the photo to STUI.

NOTE: If the STUI camera function is **NOT** used, write the last 6 digits of the VIN and date of repair on a piece of paper to include in the photo.




14. Reinstall all removed parts in the reverse order of the removal process.
15. Proceed to [Front Right Sunroof Drain Hose Plug Replacement](#).

Front Right Sunroof Drain Hose Plug Replacement

1. Press the locking pins (A) and remove the crash pad under cover (B).

NOTICE


Use a plastic trim removal tool when removing components to prevent damage and/or scratches.

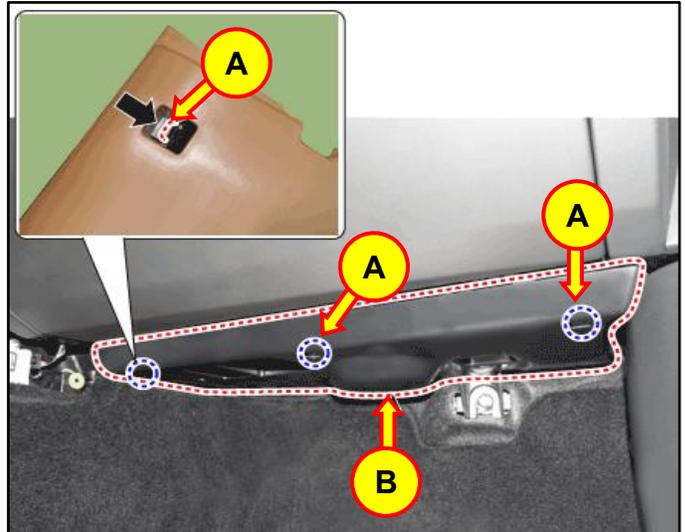

2. Remove the front right door body weatherstrip (C).

i Information


Front left shown as an example.

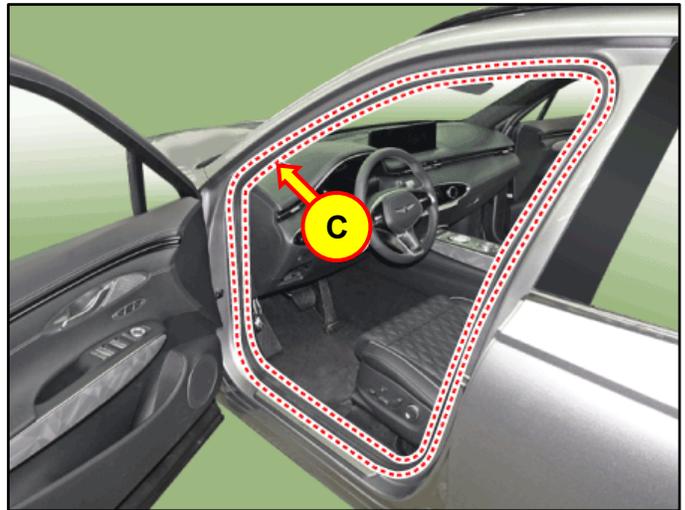

3. Remove the front right door scuff trim (D).

i Information


Front left shown as an example.

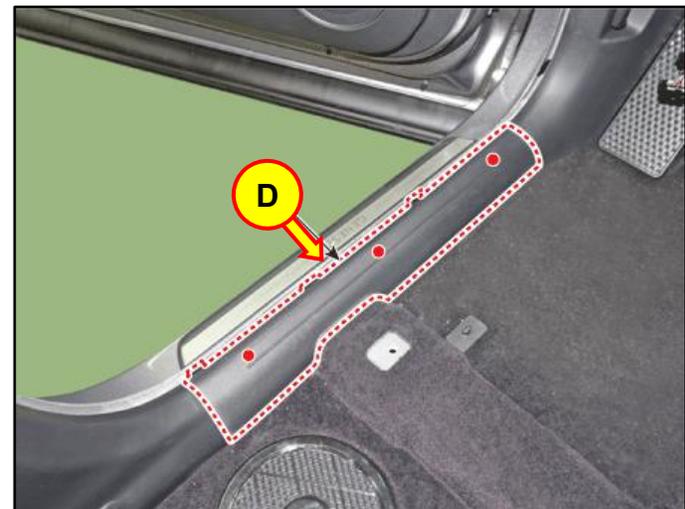


4. Remove the front right cowl side trim (E).

i Information

Front left shown as an example.

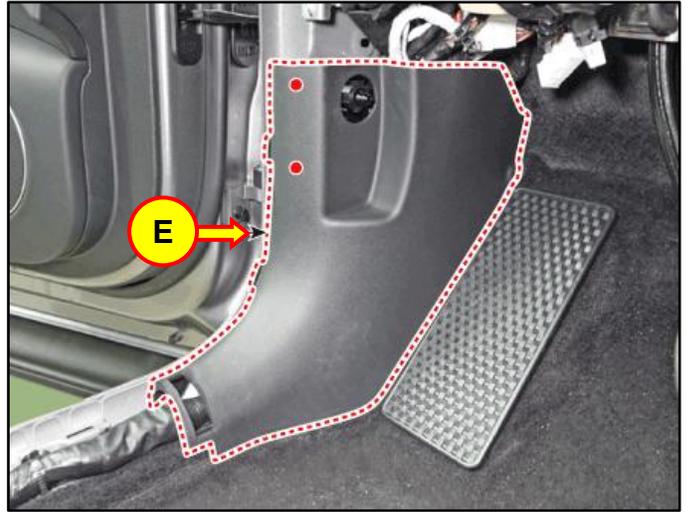


5. Disconnect the 3 connectors (F) for the Integrated Body Control Unit (IBU) underneath the crash pad.

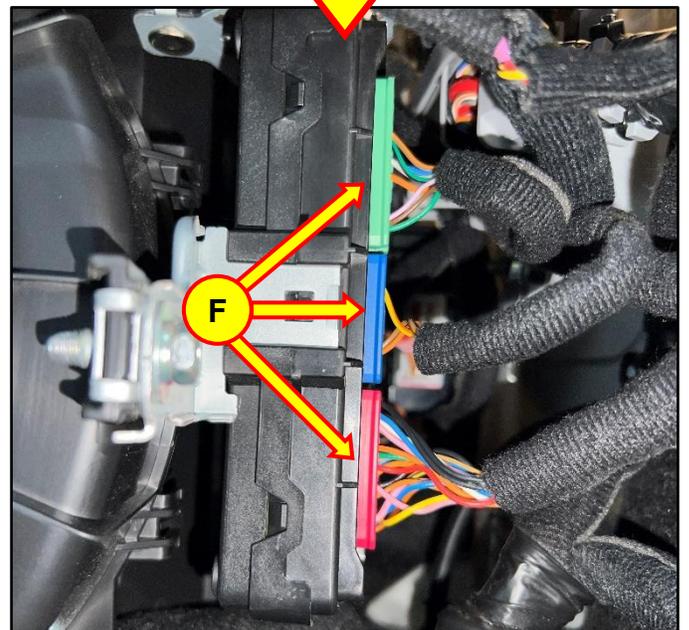

6. Locate and remove the front right sunroof drain hose plug (G) behind the crash pad and above the IBU connectors.

i Information


The IBU connectors and wiring harness may need to be moved out of the way to obtain access to the drain hose plug. The IBU does **NOT** need to be removed.

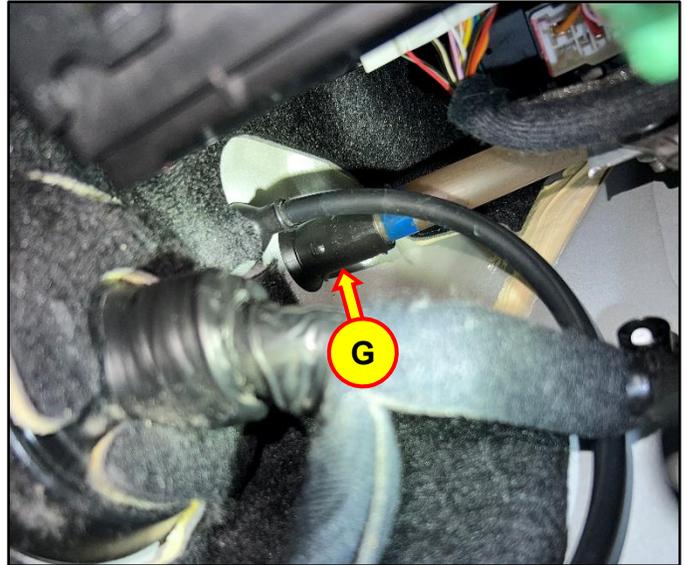

7. Install the drain hose into the new drain hose plug.

i Information

- When inserting the drain hose, be sure to push the taped portion (H) all the way into the drain hose plug.
- After installation, lightly shake the hose by hand to confirm it is properly seated in the drain hose plug.

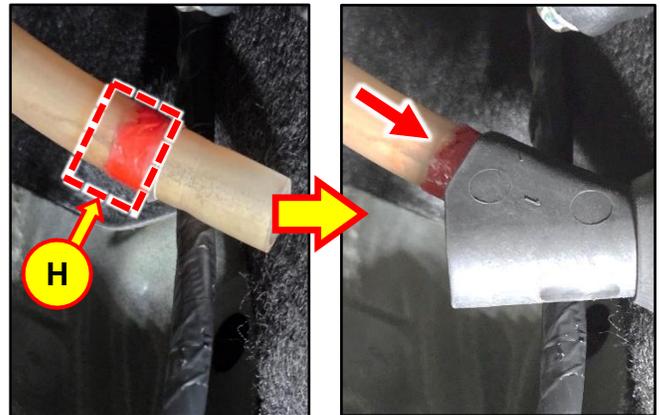


8. Install the new drain hose plug (I) into the vehicle body as shown.



i Information

Ensure that the rim (J) of the plug is flush with the vehicle body panel when installed.

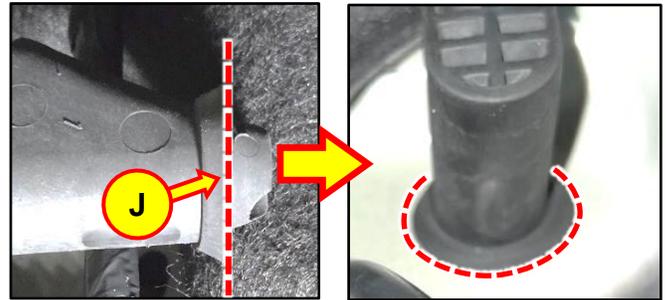

9. Using the STUI camera function, take a photo of the new drain hose plug and drain hose installed on the vehicle body.

DIGITAL DOCUMENTATION



Upload the photo to STUI.

NOTE: If the STUI camera function is **NOT** used, write the last 6 digits of the VIN and date of repair on a piece of paper to include in the photo.




10. Reinstall all removed parts in the reverse order of the removal process.
11. Proceed to [Rear Sunroof Drain Hose Plug Repair](#).

Rear Sunroof Drain Hose Plug Repair

1. Visually check that the lift blocks are properly seated on the vehicle support points and raise the vehicle.

NOTICE


Raising the vehicle from anywhere other than the support points may damage vehicle components.

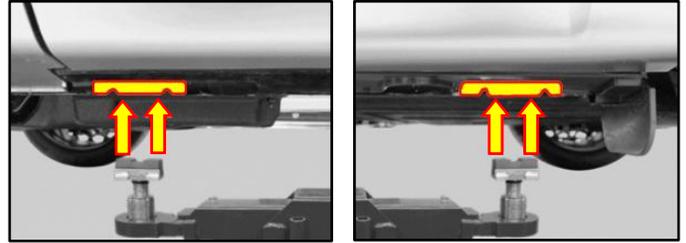

Refer to the shop manual:

- **General Information > Lift and Support Points > General Information**

2. Locate the rear left drain hose plug (A) above the muffler.

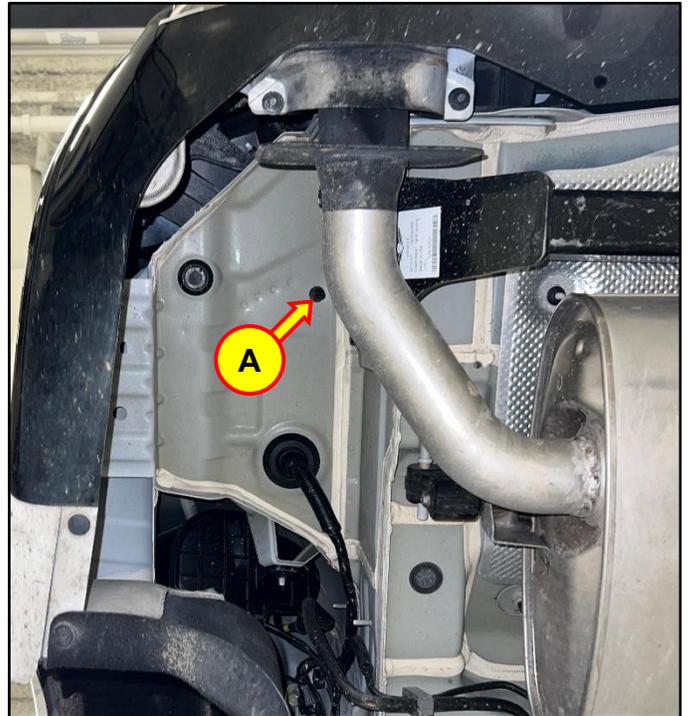

3. Measure and cut off the tip of the rear drain hose plug as shown.
- **3/8 inch (10 mm)** away from the body panel



4.

DIGITAL DOCUMENTATION




Using the STUI camera function, take a photo of the modified drain hose plug.

Upload the photo to STUI.

NOTE: If the STUI camera function is **NOT** used, write the last 6 digits of the VIN and date of repair on a piece of paper to include in the photo.



5. Locate the rear right drain hose plug (B) above the muffler.

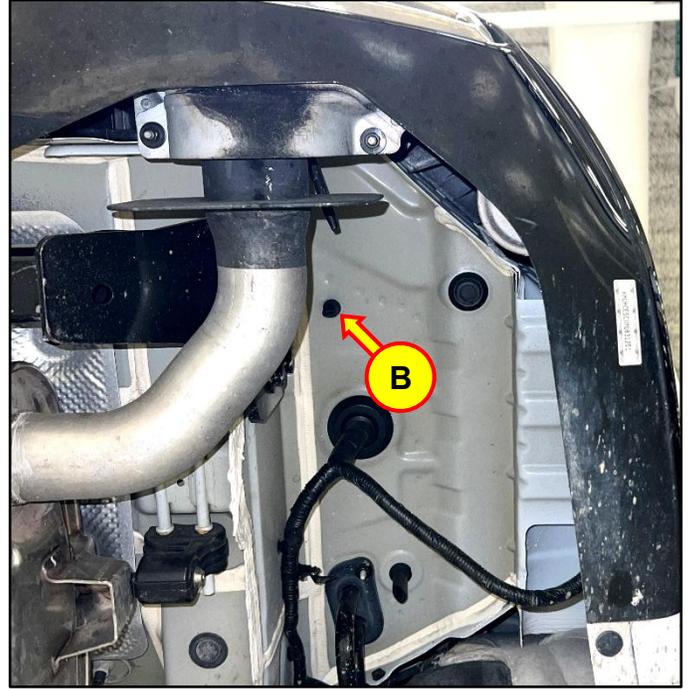

6. Repeat steps 3-4 on the rear passenger side drain hose plug.
7. The service procedure is now complete.