



CC850 Front Hood Shield Update


This instruction refers to other documents that are necessary to do the procedure.

Situation

Shield emblem may wear prematurely.

Action

Install new tape under the front hood shield.

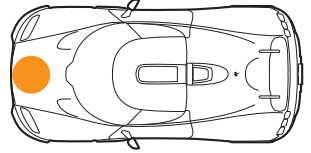

| PARTS | REFERENCE | QUANTITY |
|--------------------|-----------|----------|
| Shield Emblem tape | 1092170 | 1* |

*Only required if the shield tape is damaged.

| TOOLS | SPECIFICATION | QUANTITY |
|----------------------------|---------------|----------|
| Fishing line or equivalent | – | – |
| Plastic container | – | – |
| Plastic pry tool | – | – |
| Scrub sponge | – | – |

| CONSUMABLES | REFERENCE | QUANTITY |
|------------------|-----------|----------|
| Isopropanol, 99% | – | – |

Shield Emblem

**CAUTION**


Do not apply too much force. Too much force can damage the tape bond.

1. Examine the shield emblem to make sure that it is attached correctly.
 - 1.1 Use a pry tool on four corners of the shield emblem and apply a light force.
 - 1.2 Do a check on the bond of the shield emblem.
 - If the shield emblem does not lift and shows no separation, do not continue with the procedure that follows.
 - If the shield emblem lifts and shows separation, continue with this procedure.





2. Put masking tape around the shield emblem on the front hood.

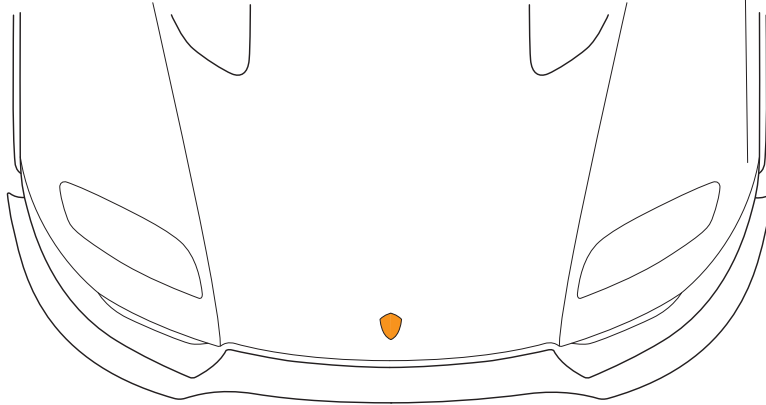

CAUTION

Do not use sharp or hard tools to remove the emblem. This can scratches or other damages.

3. Use a fishing line or equivalent to remove the shield emblem from the front hood.
4. Remove and discard the double-sided tape from the bottom of the shield emblem.
5. Make a 50/50 mixture of isopropanol and water in a clean container.
6. Use the prepared mixture to remove the glue from the contact surface on the shield and the front hood.
7. Use a scrub sponge to make the back of the shield emblem rough.
8. Use the prepared mixture to clean the dust from the back of the shield emblem.



CAUTION

Make sure that there is no contamination on the contact surface of the shield emblem. If the shield emblem has contamination, the tape will not bond correctly.

9. Put double-sided tape on the contact surface on the back of the shield emblem.

Part: 1092170



10. Attach the shield emblem to the recess in the front hood. Make sure that the distance from the emblem to the edge of the recess is the same along the full length.
11. Push the shield emblem onto the front hood until it is attached along its full length.
12. Remove the masking tape.





Koenigsegg

TECHNICAL SERVICE BULLETIN

Doc. ID TSB-26062-02

Model CC850

Kit 1094846

Warranty Information

If the repair is covered by the warranty terms, refer to Koenigsegg Warranty Process.

OPERATION

KWO571643

PART NO

Refer to the invoiced kit number.

