

SUBJECT: RECOMMENDED ABS BRAKE BLEEDING PROCEDURE

VEHICLE(S) AFFECTED: ALL CFMOTO ON-ROAD MOTORCYCLES

ISSUED: November 25, 2025

PLEASE NOTE: This notice is intended to provide service information to dealership personnel regarding CFMOTO products. No warranty coverage is to be implied or inferred unless specifically listed. Questions regarding this publication should be directed to CFMOTO Technical Service.


Dealer Sign-off Section – Please notify the appropriate personnel	
Sales Manager	
Warranty/SVC Manager	
Technician(s)	

Due to feedback that the brake bleeding procedure in motorcycle service manuals is not always successful, CFMOTO-USA developed a procedure to supplement the service manual information.

This recommended brake bleeding procedure is in course “ABS Activation Using D-SCAN,” which can be found in the [CFMOTO GARAGE](#) under Motorcycle Technical Resources. There are 4 general steps, and skipping any of them risks the brake system retaining trapped air.



Recommended Brake Bleeding Procedure

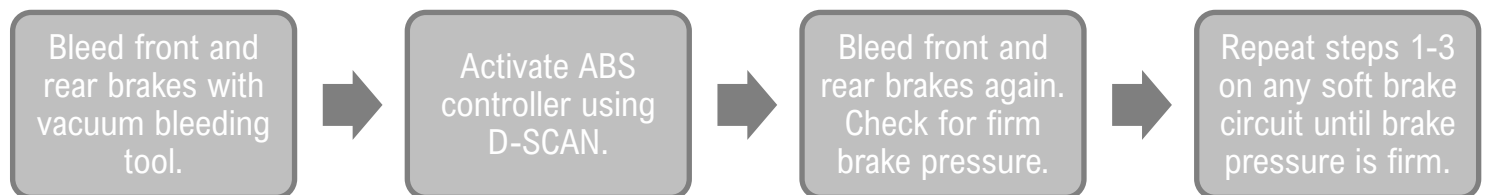

CFMOTO GARAGE Course: [ABS Activation Using D-SCAN](#)

Tools and Supplies:

Description	Part Number
D-SCAN or D-SCAN Advanced	601402-00771 or 601402-01666
Vacuum Bleeding Tool	Commercially Available

Warranty Information: Normal vehicle warranty applies.

Please add this notification to any CFMOTO service documents you may have printed and stored.