




Parking Brake Improvement

This instruction refers to other documents that are necessary to do the procedure.

This instruction is applicable on RH and LH side. The illustration shows the LH side.

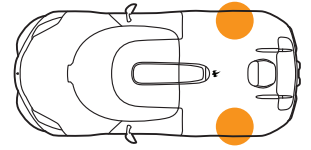

Situation

The bolts for the parking brake can come loose and create premature wear on the rim.

Action

Replace the bolts with the new ones and apply thread locker.



WARNING

If the bolts that attach the parking brake are not correctly torqued with threadlocker, the parking brake can get loose and cause an accident.

| PARTS | REFERENCE | QUANTITY |
|----------|--------------|----------|
| M8x90 A4 | 170-553-1046 | 4 |

| TOOLS | SPECIFICATION | QUANTITY |
|--------------------------|---------------|----------|
| General mechanical tools | – | – |

| CONSUMABLES | REFERENCE | QUANTITY |
|-------------|--------------|----------|
| Loctite 270 | 130-174-0553 | – |


Prepare

1. Open the rear hood with the key fob or from the center console.
2. Disconnect the 12 V system, refer to [WOM-00007](#).
3. Disconnect the HV system, refer to [WOM-00021](#).
4. Lift and put the vehicle on jack stands, refer to [WOM-00031](#).
5. Remove the rear wheels, refer to [WOM-00022](#).

Replace Bolts

1. Do a check of the LH and RH parking brake calipers to make sure that there are no scratches or other damages.
 - 1.1 If you find a scratch or other damages, submit a KATS ticket to contact Koenigsegg.
 - 1.2 If there are no damages on the parking brakes, continue with the next step.
2. Do a check of the inner side of the LH and RH rear rim spokes. Make sure that there are no scratches or other damages that are caused by the parking brake.
 - 2.1 If you find a scratch or other damages, submit a KATS ticket to contact Koenigsegg.
 - 2.2 If there are no damages on the rear rim spokes, continue with the next step.
3. Remove and discard the H6 bolt **A** from the parking brake caliper.



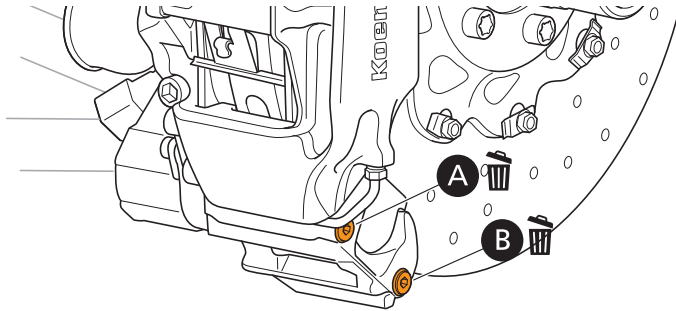

4. Install the new H6 bolt to the parking brake caliper.
Part: 130-174-0553
Threadlocker: Loctite 270
Torque: 10 Nm
5. Remove and discard the H6 bolt **B** from the parking brake caliper.
6. Install the new H6 bolt to the parking brake caliper.
Part: 130-174-0553
Threadlocker: Loctite 270
Torque: 10 Nm
7. Do steps **3** thru **6** on the other side of the vehicle.

Warranty Information

If the repair is covered by the warranty terms, refer to Koenigsegg Warranty Process.

OPERATION

KWO453090

PART NO

Refer to the invoiced kit number (add on new lines)

DISCARDED PARTS

Any discarded parts mentioned in the TSB must be returned or destroyed according to the Dealer Warranty Manual.

