

Wiring for the Wolf Box Camera Pre Wire

Purpose: To correct the wiring on the Wolf Box Camera Pre Wire

Units involved: 2026 GH1 Motorhomes built before July 8, 2026

Flat Rate code and time allowed: 153H10AT for 0.50 hours

Tools Needed:

Wire Stripping Tool
Wire Connector Crimping Tool

Parts Needed:

1 of 5180122, Harness Jmpr 14GA 2-1
3 of 18 to 20 AWG Butt Connectors (shop supplies)

1. Remove the access panel located above the accelerator.
2. Press the red button and disconnect the ground.




3. Pull the plastic clip attached to the driver's side B-pillar out of the wall.



4. Pull the Wolf Box converter out from behind the B-pillar.
5. Cut the red and yellow wire separately.

6. Connect each cut end, on the side with the box to the jumper provided 5180122.
7. Connect the single end of the jumper to the lower end of the red wire.

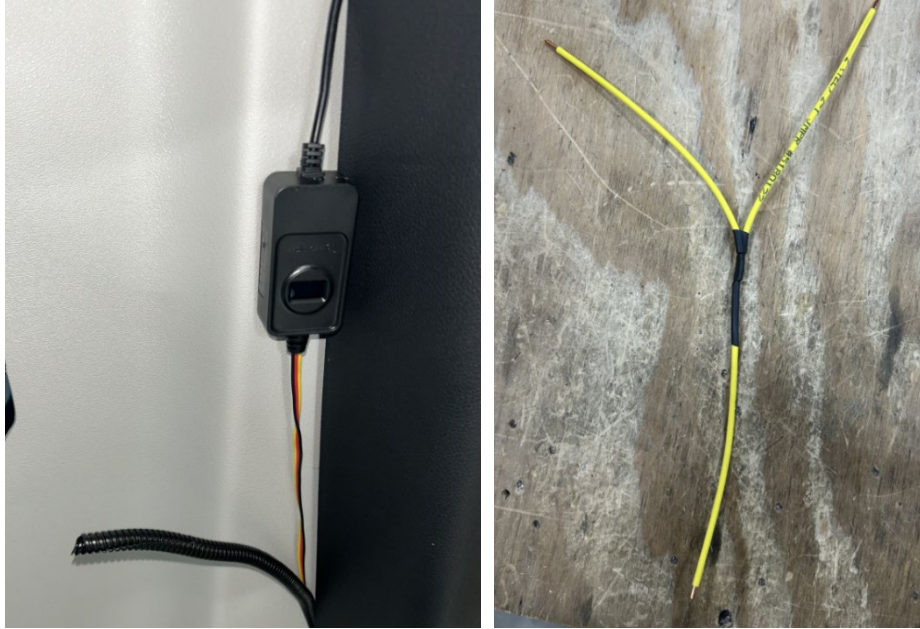

8. Reinstall the B-pillar.
9. Reconnect the ground in steps 1-2.