

Preview Solution CBR-2441-8

Key Fob Calibration And/Or Replacement - VN (4) - AN (4) - PR (4)

Published 29 April 2026


Valid For

Volvo Chassis - Model VN (4)

Mack Chassis - Model PR (4)

Model Year 2025 to Current

It is recommended to use Workshop Toolbox (WSTB), Software (SW) Center to perform the below operations

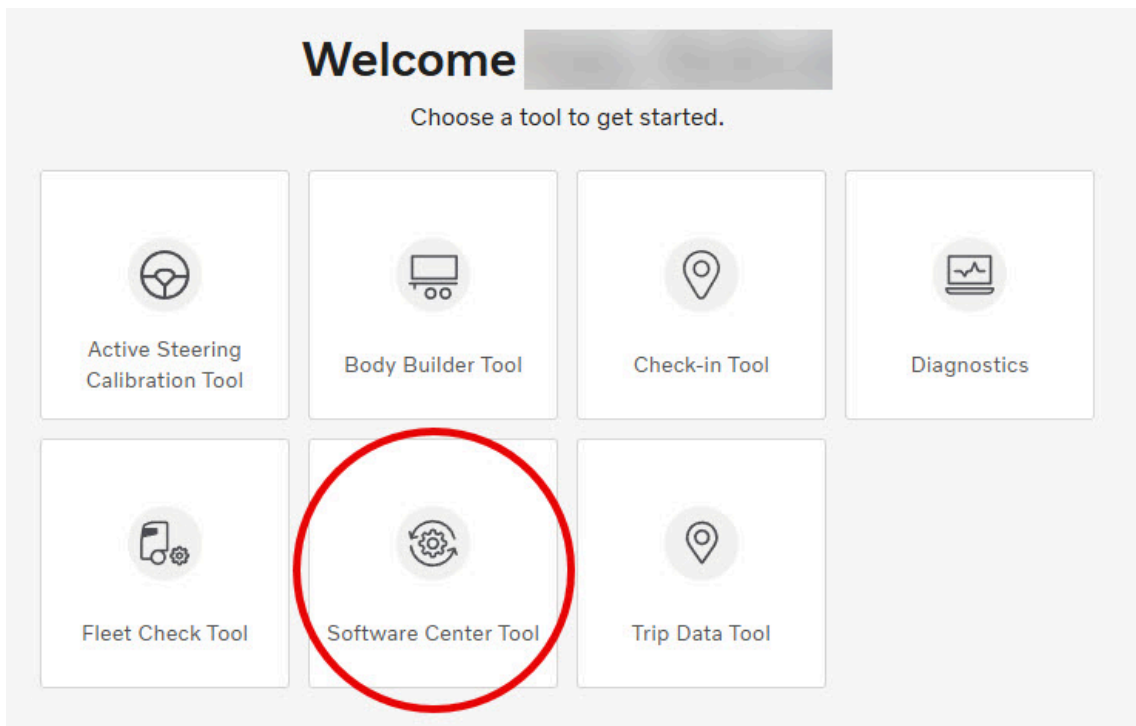

3600-07-03-02 Add or Remove Key Fobs, Diagnostic

CAUTION

Service Information Advisory.
 If you are not properly trained and certified in this procedure, ask your supervisor for training before you perform it.

- ▶ You must read and understand the precautions and guidelines in Service Information, Function Group 3, "General Safety Practices, Electrical and Electronics" before performing this procedure.

Verify the configuration:

***NOTE This process WILL NOT work with configuration 1. If configuration 1 is encountered the remotes can be added via a changeover request by contacting technical services.**



Configuration 1 and 2

Scenarios	Diagnostic Tool	Operation
Add Key	N/A	N/A
Add Key Fob	WSTB SW Center	3600-07-03-02 Add or Remove Key Fobs
Lost all Keys	N/A	N/A
Lost all Key Fobs	WSTB SW Center	3600-07-03-02 Add or Remove Key Fobs
Remove Key Fob	N/A	N/A

Configuration 3

Scenarios	Diagnostic Tools	Operation
Add Key	N/A	N/A
Add Key Fob*	WSTB SW Center	3600-07-03-02 Add or Remove Key Fobs
Lost all Keys	N/A	N/A
Remove Key Fobs*	WSTB SW Center	3600-07-03-02 Add or Remove Key Fobs

Lost all Key fobs**	WSTB SW Center	3600-07-03-01 Add or Remove Keys
---------------------	----------------	----------------------------------

***Must have a previously paired key fob to do this.**

****Special Instructions**

If all key fobs are lost follow special instructions below:

- **Must have access to Software Center.**
- **Must replace SCIM first.**
- **Must do all operations below in Software Center**

Operation 1 (Programming SCIM)

1. Vehicle ignition in off position
2. Install New SCIM
3. Connect to vehicle
4. Navigate to Replace Hardware tab
5. 1700-22-03-12 Replace Control Unit (Security and Cab Interface Module (SCIM)
6. Follow steps inside of operation.

Operation 2 (Adding Key Fobs)

1. Vehicle ignition in off position
2. Navigate to Operations tab.
3. 3600-07-03-01 Add or Remove Keys
4. Start Operation
5. Place key fob on Antenna (Located on top of dash)
6. Hold ignition start button for 3 seconds
7. Repeat steps 5 and 6 for remaining keys

Operation 3 (Adding Key Fob Button Functionality)

1. Vehicle ignition in on position
2. Navigate to Operations tab.
3. 3600-07-03-02 Add or Remove Key Fobs
4. Start Operation
5. Follow calibration steps inside of operation.

- Place the key and key fob on the antenna (pictured below). **NOTE** that PTT depicts the wrong location.



- If more than one key fob is being calibrated, they must be calibrated one at a time.

Related links and attachments

No links or attachments available



Share

to others that might find it helpful



Feedback

[Give feedback](#)

to help improve the content of this article