

3. Open the liftgate and install a new drain valve in each of the two (2) drain holes on the left and right side of the liftgate. Apply a slight amount of sealant on the drain valves used in the liftgate drain holes to keep them from coming loose. (Figure 2)



Figure 2 – Article 14-16-NA

- 4. Raise vehicle on hoist. Refer to WSM, Section 100-02.
- 5. Lower and support rear section of the exhaust system.
- 6. Clean areas on underside of vehicle where seam sealer will be applied. (Figures 3-5 below)

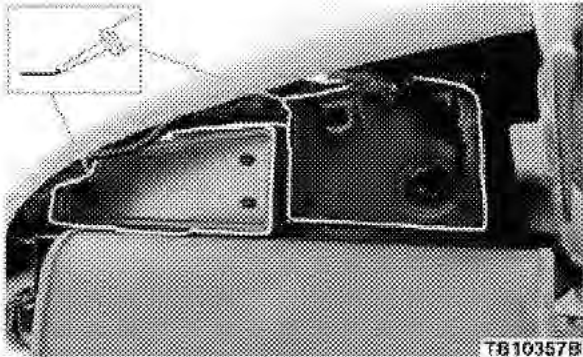


Figure 3 – Article 14-16-NA

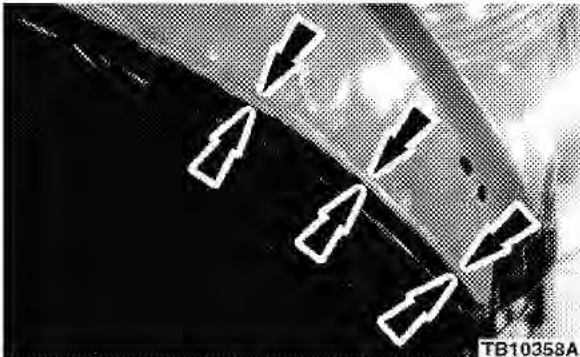


Figure 4 Article – 14-16-NA