


RECALL REPAIR INSTRUCTIONS

KZ-2021-005

INSPECTION OF THE WINNTEC MODEL #6020 REGULATOR

1. Only the Winntec Model #6020 - Dual Stage Double Cylinder - Automatic Changeover Regulator with Pigtails is affected. Replace the regulator and pigtails if the manufacturing date code stamped into the regulator is 2018, 2019 or 2020. Example shown below.

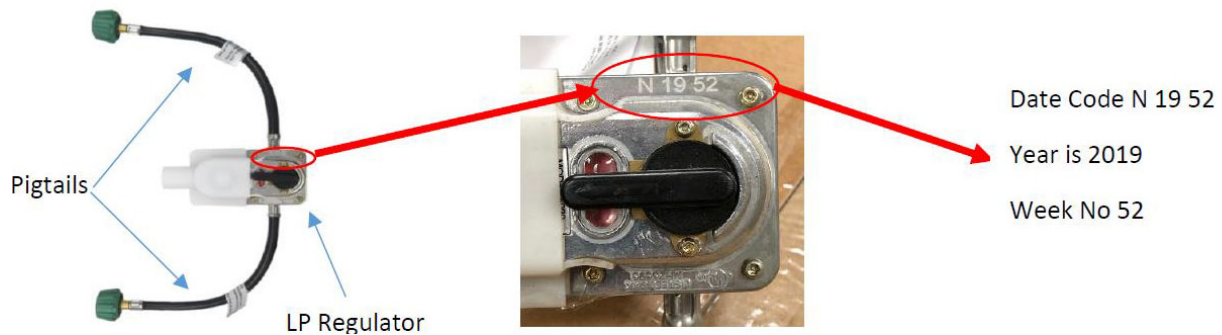

2. File a claim for inspection only if the unit does not have a Winntec model #6020 LP regulator or if the date code stamped into the regulator is not 2018, 2019, or 2020.

REPLACEMENT OF THE WINNTEC MODEL #6020 REGULATOR (and Pigtail Hoses)

1. Close the LP bottles and unscrew the pigtails from the LP bottles.
2. Remove the regulator and pigtail hoses from the unit.
3. Attach the new regulator and pigtail hoses to the unit. (*Acceptable replacements include any two stage LP Regulator which meets UL – 144 EXCEPT the Winntec Model #6020, Enerco/Mr. Heater Models #73766 and 73836(G)*)
4. Connect pigtails to LP bottles.
5. Check fittings, regulator, and connections using approved LP leak detection methods.