



Technical Service Bulletin

GROUP	NUMBER
RECALL	23-01-077G
DATE	MODEL(S)
SEPTEMBER 2023	GV60 (JW1)

SUBJECT: FRONT PASSENGER SEAT BELT REPLACEMENT (RECALL 015G)

★ IMPORTANT

Vehicle repairs related to safety recalls are critically important and must be performed properly in accordance with TSB procedures. Review this bulletin in its entirety prior to beginning any repair work.

As required by federal law, dealers must not deliver new vehicles for sale or for lease to customers until all open recalls have been performed. Dealers must also perform all open recalls on used vehicles, demo, and rental vehicles prior to placing them into customer use and whenever an affected vehicle is in the shop for any maintenance or repair.

Access the "Vehicle Information" screen via WEBDCS to identify open recalls.

Description: Some 2023MY GV60 (JW1) vehicles may exhibit a condition where the front passenger seat belt does not pull out normally after being pulled out and retracted. This may be due to improper assembly of the Auto Locking Retractor (ALR) in the front passenger seat belt. Follow the steps in this TSB to replace the front passenger seat belt.


Applicable Vehicles (Certain):

- 2023MY GV60 (JW1) produced from 11/05/2022 – 3/31/2023

NOTICE

This recall campaign can only be performed by EV certified Genesis retailers.

Parts Information:

Model	Part Name	Part Number	Figure	Remarks
GV60 (JW1)	Front Passenger Seat Belt	888B0-CU500LGW		Order correct part number according to VIN Refer to the parts catalog for vehicle's seat belt part number
		888B0-CU500NNB		
		888B0-CU500LGZ		

Circulate To: General Manager, Service Manager, Parts Manager, Warranty Manager, Service Advisors, Technicians, Body Shop Manager, Fleet Repair

Warranty Information:

Model	Op. Code	Operation	Op. Time	Causal Part	Nature Code	Cause Code
GV60 (JW1)	31D093R0	Front Passenger Seat Belt Replacement – (Part ending in 'LGW')	0.4 M/H	888B0-CU500LGW	I11	ZZ3
GV60 (JW1)	31D093R1	Front Passenger Seat Belt Replacement – (Part ending in 'NNB')	0.4 M/H	888B0-CU500NNB	I11	ZZ3
GV60 (JW1)	31D093R2	Front Passenger Seat Belt Replacement – (Part ending in 'LGZ')	0.4 M/H	888B0-CU500LGZ	I11	ZZ3

NOTE 1: Submit claim on Claim Entry Screen as “Campaign” type.

NOTE 2: If a part is found in need of replacement while performing this recall and the affected part is still under warranty, submit a separate claim using the same repair order. If the affected part is out of warranty, submit a Prior Approval request for goodwill consideration prior to performing the work.

NOTE 3: This TSB includes Repair validation photos. Op times include VIN, Mileage, and Repair validation photos as outlined in the Digital Documentation Policy.

NOTE 4: The incident parts are subject to callback through the normal Warranty Technical Center (WTC) parts return process. **Claim is subject to debit if the part is not returned.**

Video Procedure:

Click on the link below for video information on the procedure in this Campaign.

Genesis Service Learning – Recall (015G) Service Procedure

<https://vimeo.com/859733592/062ecc7d6c>

Service Procedure:

STUI



This TSB includes Repair validation photos. Refer to the latest Warranty Digital Documentation Policy for requirements.

Front Passenger Seat Belt Replacement

1. Disconnect the negative (-) battery terminal.
2. Remove the center pillar trim (A).

Refer to Shop Manual:

- **Body (Interior/Exterior/Electrical) > Interior Trim > Center Pillar Trim > Removal and Installation**


CAUTION

Wear gloves to prevent hand injuries.

NOTICE

Use a trim tool to prevent damage to interior trim.


Be careful not to bend or scratch trim and panels.

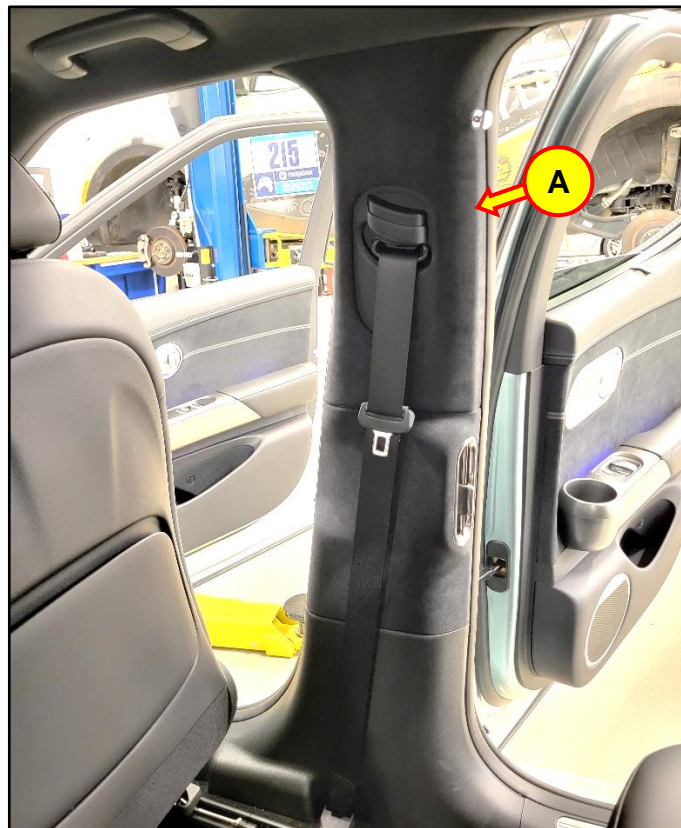

3. Remove the front seat belt upper anchor (B) after removing the bolt.

Tightening Torque:


lb-ft	39
N.m	53

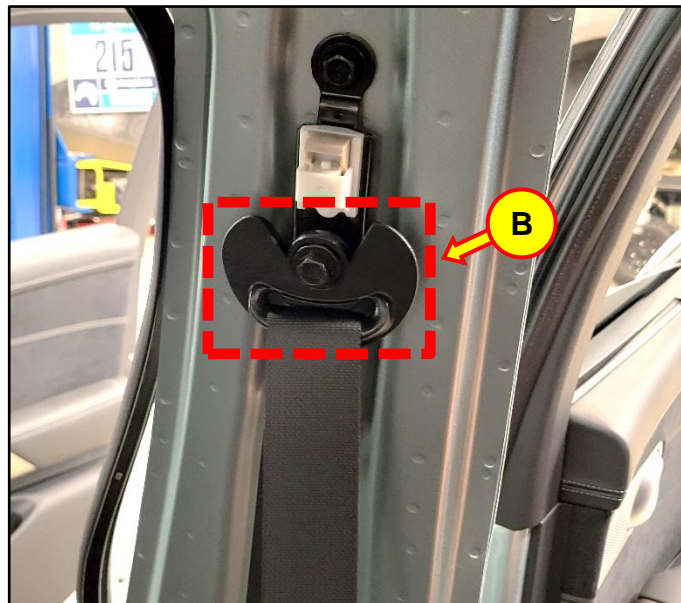

- Remove the front seat belt lower anchor bolt (C).

Tightening Torque:


lb-ft	39
N.m	53

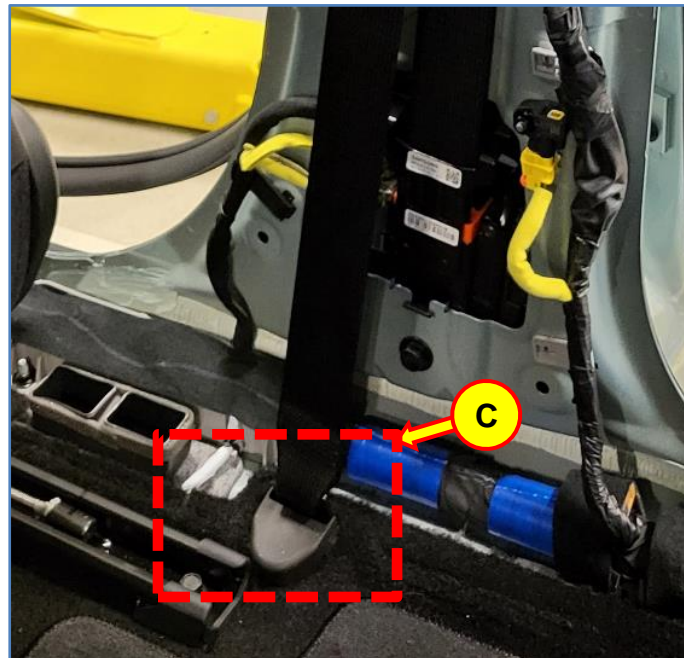

- Disconnect the front seat belt pretensioner connectors (D) and ALR connector (E).

Refer to Shop Manual:

- Body (Interior/Exterior/Electrical) > Seat Belt > Front Seat Belt Pretensioner > Removal and Installation**

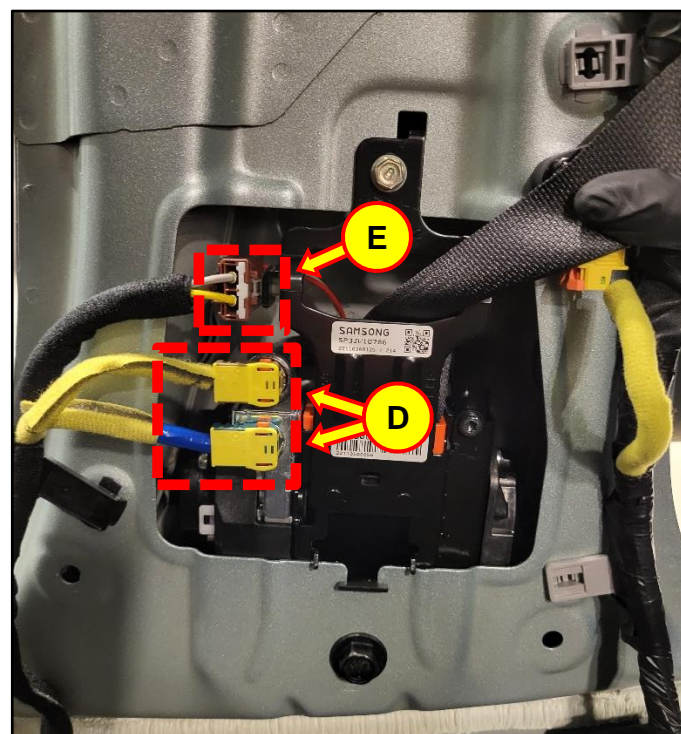


6. Remove the front seat belt pretensioner assembly(F) after removing the bolts (G, H).

Tightening Torque – Bolt F:

lb-ft	7.3
lb-in	87
N.m	9.8

Tightening Torque – Bolt G:

lb-ft	39
N.m	53

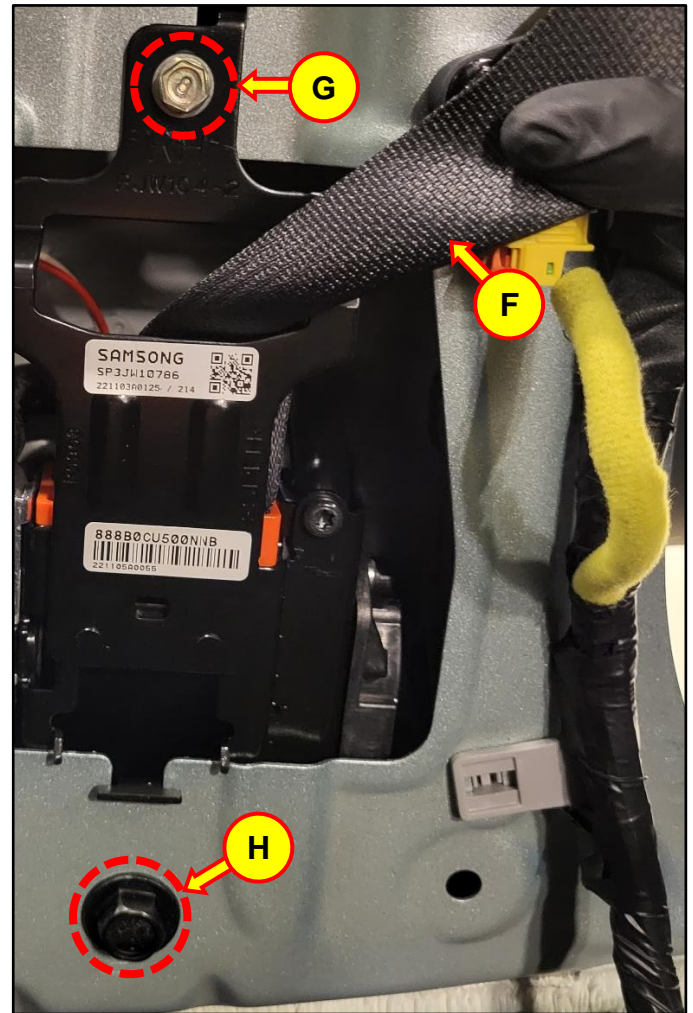

7. Install the supplied new front seat belt assembly.

NOTICE

Be careful not to twist the seat belt during installation.



- 8.

STUI

Using STUI, take a photo of the new seat belt assembly with the last 6 digits of the VIN and the date of repair on a piece of paper.

Upload the photo to STUI.



Example of STUI Photo

9. Install all removed parts in the reverse order of removal.

NOTICE

- Install all connectors securely.
- Replace any damaged clips with new ones.

10. Reconnect the negative (-) battery terminal.
11. Turn ignition switch ON and confirm that the airbag warning light turns ON for about 6 seconds, then goes OFF.
12. Confirm that the new seat belt pulls out normally after being pulled out all the way and then retracts completely.
13. Service procedure is complete.