

Initial Calibration of Compass During PDS

Service

General Category

Section Pre-Delivery Service Market




Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2014	IS250, IS350	

USA

Introduction

2014 model year IS 250/350 vehicles are equipped with a compass in the rear view mirror. Use the following procedure to complete initial calibration of the compass during Pre-Delivery Service (PDS).

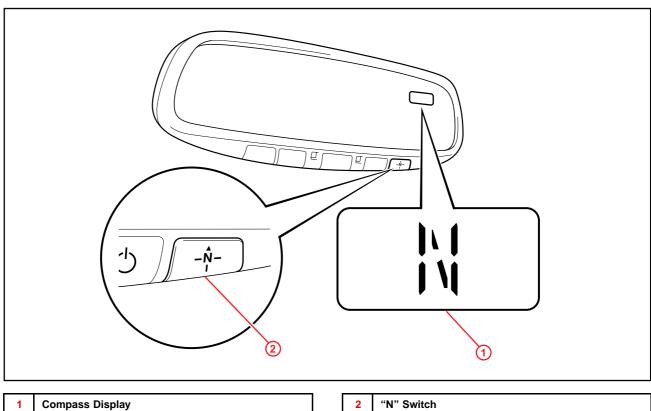



Initial Calibration of Compass During PDS

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	1	-	-	-

Compass Calibration Procedure

1. Cycle the ignition switch to the "IG-ON" position and check that the direction (N, NE, E, SE, S, SW, W, NW) appears on the compass display.

Figure 2.


2. Push and hold the "N" switch for approximately 6 seconds until the zone number (1 - 15) appears on the display. Then push the switch to select the number of the zone where the vehicle is located.

NOTE

Pushing the "N" switch turns the compass display ON or OFF.

See the map for zone reference.


Figure 3.

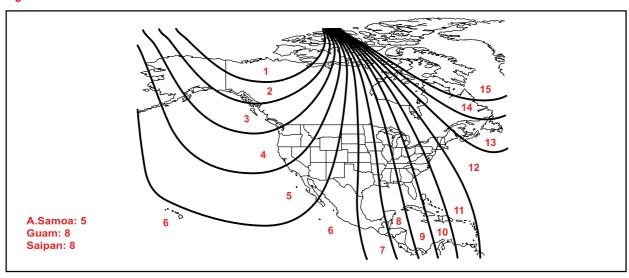

Initial Calibration of Compass During PDS

Compass Calibration Procedure (Continued)

3. Start the engine and push and hold the "N" switch Figure 4. for about 12 seconds until "CAL" appears on the display.

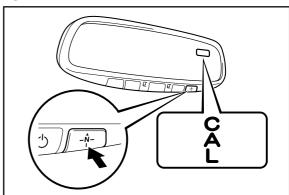

4. Drive the vehicle slowly at 5 mph (8 km/h), or less, in a circle until the direction is displayed. If there is NOT enough space to drive in a circle, drive around the block until the direction is displayed.

Once the direction is shown on the display, calibration is complete.

- Do NOT perform calibration of the compass in a place where the Earth's magnetic field is subject to interference (underground parking, under a steel tower, between buildings, roof parking, near a railroad crossing, near a large vehicle, etc.)
- During calibration, do NOT operate electric systems (sliding roof, power windows, etc.) as they may interfere with the calibration.