



SERVICE BULLETIN

Classification:

EL13-016

Reference:

NTB13-060

Date:

June 3, 2013

2013 ALTIMA SEDAN; NAVIGATION HVAC AND BASE AUDIO DISPLAYS INTERMITTENTLY DO NOT ILLUMINATE

APPLIED VEHICLE: 2013 Altima Sedan (L33)

SERVICE INFORMATION

On vehicles equipped with Navigation or Base Audio, the HVAC Display Screen (Figure 1, page 2), Base Audio display (Figure 2, page 2) and overhead Lamp (located in overhead console) may shut off (black out) if the daytime or nighttime illumination controls are set to less than 1 bar.

- Under these conditions the operation of the HVAC display, Base Audio unit and the overhead lighting illumination are possibly operating correctly, simply need adjustment, and should not be replaced.

NOTE: Daytime and nighttime illumination can be set independently of each other through the same control located to the left of the steering wheel. If either daytime or nighttime illumination is set to less than 1 bar, these symptoms can occur.

These symptoms can occur when:

- The illumination control (Figure 3, page 2) is set to less than 1 bar.

And

- The headlights are turned on either manually or automatically.

Or

- The windshield wipers make more than 4 strokes, and the auto headlights are activated.

Or

- The headlights are in "AUTO" and the fog lamps are turned to "ON".

- To set the daytime illumination the headlights must be off.
- To set the nighttime illumination the headlights must be on.

Nissan Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. NOTE: If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Nissan dealer to determine if this applies to your vehicle.

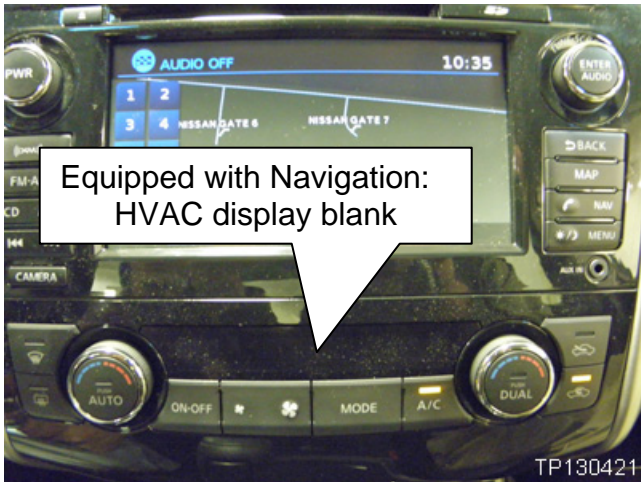


Figure 1

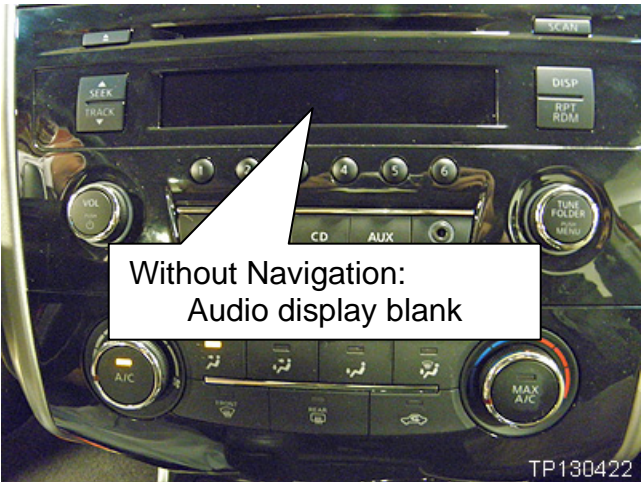


Figure 2

- Figure 1 and Figure 2 show the display being blank due to illumination being adjusted to less than 1 bar.

- Figure 3 shows the illumination control located to the left of the steering wheel.

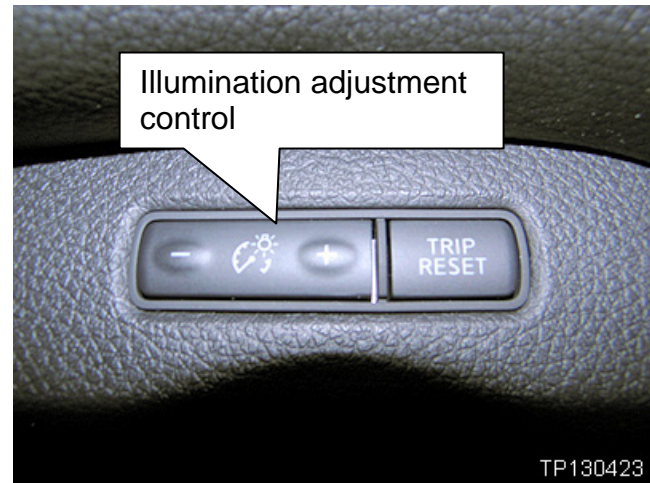


Figure 3

- Figure 4 shows the Meter with 1 bar of illumination adjustment left.



Figure 4