



Technical Journal

TITLE:

Front lid on center console comes loose or gets stuckREF NO:
TJ 30825.2.0ISSUING DEPARTMENT:
Technical ServiceCAR MARKET:
United States and CanadaPARTNER:
3 US 7510 Volvo Car USAISSUE DATE:
2015-09-29STATUS DATE:
2016-09-22FUNC GROUP:
8370FUNC DESC:
Lid, cover plate**Page 1 of 16****“Right first time in Time”****Attachment**

File Name	File Size
Lid loose.pdf	0.1802 MB
TJ 30825.pdf	6.3211 MB

Vehicle Type

Type	Eng	Eng Desc	Sales	Body	Gear	Steer	Model Year	Plant	Chassis range	Struc Week Range
256							2016-2016	21	0000561-0022195	201505-201533

CSC Customer Symptom Codes

Code	Description
M1	Center console/Loose, poor fit, warped, wrinkled
N4	Center console/Tears, snags, cracks
N6	Center console/Blistered/bubbled/peeled

VST Operation Number

VST Operation Number	Description
98608-2	Cover/armrest tunnel compartment adjust

DTC Diagnostic Trouble Codes



Text

DESCRIPTION:

Some customers may experience that the front lid on center console may come loose or get stuck. See "Lid loose.pdf" on page 3.

VEHICLE REPORT:

Yes, please submit a Vehicle Report if the service solution described in this TJ has no effect. Use concern area "Vehicle Report" and sub concern area "Support Not Needed", use function group 8370.

SERVICE:

If the lid is not scratched or damaged, it can be reinstalled. Use attached instructions. Use the same method also if the lid needs to be replaced with a new lid.

To view TJ attachment continue to next page. This TJ has two attachments.





Volvo Car Customer Service

TJ 30825

Title	Cover/armrest tunnel compartment	Page	1 (13)
Action	Adjustment	Operation number:	98608-2

Affected vehicles

Model year	Model
2016	XC90 (16-)

Materials

Materials	Qty.	Part No.	Notes
Cable tie	2.0	983747	


Equipment

Designation	Part No.
Interior trim remover	

Removal

Note! Removal steps in this procedure may contain installation details.

Orientation view

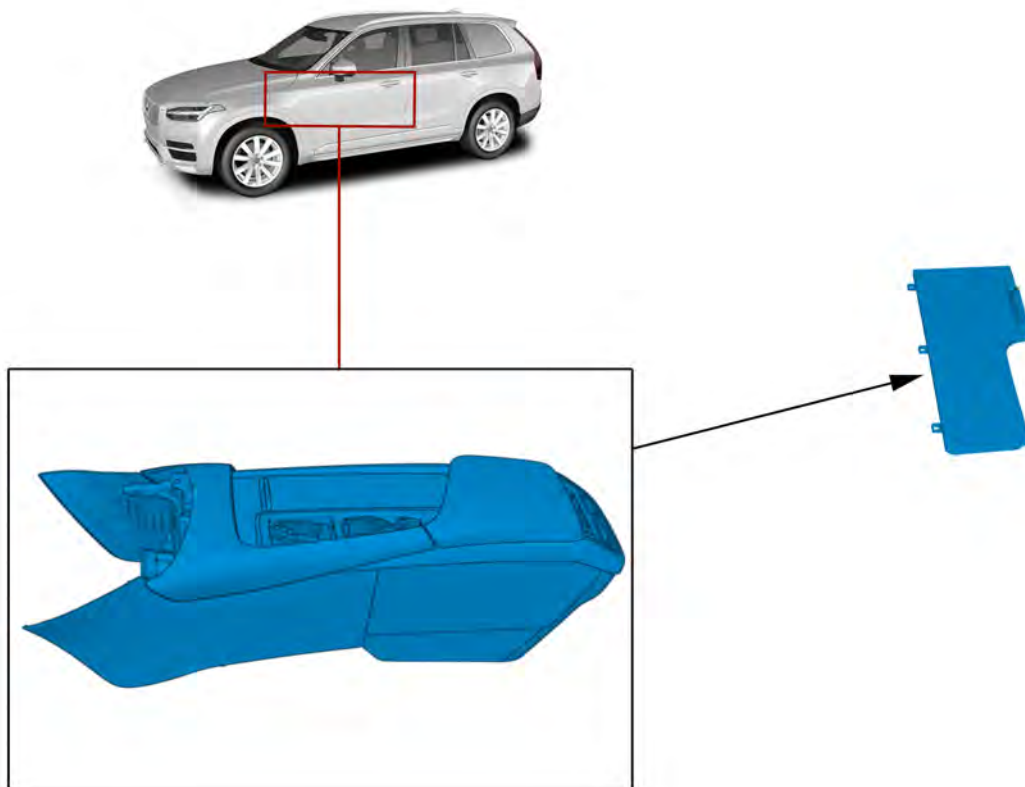

Remove the following components:

- Center console switch module CCSM , refer to:
 - Removal, replacement and installation
 - 8 - Body and interior
 - 87 - Climate units
 - 871 - control
- right front seat , refer to:
 - Removal, replacement and installation
 - 8 - Body and interior
 - 85 - Interior
 - 852 - front seat, drivers seat, seat bench type

Set the vehicle to Inactive mode, described in user mode , refer to:



General Information

3 - Electrical system

30 - General


300 - general

Orientation view

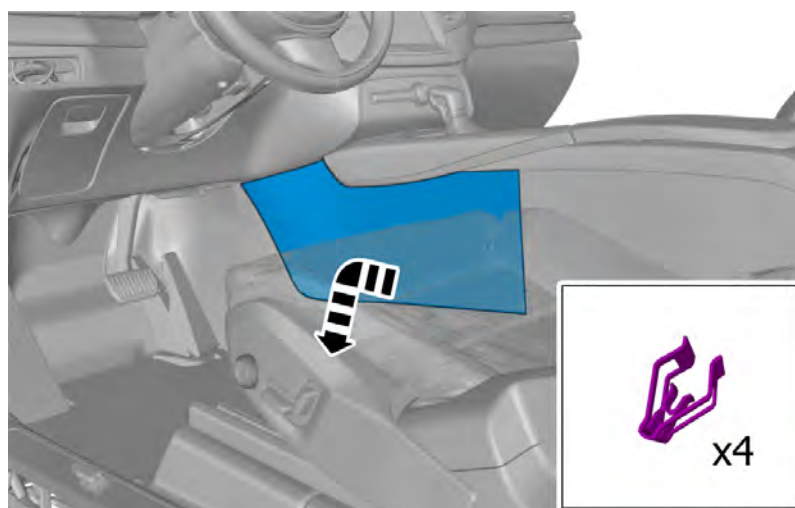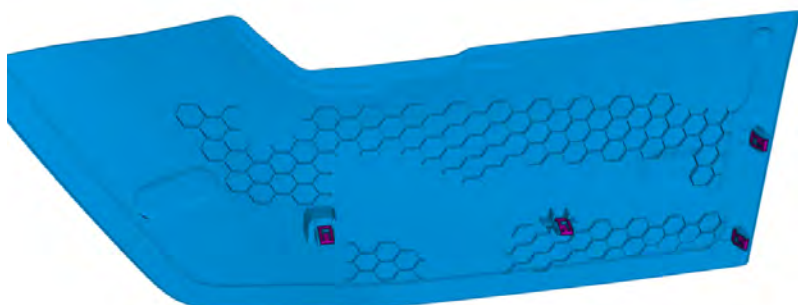


Remove the marked part.
On both sides.

Applies to the right-hand side

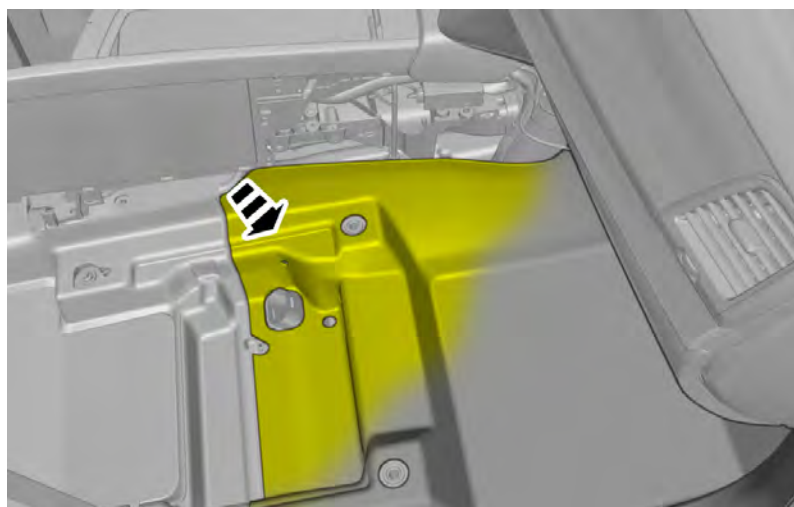


Fold the carpet to the side.

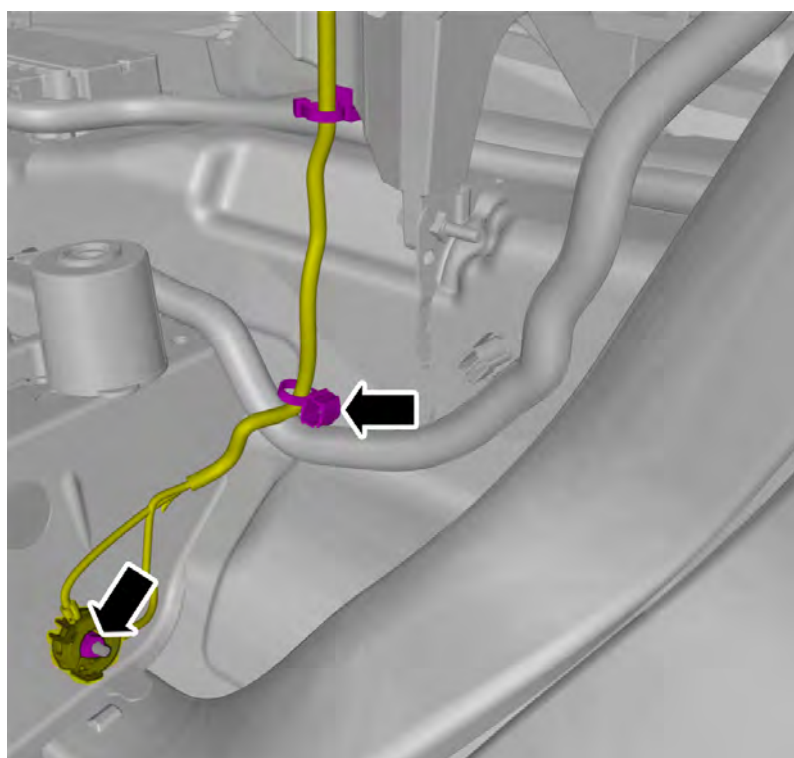

Loosen the clip.
Remove the nut.


Torque:
M6 , 10 Nm


Applies to the left-hand side:

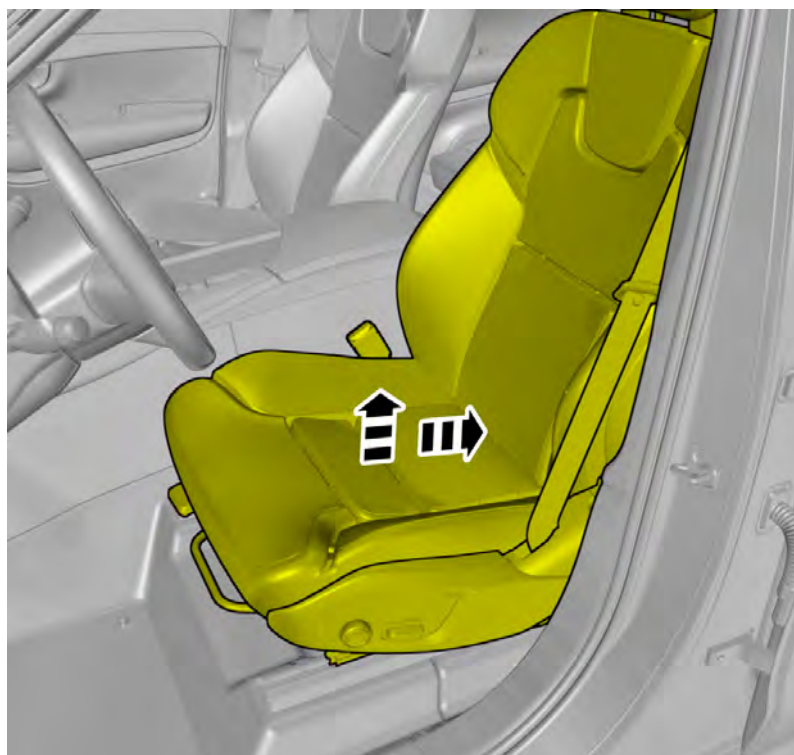


Remove the marked part.

Use: Interior trim remover

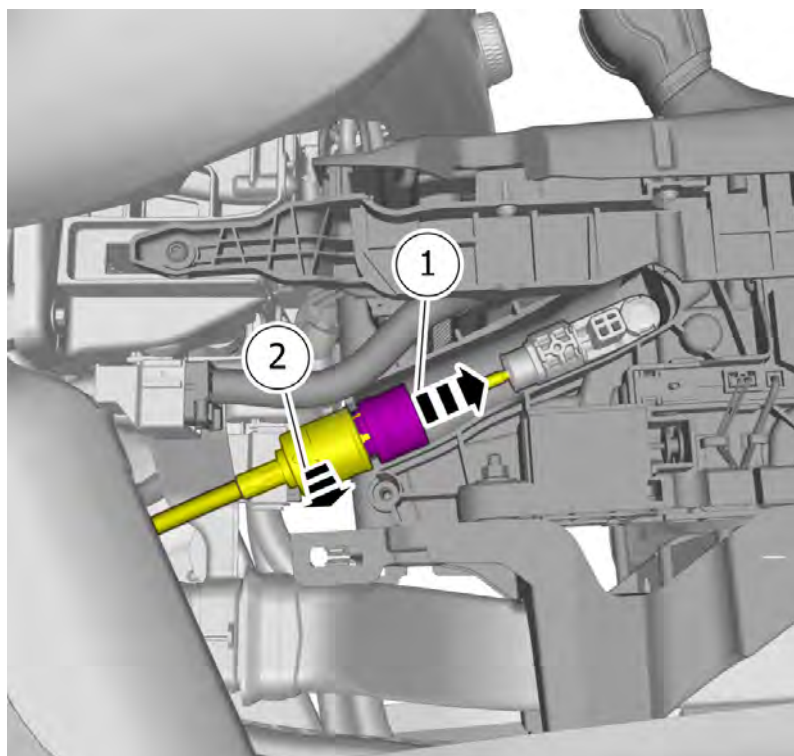

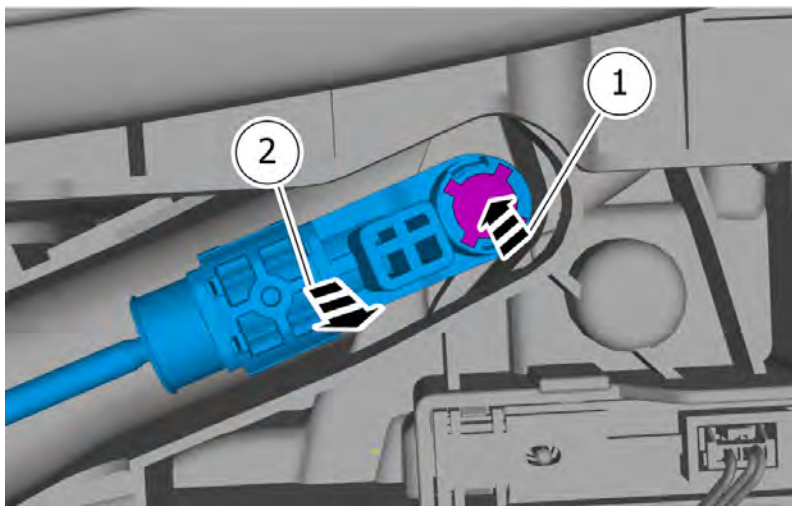

Remove the marked part.

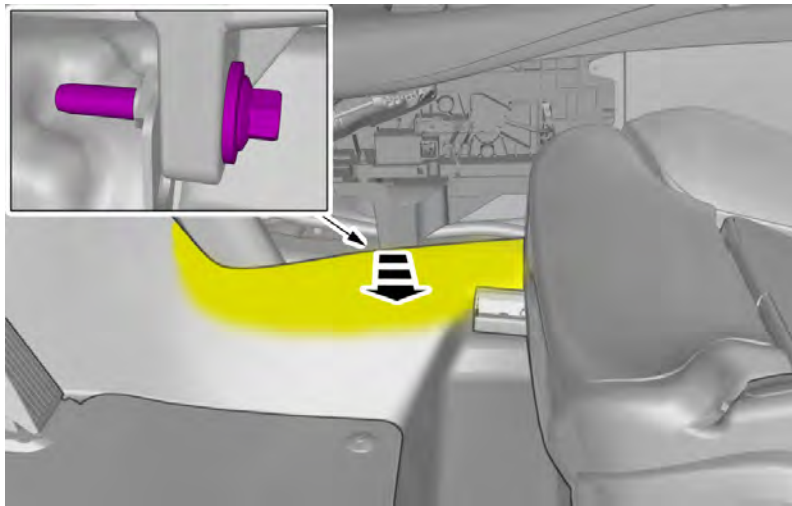


Fold the carpet to the side.

Remove the screw.

On both sides.

Torque:



Floor console, to Body , 11 Nm

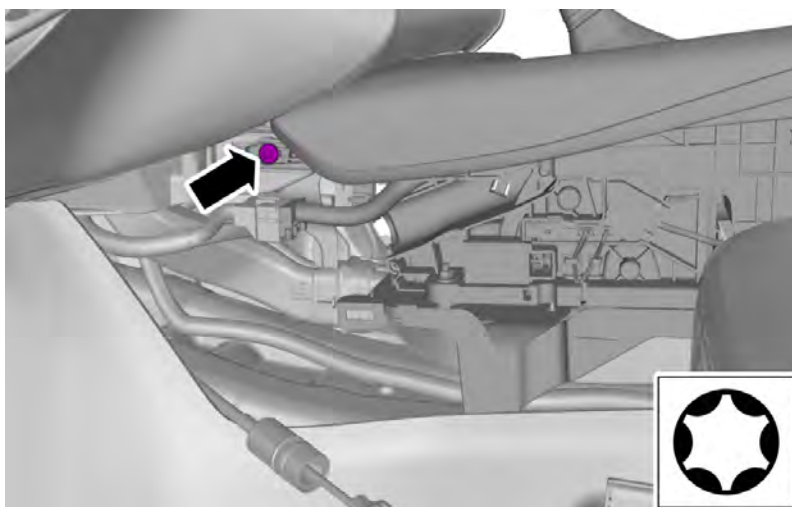


Remove the screw.

On both sides.

Orientation view

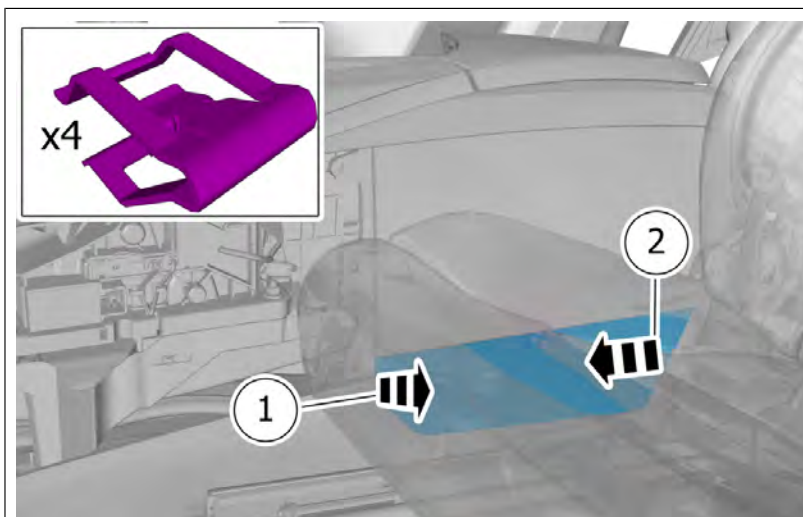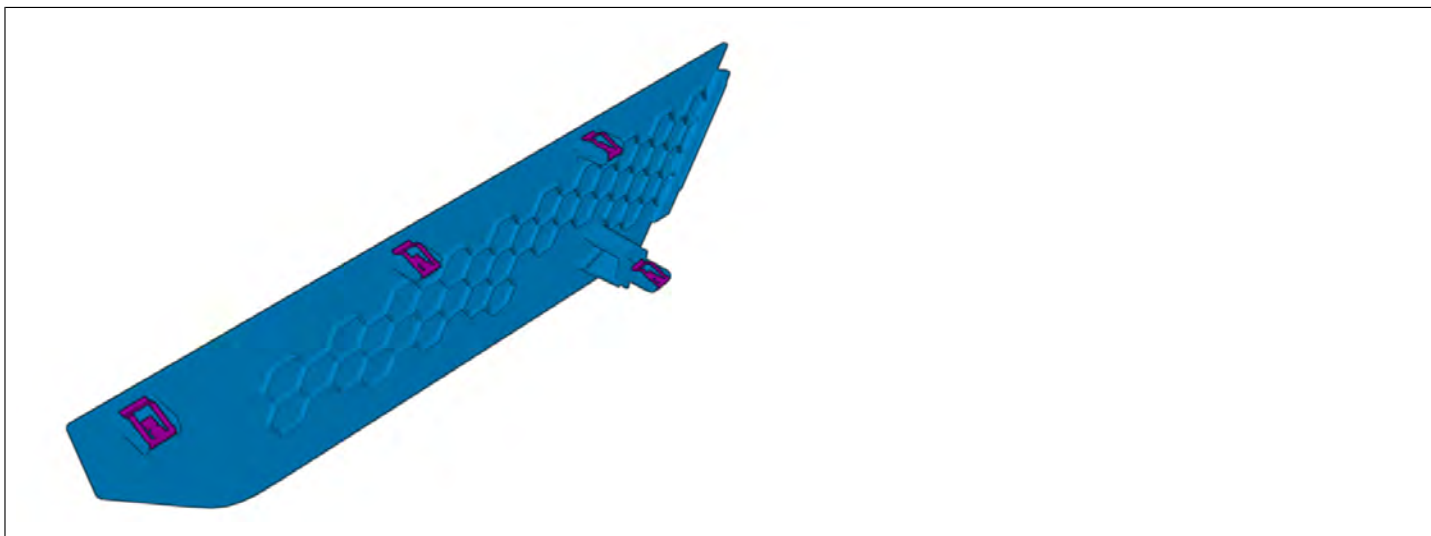

Remove the marked part.
On both sides.

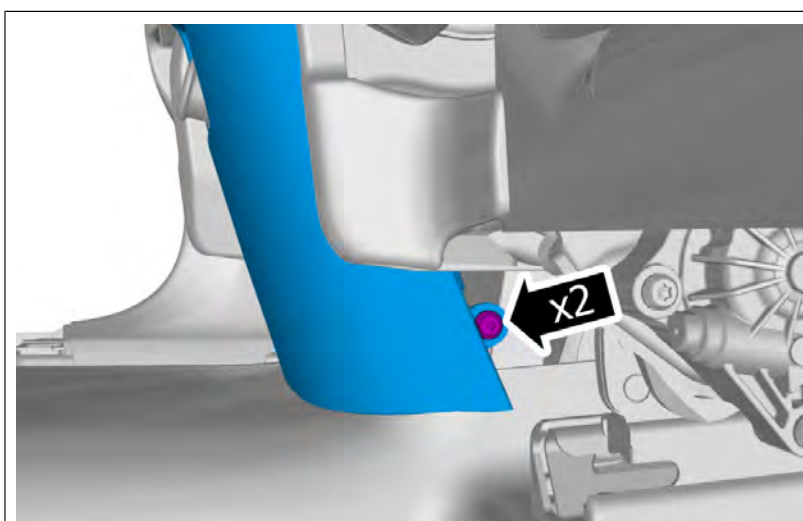


Remove the screw.
On both sides.




Caution! Take extra care when handling the component.

Remove the marked part.

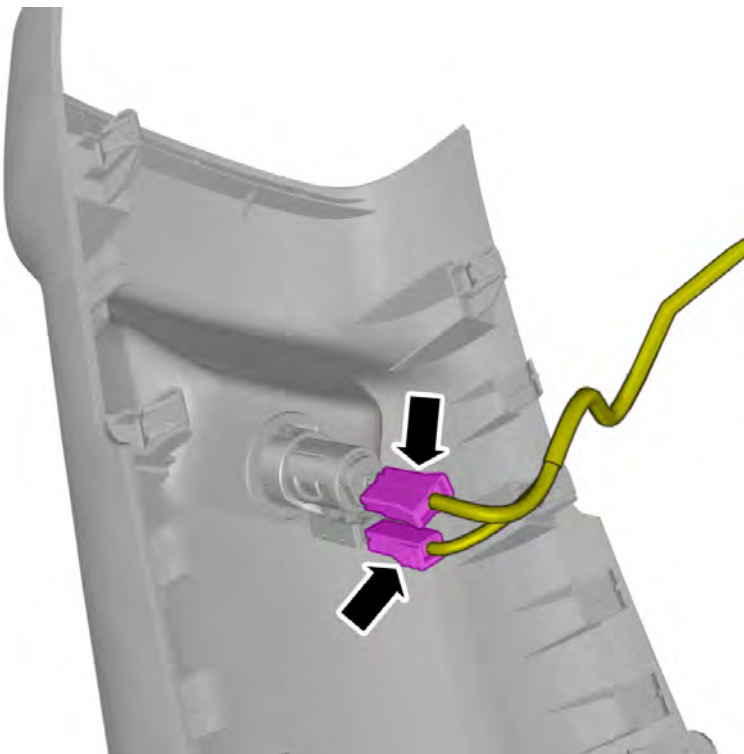

Caution! The number of connectors, cables and cable ties may vary depending on the vehicle specification.


Disconnect the connectors.

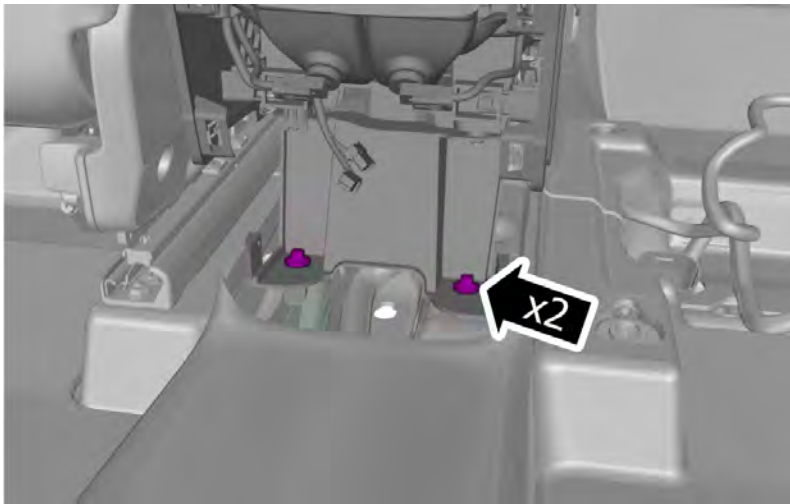

Remove the screws.


Torque:

Floor console, to Body , 11 Nm

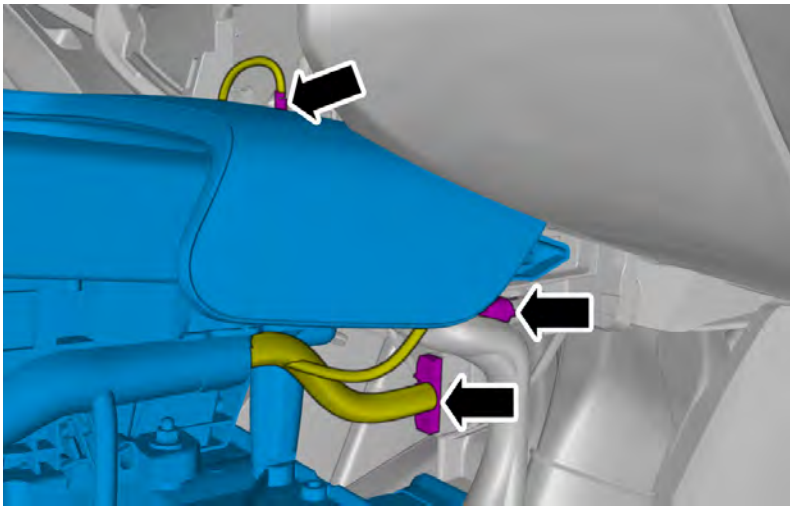


Caution! The number of connectors, cables and cable ties may vary depending on the vehicle specification.

Disconnect the connectors.

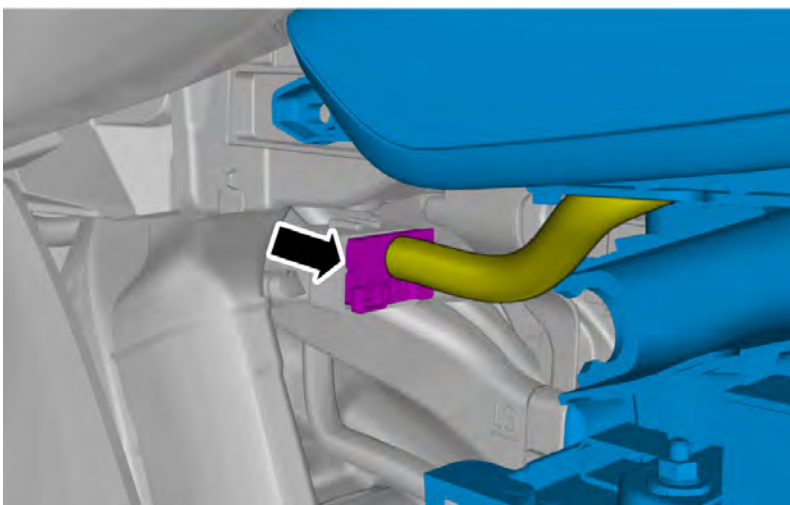


Caution! The number of connectors, cables and cable ties may vary depending on the vehicle specification.

Disconnect the connectors.

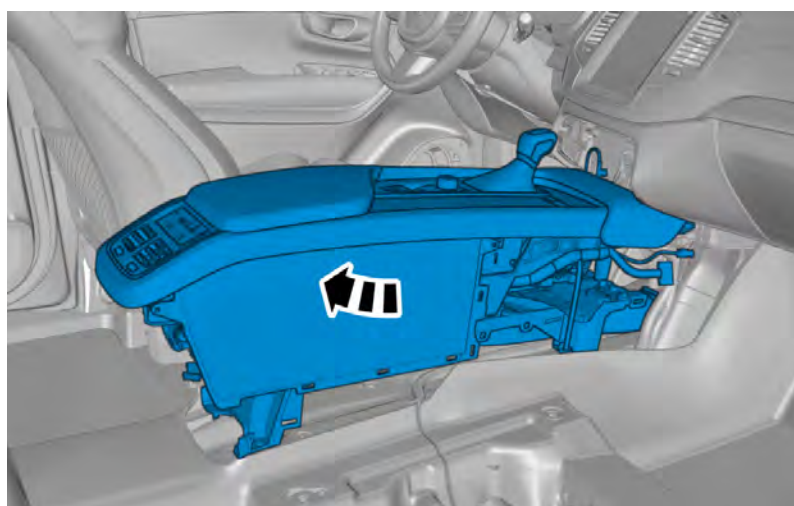


Note! This step requires the aid of another technician.


Remove the marked part.

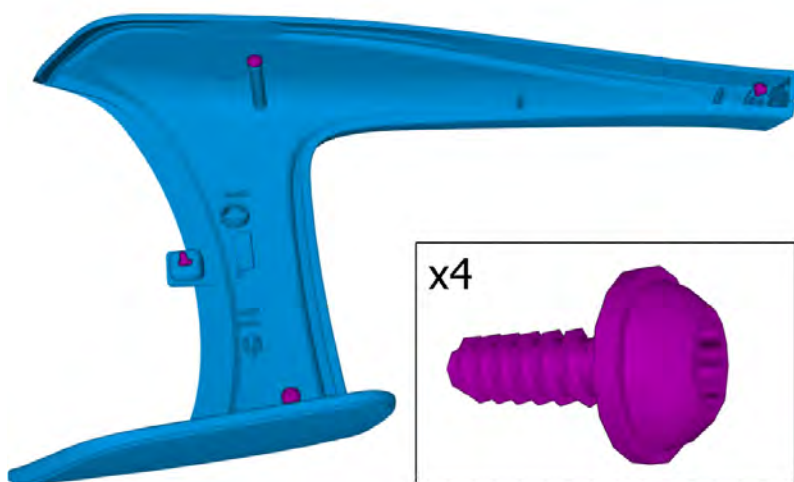


Remove the screws.

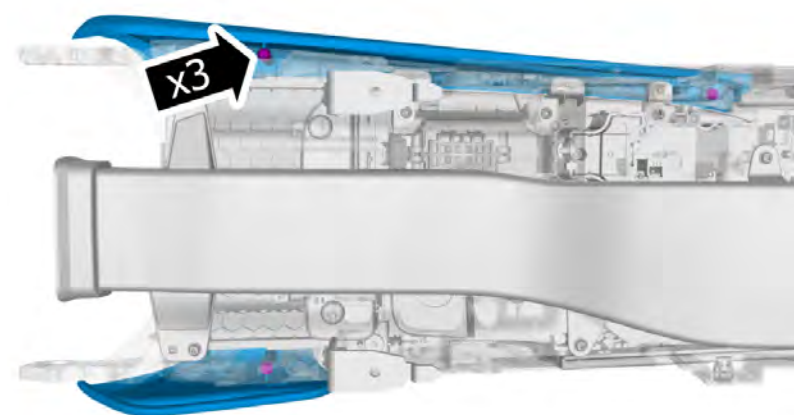

Remove the screw.

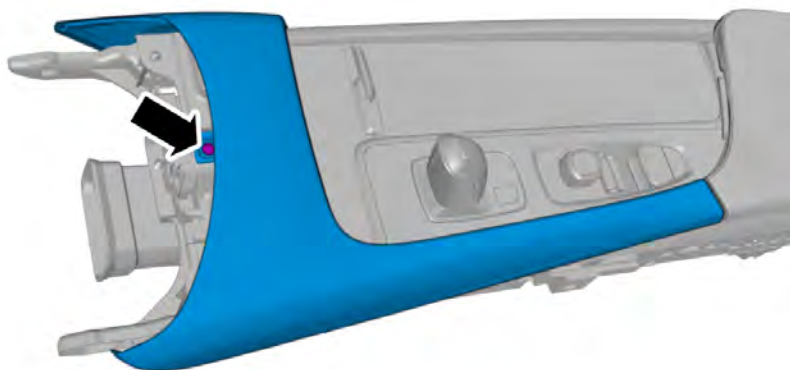


- 1 . Fold marked part to one side.
- 2 . Remove the marked part.

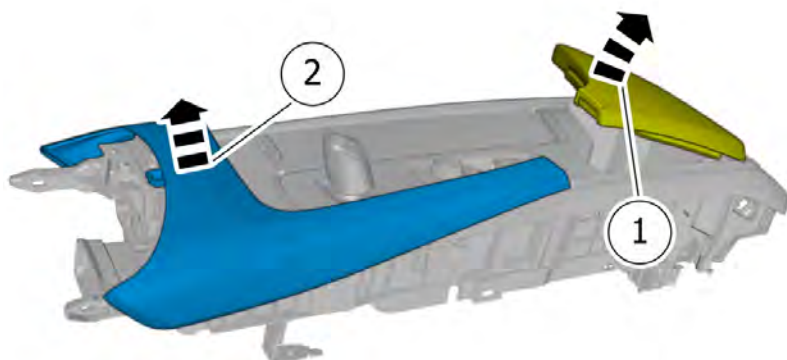


Installation

Note! Make sure that the component is installed.



Install the marked component.

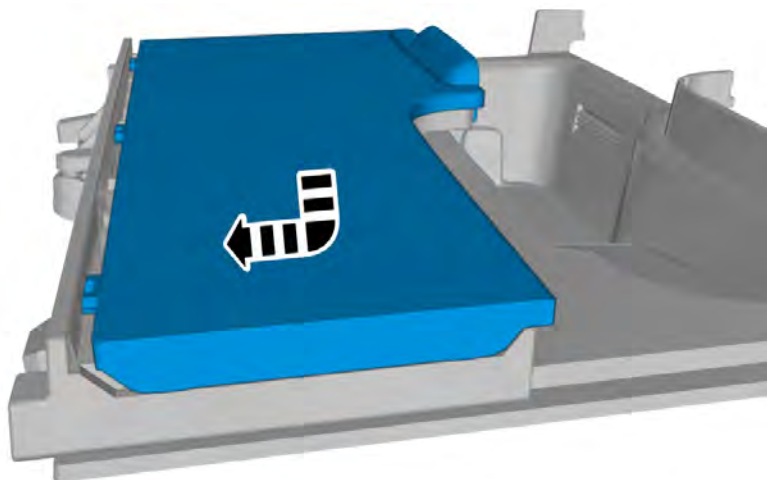

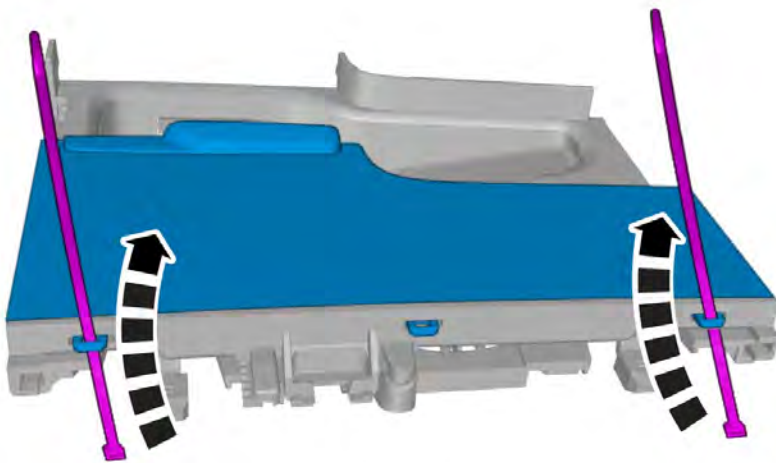

Caution! Make sure that the components are positioned correctly.

Tighten the cable ties.

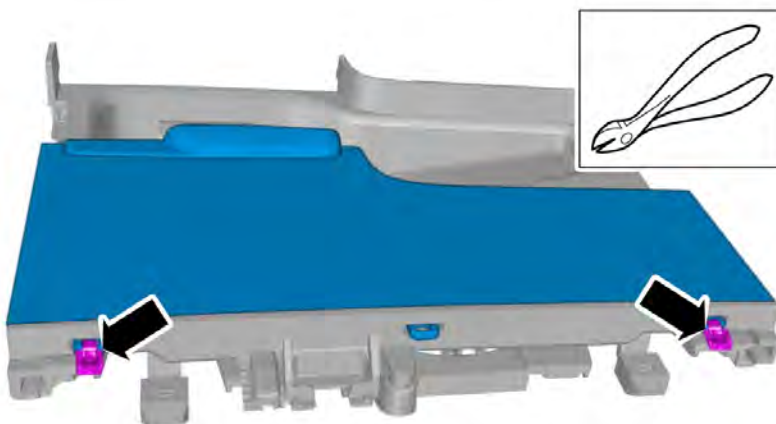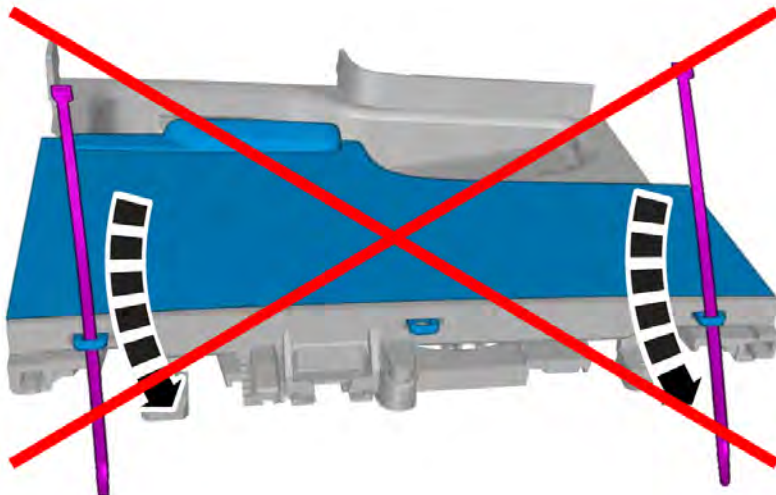


Cut


Installation

Check for correct operation.

To install, reverse the removal procedure.

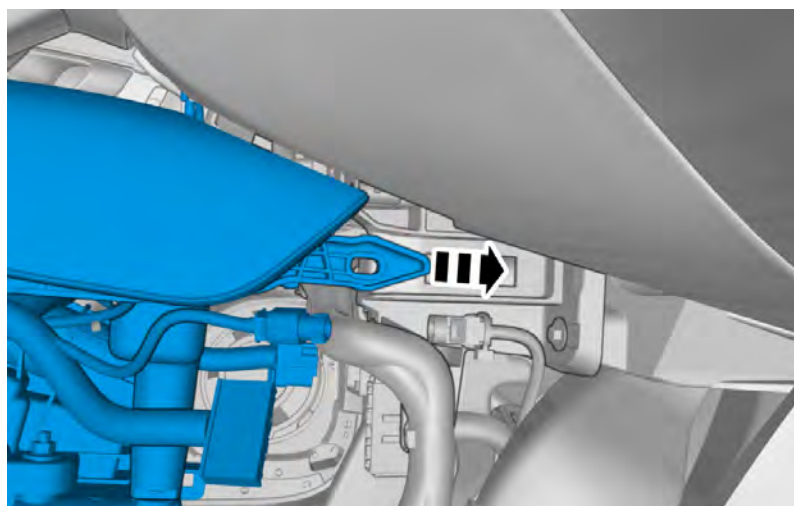

Note! Note the position.

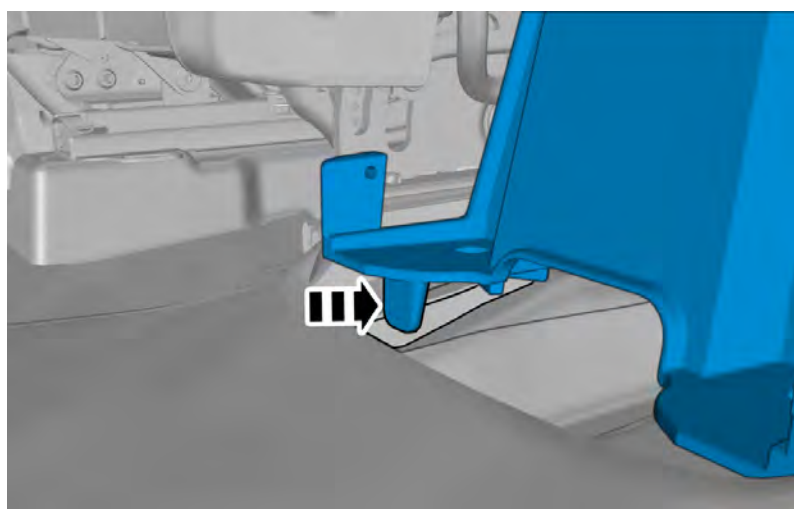

Note! Note the position.

If necessary

Perform floor console, transferring components ,
refer to:

Removal, replacement and installation

8 - Body and interior

88 - Interior equipment

882 - interior equipment