



Technical Bulletin 178

05.2017

Contents

Item	Subject	Model Affected
178.1	Front Brake Master Cylinder Reservoir	Street Scrambler

Item: .1

Description: Front Brake Master Cylinder Reservoir


Model Affected: Street Scrambler

For the transportation of the Street Scrambler in its packing crate, the front brake master cylinder reservoir bracket has been repositioned 90° anticlockwise. To correctly position the front brake master cylinder reservoir bracket, follow the procedure described below.

⚠ Caution


To prevent paint damage, do not spill brake fluid onto any area of the bodywork. Spilled brake fluid will damage paintwork.

1. Remove the fixing and detach the brake fluid reservoir from its bracket. Ensure the brake fluid reservoir remains in an upright position.

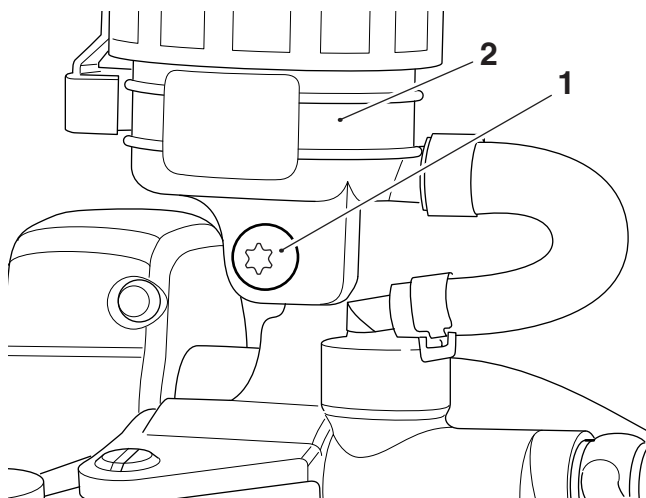

1. Fixing
2. Brake fluid reservoir

2. Remove the temporary fixing securing the front brake fluid reservoir bracket to the master cylinder mounting.

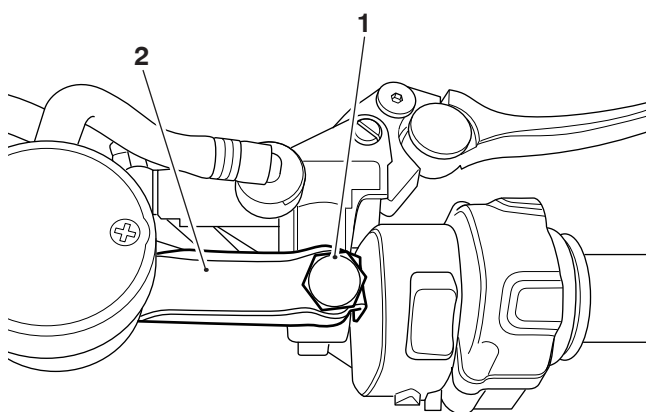


ckcz

1. Fixing
2. Front brake fluid reservoir bracket

3. Move the bracket 90° clockwise so it is pointing to the front of the motorcycle. Temporarily refit the fixing securing it to the front brake master cylinder.

4. Refit the brake reservoir to its bracket and tighten the fixing to **5 Nm**. Ensure the brake hose from the reservoir to the brake master cylinder does not get kinked or taught.

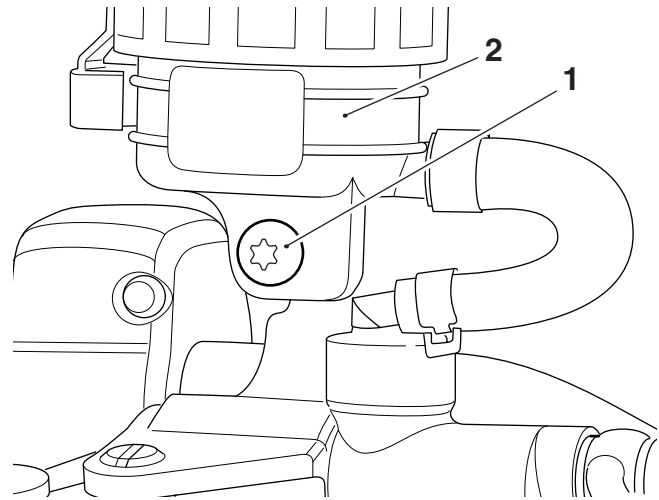

1. Fixing

2. Brake fluid reservoir

5. Remove the fixing securing the front brake fluid reservoir bracket to the front brake master cylinder.
6. Fit and adjust the mirrors to give rear visibility in the riding position.
7. Tighten the mirror lock nuts to **17 Nm**.
8. Continue with the Street Scrambler assembly as described in the Part 2 motorcycle assembly guide.

Please mark your copy of the Part 2 motorcycle assembly guide with this information. For the electronic Part 2 motorcycle assembly guide, store this information in a readily accessible place and refer to it often. This information will be included in the next update.

Circulation

Initial and date when read and return to central file holder

Service Manager	Parts Manager	Sales Manager	Workshop Supervisor	Technician 1	Technician 2