



To All Authorized Lamborghini Dealers and Service Centers  
Service Area Manager  
From Customer Service Department  
Subject Information Bulletin: Opening the Fuel Door Manually in Case of  
Emergency  
Group BI.01.18  
Date January, 12, 2018  
Pages 3

### **Subject**

Information Bulletin: Opening the Fuel Door Manually in Case of Emergency.

### **Model/VIN Range**

Aventador and Huracán

### **Information from the field**

Procedure for opening the fuel door of Huracán and Aventador vehicles manually in case of emergency.

### **Description of required procedures**

Lamborghini dealers are informed that the emergency opening procedure of the petrol window described in the owner's manual supplied with the cars is incomplete.

This procedure must be carried out in case of failure of the fuel flap actuator and the procedure described in the maintenance manual does not exert a slight pressure on the flap while pulling the opening strap located in the engine bay. Perform the manoeuvre described in the manual precisely and not only will fail to produce the desired effect, but the opening cord may also be torn off if the pressure is excessive.

Automobili Lamborghini S.p.A. wishes to supplement the operations described in the handbook by providing the following complete procedure:



### **WARNING!**

Wait for the engine to cool down completely before opening the hood. You may be seriously burned!

- Open the engine hood;

---

The procedures and information published herein are strictly confidential and are intended exclusively for recognized professionals and persons who are authorized to receive said information. All copyrights are the property of Automobili Lamborghini S.p.A. pursuant to copyright law. The company reserves the right to make updates and modifications as needed. The reprinting, reproduction, distribution to unauthorized persons and/or to third parties, and the partial or complete translation of the material contained herein are prohibited without the express written consent of Automobili Lamborghini S.p.A.


doc. no.: L/V6\_M06 Rev.[02]



- Locate the ring situated on the right side of the engine compartment;




**Figure 1**

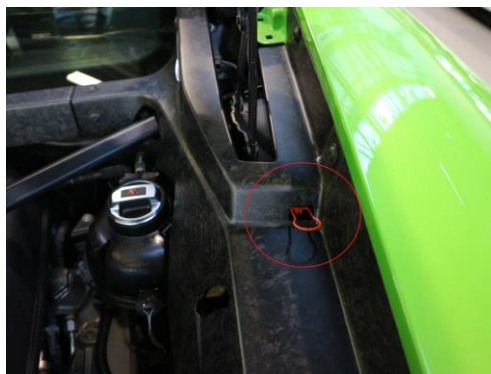

**Figure 2**

- Pull on the ring as shown in Figure 3;

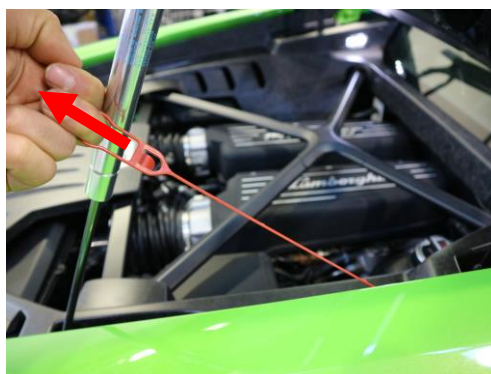


**Figure 3**


The procedures and information published herein are strictly confidential and are intended exclusively for recognized professionals and persons who are authorized to receive said information. All copyrights are the property of Automobili Lamborghini S.p.A. pursuant to copyright law. The company reserves the right to make updates and modifications as needed. The reprinting, reproduction, distribution to unauthorized persons and/or to third parties, and the partial or complete translation of the material contained herein are prohibited without the express written consent of Automobili Lamborghini S.p.A.



- While continuing to pull the ring, press on the fuel tank cap as shown in Figure 4 and 5;

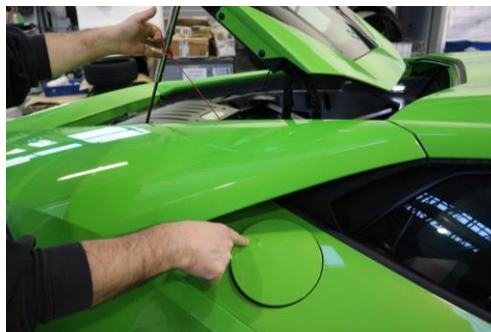

**Figure 4**

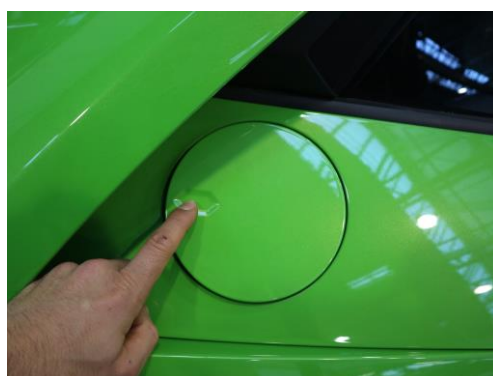

**Figure 5**

- Open the fuel door completely;



**WARNING!**

When pulling the opening ring, be especially careful not to break the attached cord.

For further information or if you have problems, please contact Technical Support.

Yours sincerely,

Customer Service

---

The procedures and information published herein are strictly confidential and are intended exclusively for recognized professionals and persons who are authorized to receive said information. All copyrights are the property of Automobili Lamborghini S.p.A. pursuant to copyright law. The company reserves the right to make updates and modifications as needed. The reprinting, reproduction, distribution to unauthorized persons and/or to third parties, and the partial or complete translation of the material contained herein are prohibited without the express written consent of Automobili Lamborghini S.p.A.

doc. no.: L/V6\_M06 Rev.[02]