


Table 1 provides circuit breaker part numbers and **Table 2** provides relay part numbers for the chassis power distribution box, shown in **Fig. 1**.

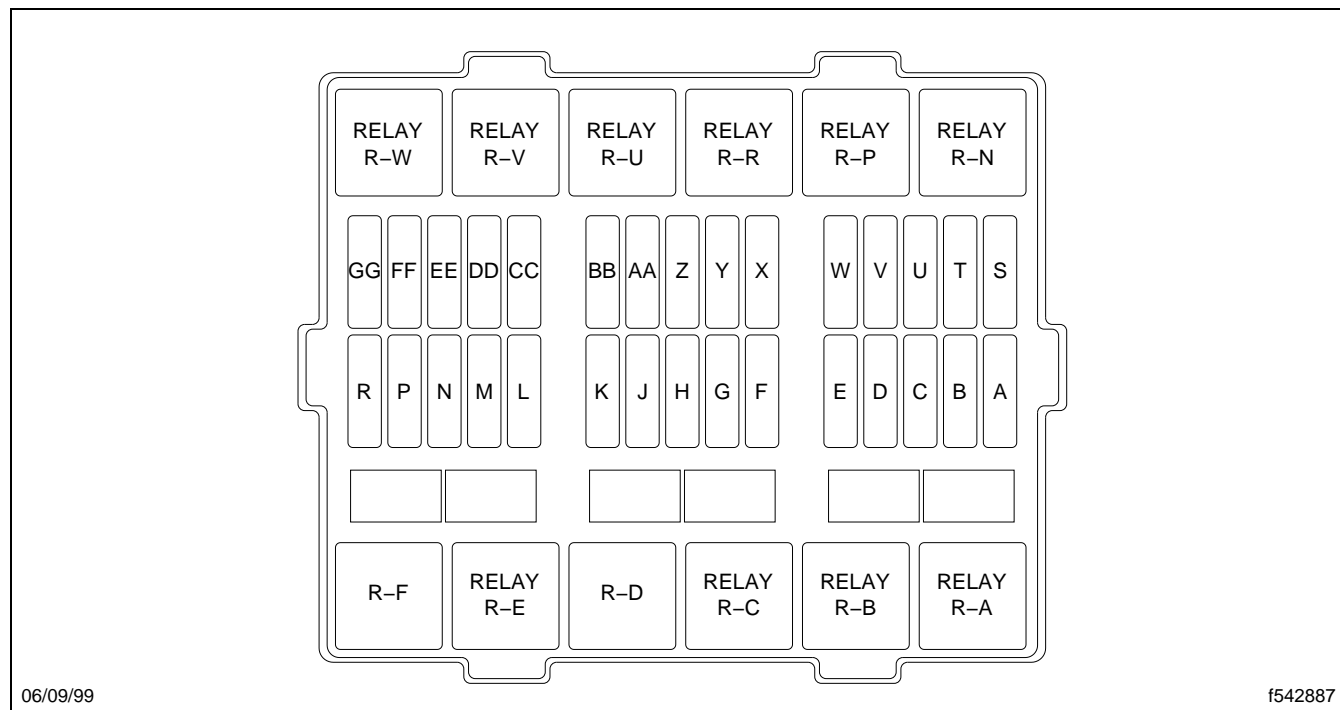

06/09/99

f542887

Fig. 1, Chassis Power Distribution Box

Position	Rating	Circuit Breaker Part Number		Function
		Engineering	Service	
A	40	F6HT-14526-JA	F6HZ-14526-J	Fuel Heater Relay R-A
B	30	F6HT-14526-LA	F6HZ-14526-L	Fuel Solenoid
C	40	F6HT-14526-JA	F6HZ-14526-J	Customer Access Marker & Park Lamps R-B & R-C
D	40	F6HT-14526-JA	F6HZ-14526-J	Dome Lamp & Lighter Mirrors Diagnostic Audio/Phone
E	40	F6HT-14526-JA	F6HZ-14526-J	LH Power Window
F				Run Relay Flash to Pass Trailer Hookup Lamp
G	40	F6HT-14526-JA	F6HZ-14526-J	Heater/AC Blower Relay
H	40	F6HT-14526-JA	F6HZ-14526-J	Run Relay
J	60	E97B-14A094-DA	E9TZ-14526-D	Ignition Switch & Run/Acc Relay

Position	Rating	Circuit Breaker Part Number		Function
		Engineering	Service	
K	40	F6HT-14526-JA	F6HZ-14526-J	Courtesy Lamps Cab Marker Lamps Customer Access Stop Lamps
L	40	F6HT-14526-JA	F6HZ-14526-J	Headlamp Headlamp Switch
M	40	F6HT-14526-JA	F6HZ-14526-J	Tractor ABS
S	40	F6HT-14526-JA	F6HZ-14526-J	Horns & C/B Wiper
T	40	F6HT-14526-JA	F6HZ-14526-J	Trailer Turn Lamps Relay
U	40	F6HT-14526-JA	F6HZ-14526-J	CB Hot Posts
V	40	F6HT-14526-JA	F6HZ-14526-J	RH Power Window Relay
W	40	F6HT-14526-JA	F6HZ-14526-J	Trailer Marker & Park Lamps Relay
X	30	F6HT-14526-LA	F6HZ-14526-L	Customer Access Stud "A" I/P
Y	30	F6HT-14526-LA	F6HZ-14526-L	Heated Moisture Ejectors
Z	40	F6HT-14526-JA	F6HZ-14526-J	Turn Signals
AA	40	F6HT-14526-JA	F6HZ-14526-J	Customer Access Run/Acc Relay
BB	30	F6HT-14526-LA	F6HZ-14526-L	Customer Access
CC	40	F6HT-14526-JA	F6HZ-14526-J	Trailer Stop Lamps
EE	40	F6HT-14526-JA	F6HZ-14526-J	Trailer ABS

Table 1, Circuit Breakers, Chassis Power Distribution Box

Position	Rating	Relay Part Number		Function
		Engineering	Service	
RA				Fuel Heater
R-B	40	FOAB-14B192-AA	FOAZ-14N089-A	Customer Access Park Lamps
R-C	40	FOAB-14B192-AA	FOAZ-14N089-A	Customer Access Marker Lamps
R-E	40	F8O-14B192-AA		Trailer ABS
R-N	40	FOAB-14B192-AA	FOAZ-14N089-A	Trailer LH Turn Signal
R-P	40	FOAB-14B192-AA	FOAZ-14N089-A	Trailer RH Turn Signal
R-R	40	FOAB-14B192-AA	FOAZ-14N089-A	Trailer Park Lamps
R-U	40	F8O-14B192-AA		Trailer Marker Lamps
R-V	40	FOAB-14B192-AA	FOAZ-14N089-A	Trailer Stop Lamps
R-W	40	FOAB-14B192-AA	FOAZ-14N089-A	Heated Moisture Ejectors

Table 2, Relays, Chassis Power Distribution Box