



Technical Service Bulletin

SUBJECT:		No: TSB-18-27-001	
TORQUE UPDATES: UNITS OF TIGHTENING TORQUE & NUMERICAL VALUE FOR REAR AXLE - SERVICE MANUAL REVISION		DATE: December 2018	
		MODEL: 2008-2014 Lancer Evolution	
CIRCULATE TO:	<input type="checkbox"/> GENERAL MANAGER	<input checked="" type="checkbox"/> PARTS MANAGER	<input checked="" type="checkbox"/> TECHNICIAN
<input checked="" type="checkbox"/> SERVICE ADVISOR	<input checked="" type="checkbox"/> SERVICE MANAGER	<input checked="" type="checkbox"/> WARRANTY PROCESSOR	<input type="checkbox"/> SALES MANAGER

PURPOSE

This TSB updates the Rear Axle section of the affected Service Manuals to correct the tightening torque for the Differential Carrier Assembly.

AFFECTED VEHICLES

- 2008 - 2014 Lancer Evolution

AFFECTED SERVICE MANUAL

- 2008-2014 Lancer Evolution Service Manual, Group 27 - Rear Axle




Please make the indicated changes to the 2008 - 2014 Lancer Evolution Service Manual, Group 27 - Rear Axle -> Differential Carrier Assembly -> Removal and Installation.

REMOVAL AND INSTALLATION

CAUTION

- The part indicated by * is the bolt with friction coefficient stabilizer. In removal, ensure there is no damage, clean dust and soiling from the bearing and thread surfaces, and tighten them to the specified torque.

Pre-removal operation	Post-installation operation
<ul style="list-style-type: none"> Gear oil draining (Refer to .) Rear driveshaft assembly removal (Refer to .) 	<ul style="list-style-type: none"> Rear driveshaft assembly installation (Refer to .) Gear oil filling (Refer to .) AYC air bleeding (Refer to .)

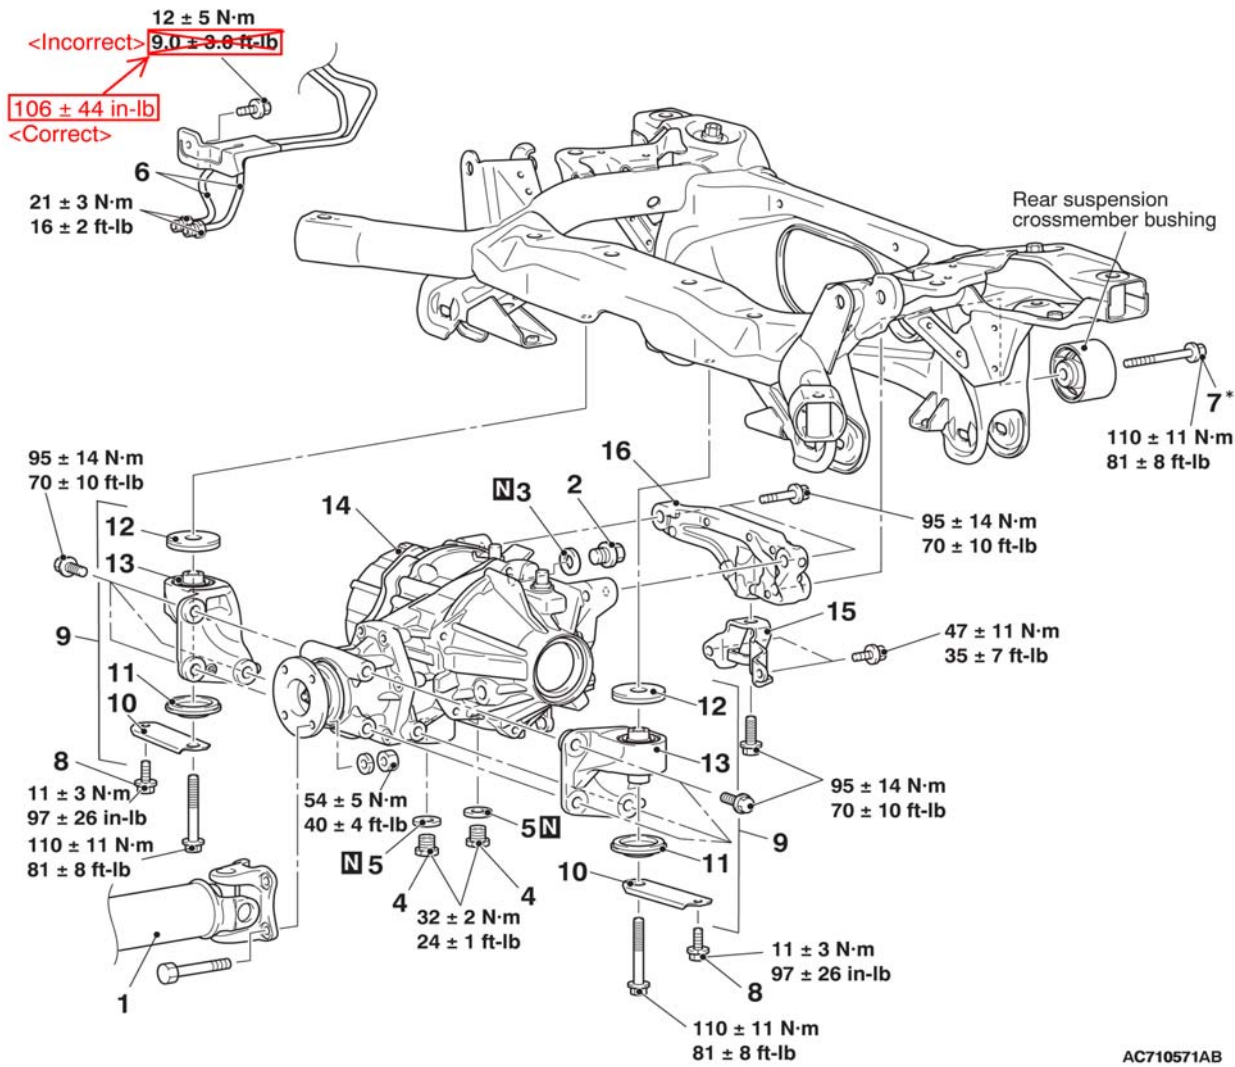

- <<A>>
- Removal steps**
- Propeller shaft connection
 - Filler plug
 - Gasket
 - Drain plug
 - Gasket
 - AYC pressure tube connection

- Removal steps**
- Differential support bracket and rear suspension crossmember connecting bolt
 - Stay mounting bolt
 - Differential mount bracket assembly (LH/RH) and stay