Mazda North American Operations Irvine, CA 92618-2922



Subject:

2019 MAZDA3 SERVICE CAUTIONS FOR NEW AND REVISED FEATURES Service Alert No.: SA-010/19

Last Issued: 05/02/2019

BULLETIN NOTES

This Service Alert supersedes the previously issued Service Alert(s) listed below: The changes are noted in Red.

Previous Service Alert(s):	Date(s) Issued:
SA-010/19	<mark>04/25/19</mark> , 04/11/19, 03/29/19, 03/21/19, 03/15/19,03/08/19, 03/06/19, 03/05/19, 02/25/19

APPLICABLE MODEL(S)/VINS

2019 Mazda3

DESCRIPTION


The new 2019 Mazda3 has new and revised features that are different from previous models, and may be difficult to understand. This Service Alert provides valuable information to support potential dealer and customer concerns.

ltem	Service Information
------	---------------------

Page 1 of 31

Fi	use to be Installed at PDI (JM1 = Japan built)	
1.	There is only one fuse removed at the factory that should be installed at PDI. It is fuse F27 (25A). The fuse is stored in	Euro Plack
	the lid of the fuse box with the spare fuses.	(Engine Compartment)
2.	. The current PDI form is wrong. It states there are two (2) fuses removed (F46 and F50) that should be installed. The	
	form is being updated with this change.	


Page 2 of 31

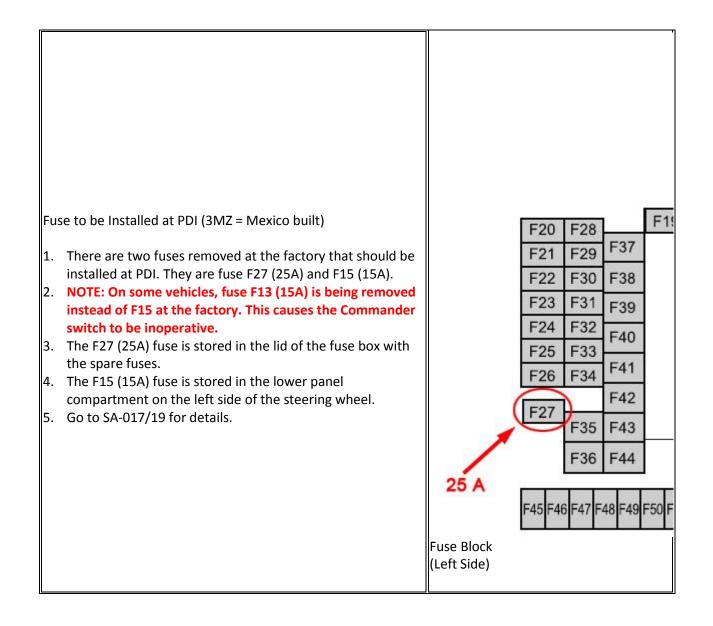


Page 3 of 31

				r I
			F12	
			F11	F23
			F10	F22
			F9	F21
			10	F20
			F8	F19
			- F7	F18
		F2	F6	F17
			F5	F16
		F1	F4	F15
		2.5	F3	
			8	F13 F14
Fro	nt Wiper Service Caution			
1. 2.	When servicing front wipers, front wiper service mode is required or damage to wiper arms may occur (see Service Information).	See Owner's M and Care > Rep Blades	lacing Wind	lshield Wiper
3. 4.	If wiper arms are replaced, M-MDS is needed for wiper arm adjustment (see Service Information) DO NOT use wiper arms as markers when in dealer inventory.	MGSS: WINDSH BLADE ADJUSTI		R ARM AND


Page 4 of 31

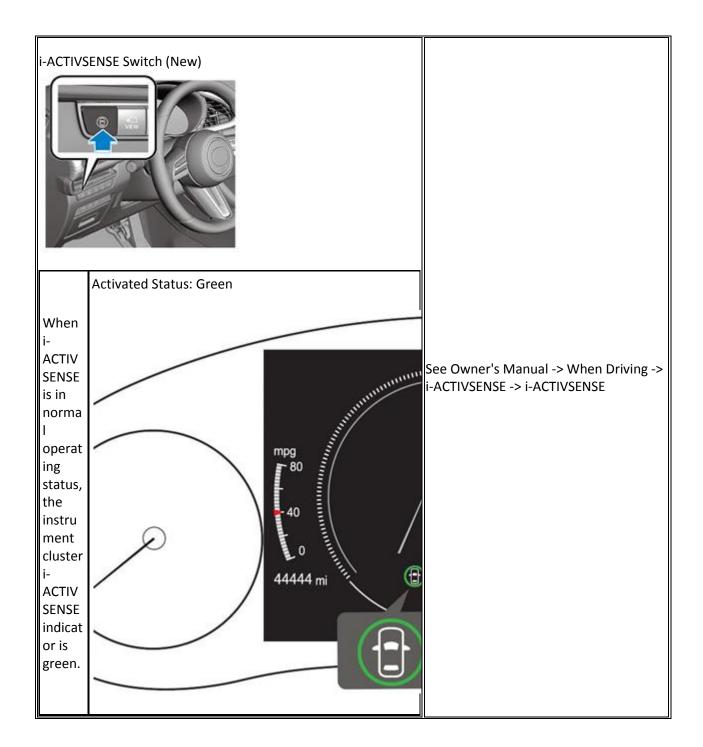

Page 5 of 31

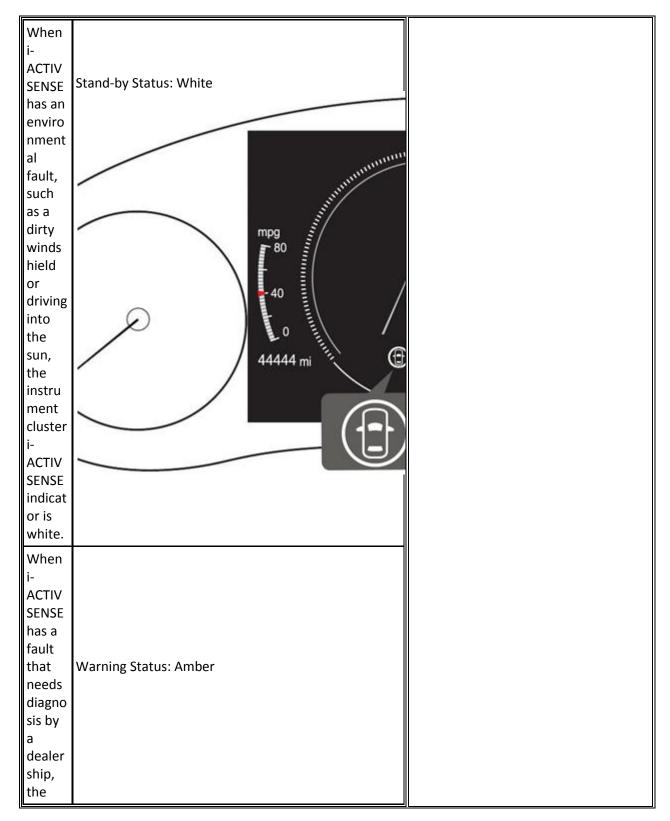


Page 6 of 31

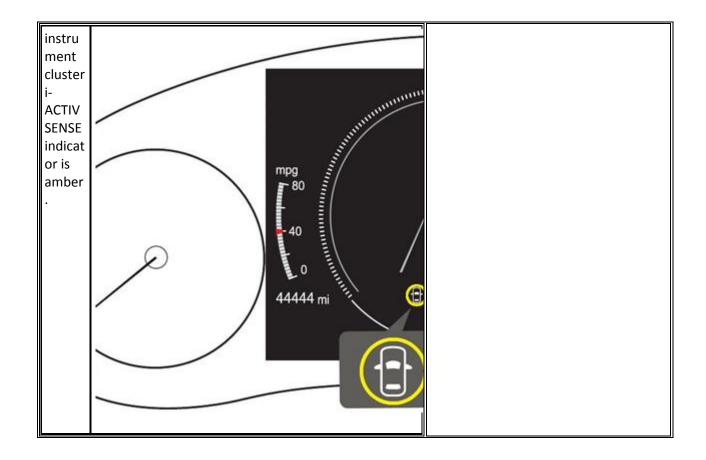

Page 7 of 31

CONSUMER NOTICE: The information and instructions in this bulletin are intended for use by skilled technicians. Mazda technicians utilize the proper tools/ equipment and take training to correctly and safely maintain Mazda vehicles. These instructions should not be performed by "do-it-yourselfers." Customers should not assume this bulletin applies to their vehicle or that their vehicle will develop the described concern. To determine if the information applies, customers should contact their nearest authorized Mazda dealership. Mazda North American Operations reserves the right to alter the specifications and contents of this bulletin without obligation or advance notice. All rights reserved. No part of this bulletin may be reproduced in any form or by any means, electronic or mechanical---including photocopying and recording and the use of any kind of information storage and retrieval system ---without permission in writing.

© 2019 Mazda North American Operations, U.S.A.

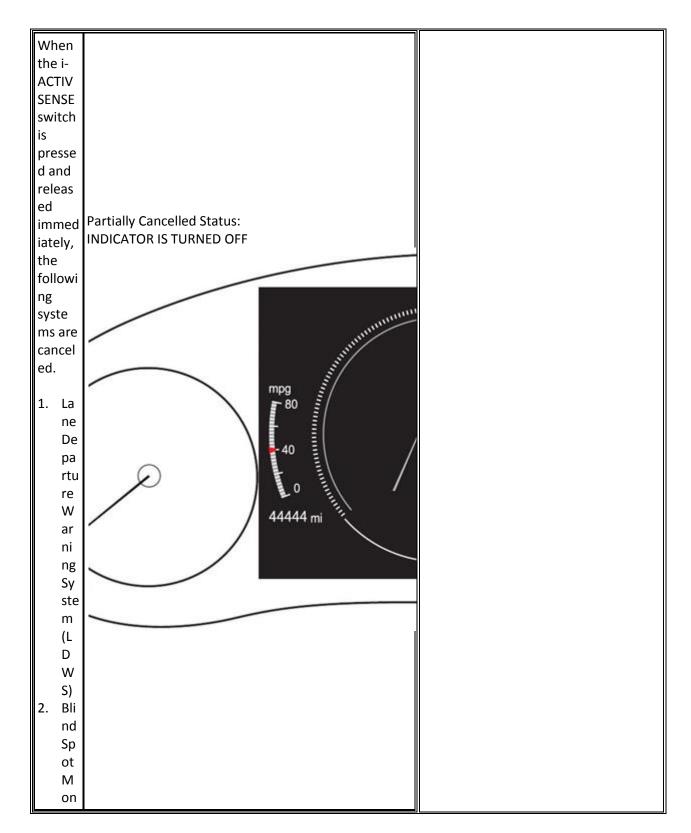

Page 8 of 31

Service Alert No.: SA-010/19	Service	e Alert	No.:	SA-010/19
------------------------------	---------	---------	------	-----------


	ito	
	rin	
	g (B	
	S	
	M)	
3.	, Dis	
	ta	
	nc	
	е	
	Sp	
	ee	
	d	
	Al	
	ert	
	(D SA	
)	
4.	, Re	
	ar	
	Cr	
	os	
	s	
	Tr	
	aff	
	ic	
	Al	
	ert	
	(R CT	
	CT A)	
5.	La	
	ne	
	-	
	ke	
	ер	
	As	
	sis	
	t	
	Sy	
	ste	
	m /I	
	(L	

Page 9 of 31

Service Alert No.: SA-010/19

AS		
)		
То		
turn		
the		
syste		
m back		
back		
to "Activ		
ated		
Status		
, press		
the i-		
ACTIV		
SENSE		
switch		
once.		
NOTE:		
If		
MRCC		
is		
used,		
the		
syste		
m will		
also		
return		
to		
"Activ		
ated		
Status "		
".		
When		
the i-	Fully Cancelled Status	
ACTIV	Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF	
SENSE	SBS OFF WARNING LIGHT IS ON	
switch	SDS OFF WARINING LIGHT IS UN	
is		
presse		
d and		

Page 10 of 31

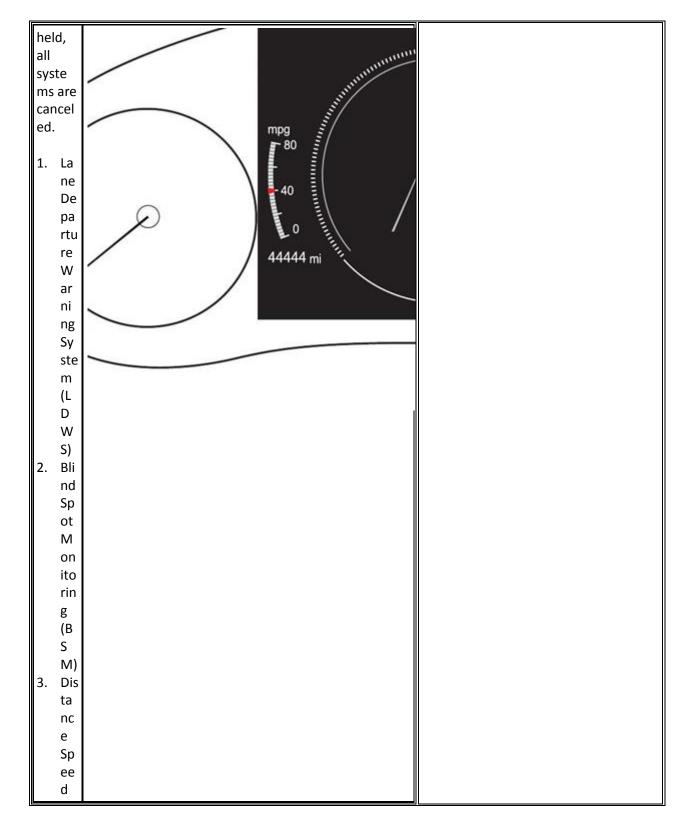

Page 11 of 31

Service Alert No.: SA-010/19	Service	e Alert	No.:	SA-010/19
------------------------------	---------	---------	------	-----------

		
	Al	
	ert	
	(D	
	SA	
)	
4.	Re	
	ar	
	Cr	
	os	
	S	
	Tr	
	aff	
	ic	
	Al	
	ert	
	(R	
	СТ	
	A)	
5.	La	
	ne	
	-	
	ke	
	ер	
	As	
	sis	
	t	
	Sy	
	ste	
	m	
	(L	
	ÅS	
)	
6.) S	
0.		
	m	
	art	
	Br	
	ak	
	е	
	Su	
	рр	
	ort	
	(S	
	19	

Page 12 of 31


Service Alert No.: SA-010/19

	BS		
)		
7.	S		
	m		
	art		
	Br		
	ak		
	e c		
	Su		
	рр		
	ort		
	[R		
	ea		
	r]		
	(S		
	BS		
	-R)		
8.	s		
	m		
	art		
	Br		
	ak		
	e		
	Su		
	pp ort		
	ort		
	[R		
	ea		
	r		
	Cr		
	OS		
	sin		
	g] (S		
	(S		
	BS		
	RC		
)		
	•	l	

Page 13 of 31

-	 Tranc sign Recognition (TSR) is only available on canada Spec vehicles* TSR is only available with a dealer installed in-vehicle navigation system accessory. 	See Owner's Manual -> When Driving -> i-ACTIVSENSE -> i-ACTIVSENSE -> Traffic Sign Recognition System (TSR) MGSS: Traffic Sign Recognition (TSR)	

Page 14 of 31

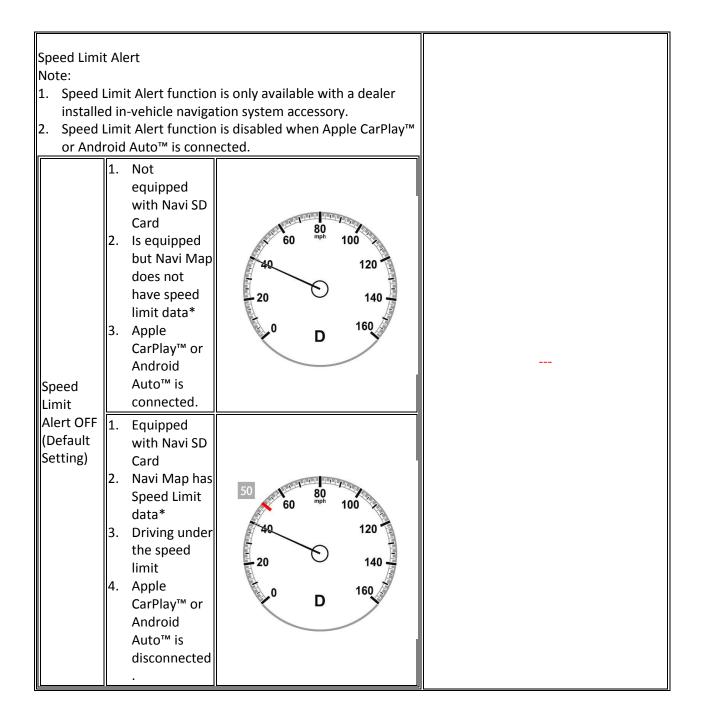

Page 15 of 31

	 Equipped with Navi SD Card Navi Map has Speed Limit data* Driving over the speed limit Apple CarPlay™ or Android Auto™ is disconnected 	80 mph 100 120 140 D 160	
Speed Limit Alert ON (Custome r Setting	 Equipped with Navi SD Card Navi Map has Speed Limit data* Driving over the speed limit Apple CarPlay™ or Android Auto™ is disconnected 	80 mph 100 120 140 D 160	
 Speed Limit Alert Customer Settings Speed Limit Alert Settings OFF Visual Visual + Audible Speed Limit Alert Threshold 0 mph +5 mph +10 mph * SD Card maps may contain information about the speed limits of the roads. The navigation system is able to warn driver if they exceed the current limit. This information may not be 			

Page 16 of 31

Service Alert No.: SA-010/19	Last Issued: 05/02/2019

available in some areas or may not be fully correct for all roads	
on the map.	

Page 17 of 31

CONSUMER NOTICE: The information and instructions in this bulletin are intended for use by skilled technicians. Mazda technicians utilize the proper tools/ equipment and take training to correctly and safely maintain Mazda vehicles. These instructions should not be performed by "do-it-yourselfers." Customers should not assume this bulletin applies to their vehicle or that their vehicle will develop the described concern. To determine if the information applies, customers should contact their nearest authorized Mazda dealership. Mazda North American Operations reserves the right to alter the specifications and contents of this bulletin without obligation or advance notice. All rights reserved. No part of this bulletin may be reproduced in any form or by any means, electronic or mechanical---including photocopying and recording and the use of any kind of information storage and retrieval system ---without permission in writing.

© 2019 Mazda North American Operations, U.S.A.

MAZDA CONNECT New Power Off Function	
FM 10 hadro 1 2 3 92 3 REAL Boyz N The Hood Eazy-E	
α n	See Owner's Manual -> Interior Features -> Mazda Connect
 Audio Mute - Short press the volume knob (Press again to cancel) 	
 Power Off - Press and hold the volume knob (Press and hold again to Power ON) 	MGSS: ENTERTAINMENT SYSTEM
	In-vehicle Owner's Manual installation


Page 18 of 31

CONSUMER NOTICE: The information and instructions in this bulletin are intended for use by skilled technicians. Mazda technicians utilize the proper tools/ equipment and take training to correctly and safely maintain Mazda vehicles. These instructions should not be performed by "do-it-yourselfers." Customers should not assume this bulletin applies to their vehicle or that their vehicle will develop the described concern. To determine if the information applies, customers should contact their nearest authorized Mazda dealership. Mazda North American Operations reserves the right to alter the specifications and contents of this bulletin without obligation or advance notice. All rights reserved. No part of this bulletin may be reproduced in any form or by any means, electronic or mechanical---including photocopying and recording and the use of any kind of information storage and retrieval system ---without permission in writing.

© 2019 Mazda North American Operations, U.S.A.




Page 19 of 31

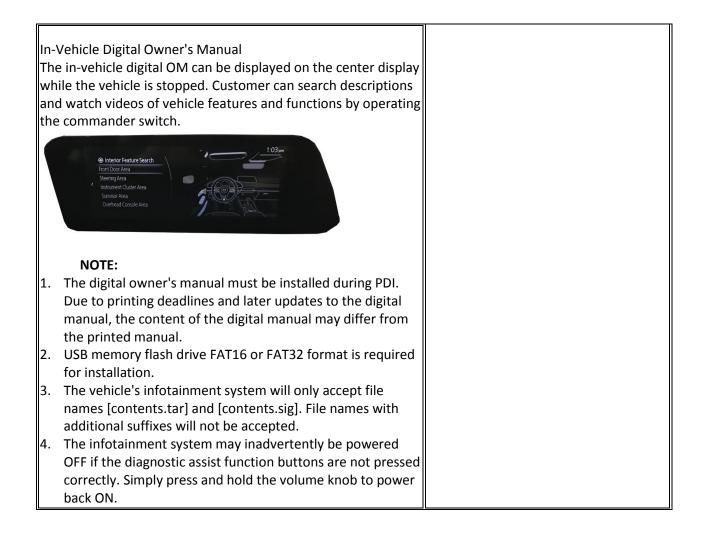

Page 20 of 31

Navigation System 2019 Mazda3 is not equipped with factory installed navigation system, however, it is available as a dealer installed accessory. NOTE: The 2019 Mazda3 accessory navigation SD is made in Japan instead of USA. If you use a made in the USA navigation SD card (for 6th gen) in the 2019 Mazda3, it will not function.	
VerticeVerti	
 SIRIUSXM Data Service No Free Trial (Preferred Package and above) 1. Only available as a paid subscription. 2. 2019 Mazda3 is not equipped with factory installed navigation system, however, it is available as a dealer installed accessory. 3. SiriusXM Traffic Plus feature requires in-vehicle navigation SD card. 	See Owner's Manual -> Interior Features -> Mazda Connect -> Appendix SA-007/19 - SIRIUSXM DATA SERVICES

Page 21 of 31

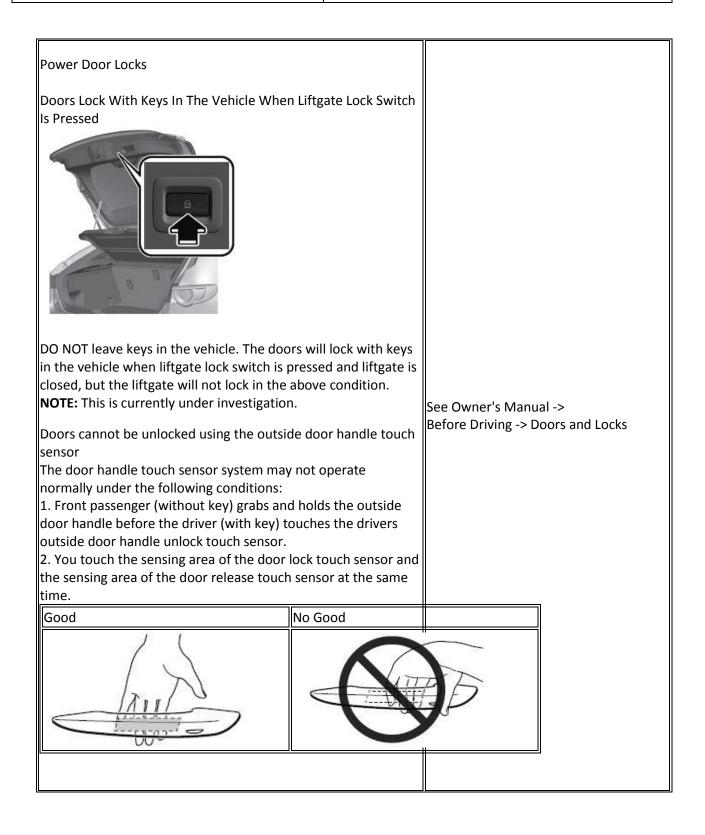

Page 22 of 31

Auxiliary Key The auxiliary keys need to be inserted into the trans during PDI.	Ismitters	
Auxiliary Key	Transmitter	
NOTE: The auxiliary keys are small and could be overlooked during PDI.		
Vehicles arrive at the dealer with Auxiliary Keys located in the glove compartment*	Vehicles arrive at the dealer with Transmitters located in the front cup holder*	ving ->
* Vehicles that arrive at the dealer after business h the dealer's early bird key drop box.	nours, transmitters/auxiliary keys are located in	
 If one auxiliary key is lost, some key machines of a new replacement key. If both auxiliary keys are lost, key machines can replacement keys at this time. 		
 Key machines will not recognize the key coon new keys. Mazda is aware of this issue and is working resolution. 		
 If one transmitter is lost, inform the customer t cautions not to lose the 2nd transmitter. If both transmitters are lost, the vehicle will be 		

Page 23 of 31

 MDARS is not able to program transmitte Mazda is aware of this issue and is workin resolution. Insert the auxiliary key into the transmitter. 	
Remove the transmitter lower cover by sliding the knob in the direction shown and then sliding the cover in the opposite direction.	
Insert the auxiliary key.	
Install the transmitter lower cover by inserting the tabs of the lower cover into the slots of the transmitter.	

Page 24 of 31

	Turning on the power saving function After you have turned on the power saving function according to the following procedure, the hazard warning lights and sound operate* one
Transmitter Battery Saving Function (Key Fob) The new 2019 Mazda3 has a "power saving" function built into the keyless entry system where <u>some</u> key fob functions are disabled. This feature could accidentally be enabled and some concerns with the vehicle may be:	time. 1. Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light. 2. Press the lock button continuously for 1.5 seconds or longer while the operation indicator light turns on (for 5 seconds). 3. Press any of the buttons on the transmitter to make sure that the operation indicator light does not turn on/flash.
 Engine does not start. Engine does not start unless you hold the fob to the start/stop button. Doors do not unlock using the door handle, but unlock with the remote. Doors do not lock using the door handle, but lock with the 	Turning off the power saving function After you have turned off the power saving function according to the following procedure, the hazard warning lights and sound operate* one time.
remote. 5. Transmitter indicator light does not turn on/flash.	 Press any of the buttons on the transmitter to make sure that the operation indicator light does not turn on/flash. Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light. Press the lock button continuously for 1.5 seconds or longer while the operation indicator light turns on (for 5 seconds).
	*: with the advanced keyless function Also see Owner's Manual ->

Page 25 of 31

Service Alert No.: SA-010/19	Last Issued: 05/02/2019

Before Driving -> Keys -> Power saving
function

Page 26 of 31


See Owner's Manual -> Before Driving -> Keys -> Auxiliary Key Then refer to Owner's Manual -> Before Driving -> Doors and Locks -> Unlocking with Auxiliary Key
See Owner's Manual -> Before Driving -> Doors and Locks -> Rear Door Child Safety Locks

Page 27 of 31

Seat Warmer and Heated Steering Wheel Auto Mode The driver and front passenger's seater warmers* and the heated steering wheel* can be set to be automatically controlled (turned on and off) by the climate control system, depending on the set temperature.	
Auto Mode 1. Go to MAZDA CONNECT home screen and select "Settings" 2. Select "Vehicle Settings". 3. Enable "Link Seat Climate Control Temperatures". 4. Press the climate control AUTO switch.	See Owner's Manual ->
Link Seat Climate Control Temperatures Climate Control Setting Auto Switch	Essential Safety Equipment -> Seat Warmer/Heated Steering Wheel -> Seat Warmer / Heated Steering Wheel
Vehicle Settings Rain-Sensing Wipers Turn Signals Rear Window Defogger Link Seat & Climate Control Temperatures Fuel Door Lock Delay 90 second	

Page 28 of 31

Electric Parking Brake (EPB)			
Parking Brake Auto Operation When the ignition is switched OFF, the applied automatically. The EPB indicato cluster and the EPB switch indicator lig	or light in the instrument		
1. Indicator light			
procedure in the Owner's Manual		See Owner's Manual -> When Driving -> Brake -> EPB Auto operation	
procedure in the Owner's Manual. NOTE: When the ignition is cycled back			-
procedure in the Owner's Manual. NOTE: When the ignition is cycled back auto operation is restored. Parking Brake Automatic Release f the accelerator pedal is depressed with applied and all of the following condition prake is automatically release. When the released, the EPB indicator light in the	k ON, the parking brake ith the parking brake ons are met, the parking he parking brake is		-
procedure in the Owner's Manual. NOTE: When the ignition is cycled back auto operation is restored. Parking Brake Automatic Release f the accelerator pedal is depressed wi applied and all of the following condition orake is automatically release. When the released, the EPB indicator light in the the EPB switch indicator light turn off.	k ON, the parking brake ith the parking brake ons are met, the parking he parking brake is		-
AVT AVTE: When the ignition is cycled back auto operation is restored. Parking Brake Automatic Release of the accelerator pedal is depressed with applied and all of the following condition orake is automatically release. When the released, the EPB indicator light in the he EPB switch indicator light turn off.	CON, the parking brake ith the parking brake ons are met, the parking he parking brake is instrument cluster and		-
A/T Procedure in the Owner's Manual. NOTE: When the ignition is cycled back auto operation is restored. Parking Brake Automatic Release f the accelerator pedal is depressed with applied and all of the following condition prake is automatically release. When the released, the EPB indicator light in the he EPB switch indicator light turn off. A/T Engine is running	CON, the parking brake ith the parking brake ons are met, the parking he parking brake is instrument cluster and		-
A/T Engine is running Driver's door is closed	CON, the parking brake ith the parking brake ons are met, the parking he parking brake is instrument cluster and		-
A/T Engine is running Driver's door is closed Driver's seat belt is fastened Selector lever is in the D, M, or R	CON, the parking brake ith the parking brake ons are met, the parking he parking brake is instrument cluster and	Brake -> EPB Auto	-
procedure in the Owner's Manual. NOTE: When the ignition is cycled back	K ON, the parking brake ith the parking brake ons are met, the parking he parking brake is instrument cluster and M/T	Brake -> EPB Auto	-
A/T Engine is running Driver's door is closed Driver's seat belt is fastened Selector lever is in the D, M, or R	k ON, the parking brake ith the parking brake ons are met, the parking he parking brake is instrument cluster and M/T Shift lever is in a position neutral	Brake -> EPB Auto	-

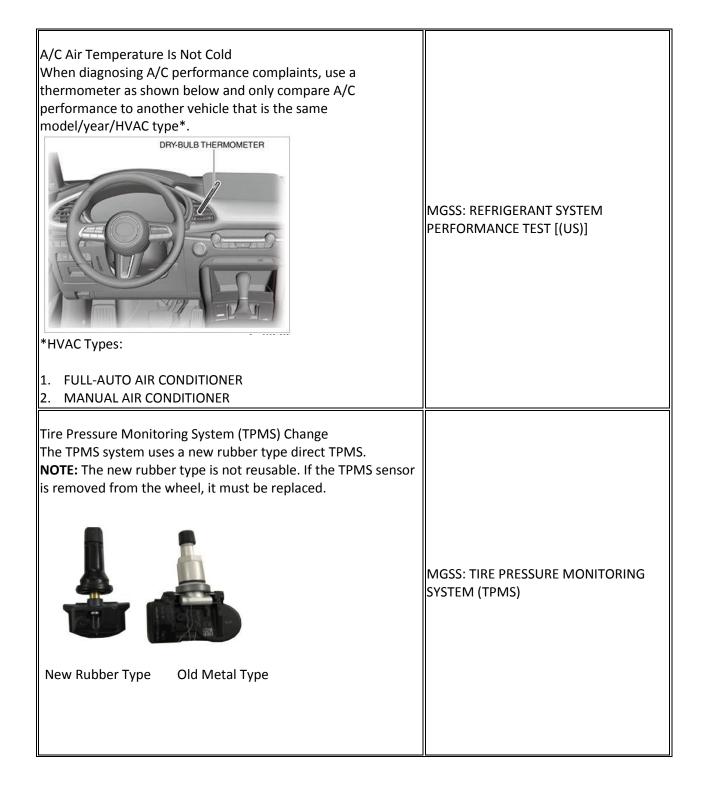

Page 30 of 31

 Condition Based Maintenance (Except Canada) The vehicle calculates the maintenance (oil change) timing. 1. This function cannot be turned OFF. 2. Distance until the oil change is available in MAZDA CONNECT. 3. Reset is required after every oil change. 	MGSS: MAINTENANCE MONITOR OPERATION PROCEDURE
 New M-MDS (MDARS) A new M-MDS diagnostic tester (MDARS) for 7th generation vehicles (starting with the 2019 Mazda3) is used. 1. Performs more maintenance service functions 2. Performs more complicated vehicle electrical system diagnostic 3. Reprograms more ECU's 	MGSS: BASIC KNOWLEDGE
Parts Replacement When replacing vehicle parts such as ECU's, motors, seatsetc, always refer to MGSS. Some new components may not operate if MGSS new part replacement procedure is not performed.	

Page **31** of **31**