



Service Bulletin 578

Issue 1 - 05.2020

Subject: 30 Amp Fuse				
Bulletin Number	Models Affected	VIN Range		Markets Affected
578	Tiger 900	From 978905	To AB7717	All Markets except Brazil and India
	Tiger 900 GT		To AB8337	Brazil and India Markets Only
	Tiger 900 GT Pro			
	Tiger 900 Rally			
	Tiger 900 Rally Pro			
	Tiger 900 GT- LRH (Low Ride Height)			

Background Information

Internal investigations have identified the need to check the 30A fuse and fuse holder (located on the starter motor solenoid) and, if necessary, clean and fill the fuse holder with grease and fit a new fuse as described in the procedure below.

Customer Contact Instructions

Motorcycles in the affected VIN range must be modified prior to delivery to the customer, or at the next visit to the dealership.

Identification of Affected Motorcycles

Tiger 900, Tiger 900 GT, Tiger 900 GT Pro, Tiger 900 Rally, Tiger 900 Rally Pro and Tiger 900 GT- LRH (Low Ride Height) motorcycles in the above VIN ranges.

Note:

- Some affected motorcycles listed in the VIN range will have been modified and repaired by Triumph prior to their release from the factory.
- Unmodified motorcycles can be identified by checking the 'VIN Enquiry' on www.triumphonline.net.

Warranty Claim Instructions

Bulletin Number	Model	Fault Code	Repair Code	Description	Repair Time Allowance
578	Tiger 900 Tiger 900 GT Tiger 900 GT Pro Tiger 900 Rally Tiger 900 Rally Pro Tiger 900 GT-LRH (Low Ride Height)	025030978	99578	Grease 30A fuse holder	0.25 Hours

Genuine Parts Information

Bulletin Number	Part Number	Description	Quantity
578	Not Applicable	-	-

Parts Ordering Instructions

Not applicable

Genuine Parts Return Instructions

Not applicable

Other Instructions


Once completed, please mark the Service Record Book that the requirements of this bulletin have been complied with.

Before returning the motorcycle to the customer, download the latest calibration using the current version of the Triumph diagnostic software to the following:

- Engine electronic control module
- Chassis electronic control module (if fitted)
- Keyless electronic control module (if fitted)
- Suspension electronic control module (if fitted)
- Connectivity module (if fitted)
- Instruments (if applicable).


30A Fuse Holder Clean and Grease

1. Remove the following components as described in the Service Manual:
 - Rider's seat
 - Battery
2. Detach the starter motor solenoid from the base of the rear mudguard.
3. Remove the cover from the starter motor solenoid.

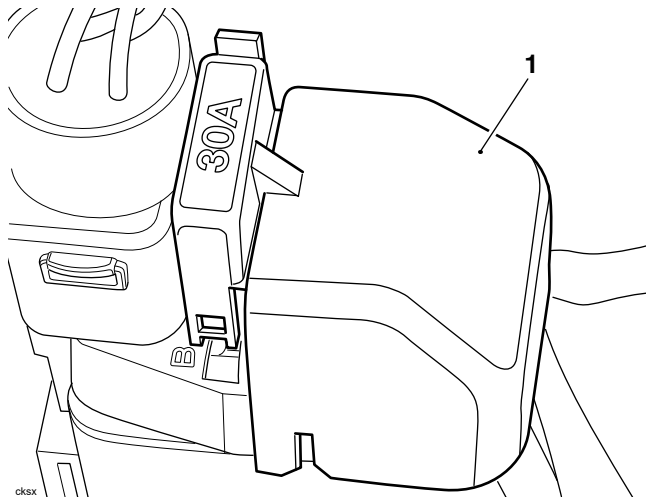


1. Cover

4. Remove the 30A fuse.
5. Check the fuse and the fuse holder for damage and the fuse holder for grease.

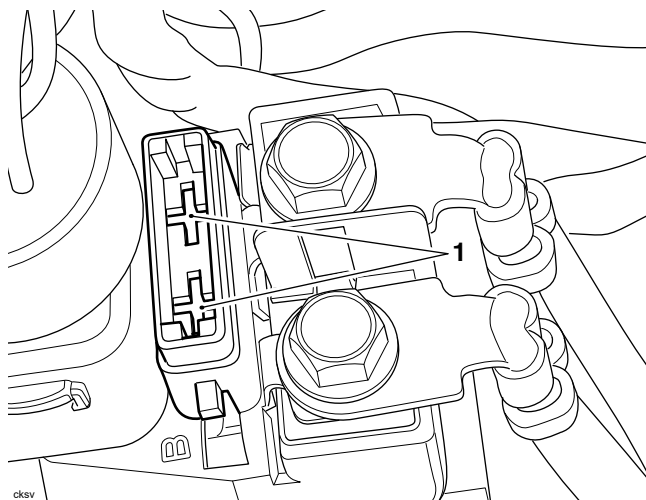

1. Fuse holder

6. Clean out the fuse holder and fill the fuse holder with grease (Castrol LCX 222 or equivalent).

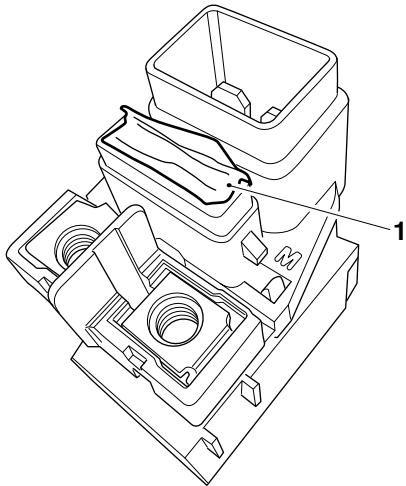

1. Grease (Solenoid shown removed for clarity)

- 7. Check the 30A fuse for damage, replace if necessary.
- 8. Fit the 30A fuse.
- 9. Fit the cover to the starter motor solenoid.
- 10. Fit the starter motor solenoid to the base of the rear mudguard.
- 11. Fit the following components as described in the Service Manual:
 - Battery
 - Rider's seat

Circulation

Initial and date when read and return to central file holder

Service Manager	Parts Manager	Sales Manager	Workshop Supervisor	Technician 1	Technician 2