



Mack Chassis - Differential Lock Status Alarm And Icon; Differential Lock Alarm Tone Does Not Sound For Entire Duration Of Differential Lock Engagement



> Internal Content

To remedy this issue please install new Instrument Cluster main software.

Refer to the charts and images below for the current and new configurations for the differential lock status alarm and icon.


Mack GEN I Cluster	
Current	New
• No instrument cluster telltale • Switch display • 5s dash popup • 5s Buzzer	• No instrument cluster telltale • Switch display • Dash popup for difflock engagement continuous until driver acknowledgment • Buzzer continuous




GEN II Clusters	
Current	New
• Engaged: (Popup + audible + icon) begins Audible is 5s popup dismisses after 30s • Icon stays ON	• Engaged: (Popup + Audible + Icon) begins • Popup dismissed: (Continuous audible + Icon) persists



• Disengaged: Icon ceases	• Engaged > 30s after popup dismissal: (popup) returns (continuous audible + Icon) persists • Disengaged: all (popup/Audible/Icon) ceases
---	--

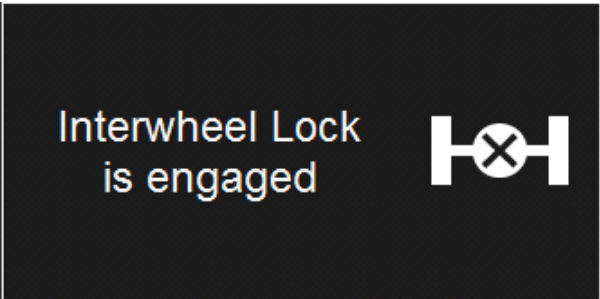

Mack LR	
Current	NEW
• No instrument cluster telltale • Switch display • popup, dismissible by user • 5s buzzer	• Instrument cluster telltale • Switch display • Dash popup dismissible, but repeats every 15s • Buzzer synced with Instrument cluster display

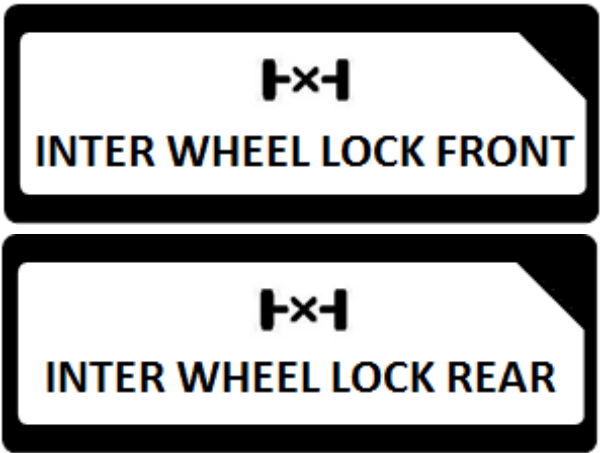

Mack MRU Cluster	
Current	New

Current	new
• No dash popup • No instrument cluster telltale • Switch display • 5s buzzer	• No dash popup • No instrument cluster telltale • Switch display • Buzzer continuous for DiffLock Engagement

 Tags

[k14810225](#)

[mack](#)

Related links and attachments

No links or attachments available



Feedback

[Give feedback](#)

to help improve the content of this article