


# Installing optional TV on backer



\* Sticker marks the general location of the TV backer

## Optional TV mount is on an exterior wall:

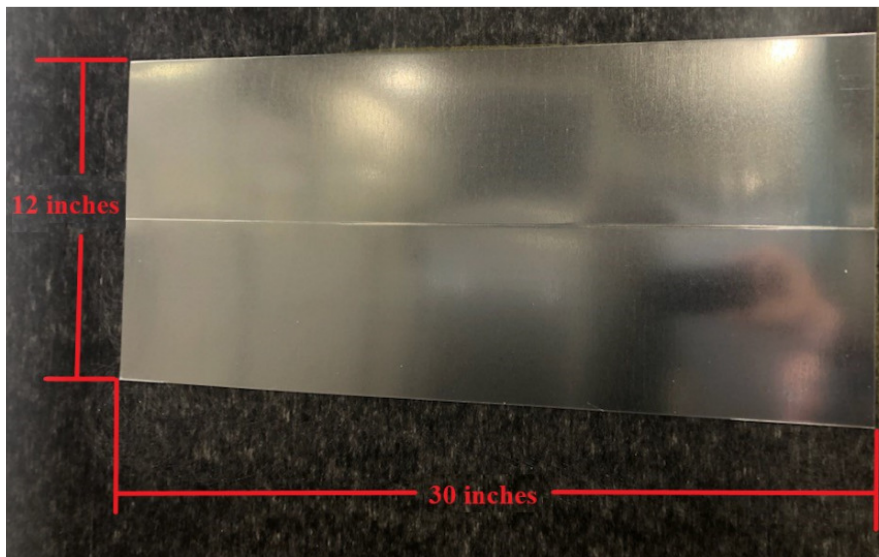

- Backer is two 6" x 30" thin sheets of galvanized steel, placed one above the other
- Backer location should be verified by using a strong magnet to locate exact placement
- Use  $\frac{3}{4}$ " metal screws with fine thread should be used to secure TV bracket to the wall backer
- All 4 screws for mount TV bracket need to be securely anchored in the wall backer
- We do not suggest that you pre-drill the holes. You would most likely not feel the backer as it is a thin sheet and you run the risk of drilling all the way through the wall and out the other side.
- Weight limit is 70 pounds

## Optional TV mount is on an interior wall:

- Backer is a piece of plywood mounted behind wall panel
- Backer varies in size depending on trailer model
- Should be able to feel backer by gently pushing on wall panel where backer is located to feel where the backer is and the wall panel does not flex or use stud finder tool
- Use  $\frac{3}{4}$ " wood screws to screw TV bracket to wall backer
- Weight limit is 70 pounds