



STAR ONLINE PUBLICATION



Case Number: S2208000019

Release Date: January 2022

Symptom/Vehicle Issue: Check Engine Lamp On, DTC P0204 Fuel Injector 4 Circuit Open

Customer Complaint/Technician Observation: Owner complains of a check engine lamp that is illuminated. Technician observes DTC P0204 Fuel Injector 4 Circuit Open DTC that is stored.

Repair Procedure: Inspect cylinder # 4 injector connection, if the DTC is stored P0204 **Fuel Injector 4 Circuit Open**, wiggle the harness at the injector location and check while monitoring for the code to change to active. Disconnect injector #4, reposition the harness to align the injector connector and secure the connector as needed. No parts required, Fig 1, 2.

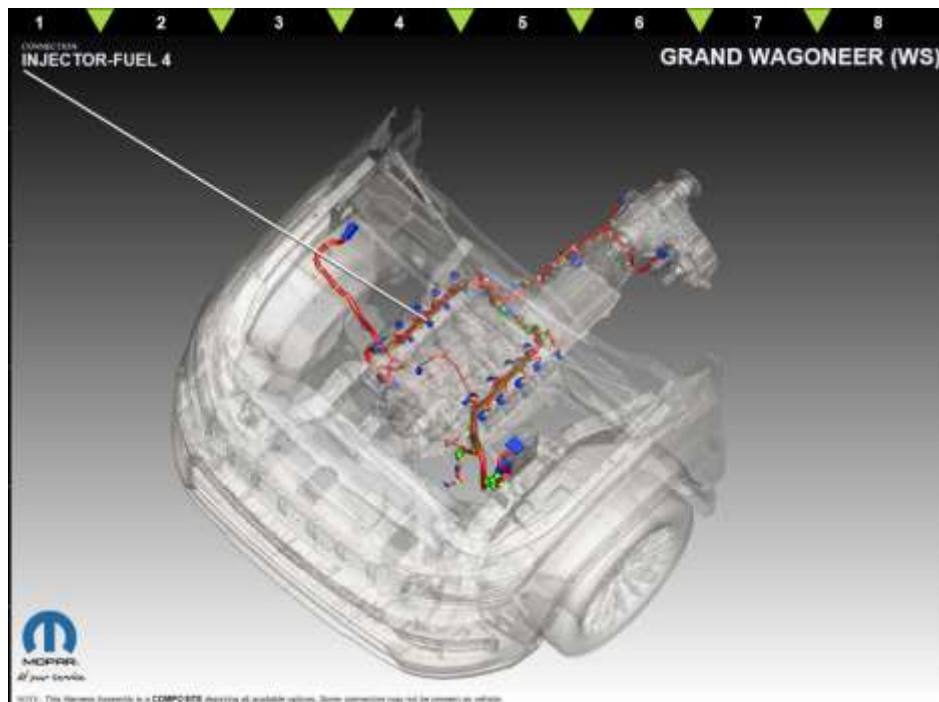


Fig 1

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.


Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found



STAR ONLINE PUBLICATION



Wiring Diagram - FUEL CONTROL SYSTEM - 5.7L/6.4L

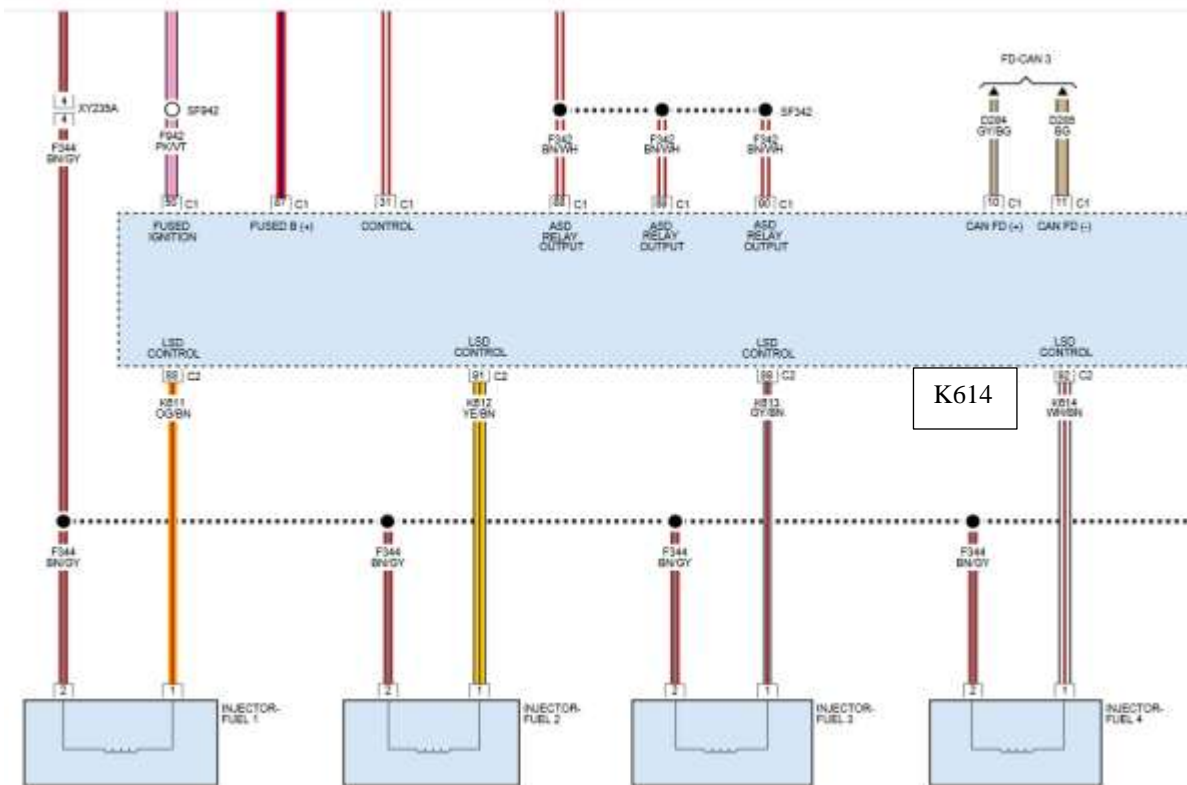

Full Repair Kit: 05183448AA



Fig 2

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found