

Subject: OPERATION OF DRIVER PERSONALIZATION SYSTEM	Service Alert No.: SA-061/23
	Last Issued : 10/16/2023

BULLETIN NOTES


APPLICABLE MODEL(S)/VINS

2024 CX-90 with Driver Personalization System




DESCRIPTION

This Service Alert provides additional guidance about operation and procedure of the Driver Personalization System from the start of driver recognition to the end of the driving position restoration.

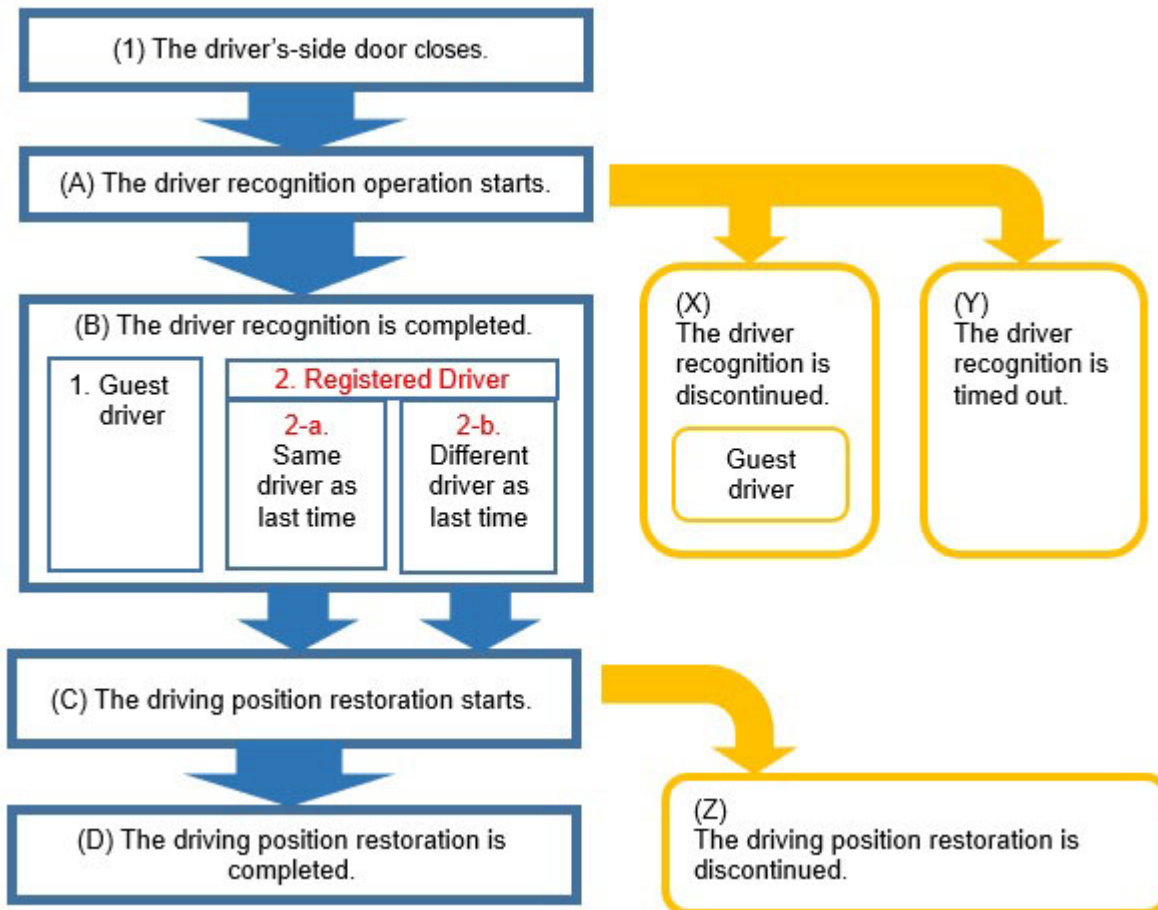Timing (start/completion/discontinuing) of driver recognition and a driving position restoration:



CONSUMER NOTICE: The information and instructions in this bulletin are intended for use by skilled technicians. Mazda technicians utilize the proper tools/ equipment and take training to correctly and safely maintain Mazda vehicles. These instructions should not be performed by "do-it-yourselfers." Customers should not assume this bulletin applies to their vehicle or that their vehicle will develop the described concern. To determine if the information applies, customers should contact their nearest authorized Mazda dealership. Mazda North American Operations reserves the right to alter the specifications and contents of this bulletin without obligation or advance notice. All rights reserved. No part of this bulletin may be reproduced in any form or by any means, electronic or mechanical--including photocopying and recording and the use of any kind of information storage and retrieval system ---without permission in writing.

(1)	The driver's-side door closes.
(A)	The driver recognition operation starts.
	When closing the driver's door, the driver recognition starts to detect the driver's face. NOTE: The status of the driver recognition cannot be displayed on the center display.
(B)	The driver recognition is completed (a registered driver/a guest driver).
	<p>Once the system identifies whether the driver is a registered one or not, the driver recognition is completed. When the driver recognition is completed, the recognition result is displayed on the center display.</p> <p>1. If the driver is a guest driver, the recognition result is displayed on the center display as in the following image.</p>  <p>2. Registered Driver</p> <p>2-a. If the driver is the same person as last time, the recognition result is displayed at the bottom of the center display.</p>  <p>2-b. If the driver is NOT the same person as last time, the recognition result is displayed on the center display as in the following image.</p> 
(C)	The driving position restoration starts

CONSUMER NOTICE: The information and instructions in this bulletin are intended for use by skilled technicians. Mazda technicians utilize the proper tools/ equipment and take training to correctly and safely maintain Mazda vehicles. These instructions should not be performed by "do-it-yourselfers." Customers should not assume this bulletin applies to their vehicle or that their vehicle will develop the described concern. To determine if the information applies, customers should contact their nearest authorized Mazda dealership. Mazda North American Operations reserves the right to alter the specifications and contents of this bulletin without obligation or advance notice. All rights reserved. No part of this bulletin may be reproduced in any form or by any means, electronic or mechanical--including photocopying and recording and the use of any kind of information storage and retrieval system ---without permission in writing.

	<p>When the system identifies the driver as the registered one, the driving position can be restored.</p> <ul style="list-style-type: none"> • If the driver is identified as the same one as last time, the driving position is restored when the recognition is completed. • If the driver is NOT identified as the same one as last time, "Welcome, *** " is displayed on the center display. The driving position is restored, after selecting "OK" in the center display with the commander knob. • If the driver is identified as a guest, the driving position is not changed. <p>NOTE:</p> <ul style="list-style-type: none"> • When the driver switches with another, the shift amount of the driving position (especially the seat and the steering wheel) may be large. • For the driver's safety, the driving position will be restored only when the driver selects "OK" in the center display.
(D)	The driving position restoration is completed
	When the driving position restoration is completed, the notification sound is activated (pop sound).
(X)	The driver recognition is discontinued
	<p>Driver recognition is discontinued when turning the ignition ON or shifting into other than P-range during driver recognition.</p> <p>NOTE: If driver recognition is discontinued, the driver is always identified as a guest and the system operates for a guest driver. The center display shows that the driver is recognized as a guest driver.</p>
(Y)	The driver recognition is timed out
	<ol style="list-style-type: none"> 1. If no face is detected because the driver's face is NOT looking forward, the system will continue the face detect operation for 10 seconds. 2. If still no face is detected, the driver recognition will be timed out. 3. After the driver's face is detected and if the driver recognition cannot be completed within 30 seconds, it will be timed out. <p>NOTE: When driver recognition is timed out, the recognition result is not displayed, and the driver switching operation is not activated and the driving position does not change.</p>
(Z)	The driving position restoration is discontinued
	<p>If performing the following action during the driving position restoration, the restoration operation is discontinued and the refusal sound is activated (beep sound).</p> <ul style="list-style-type: none"> • Shifting into any position other than Park. • Operating any switches related to driving positions. <ul style="list-style-type: none"> ◦ Seat position memory switch ◦ Door lock/unlock with the advanced keyless entry function ◦ Steering wheel electric adjustment switch ◦ Power seat adjustment manual switches ◦ Outside mirror adjustment switches ◦ Performing active driving display setting with Mazda Connect <p>NOTE: If performing cranking during the driving position restoration, the restoration operation is suspended for a</p>

CONSUMER NOTICE: The information and instructions in this bulletin are intended for use by skilled technicians. Mazda technicians utilize the proper tools/ equipment and take training to correctly and safely maintain Mazda vehicles. These instructions should not be performed by "do-it-yourselfers." Customers should not assume this bulletin applies to their vehicle or that their vehicle will develop the described concern. To determine if the information applies, customers should contact their nearest authorized Mazda dealership. Mazda North American Operations reserves the right to alter the specifications and contents of this bulletin without obligation or advance notice. All rights reserved. No part of this bulletin may be reproduced in any form or by any means, electronic or mechanical--including photocopying and recording and the use of any kind of information storage and retrieval system ---without permission in writing.

while and then resumed.



Frequently Asked Question (FAQs):

1 Why is the driver recognized as a guest every time?

The driver recognition may be interrupted. Avoid any operations (including cranking/IG-ON etc.) until the driver recognition is completed.

Due to accessories and/or angle of the face, the driver's face may not be recognized. The following measures may improve the driver recognition.

- Try the same appearance and the face angle as the driver recognition.
- Redo the driver recognition with Mazda Connect (Settings > Driver Personalization System > Edit Driver Profile > Redo Driver Recognition)

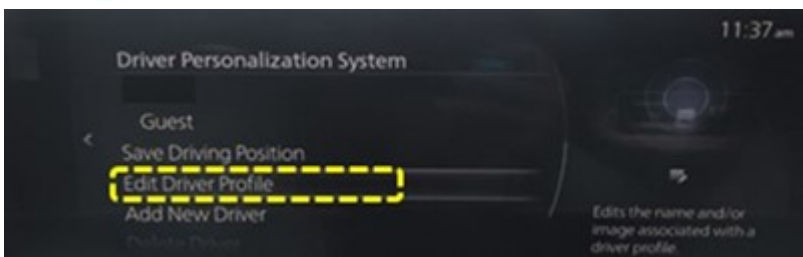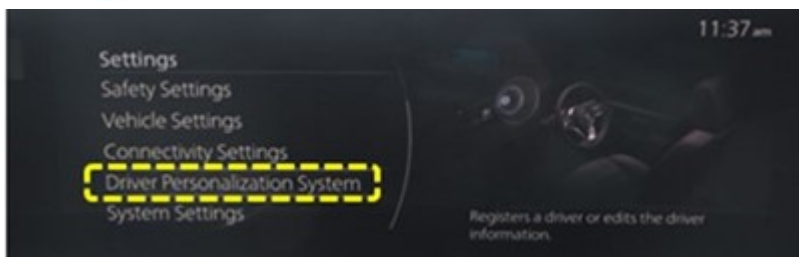

CONSUMER NOTICE: The information and instructions in this bulletin are intended for use by skilled technicians. Mazda technicians utilize the proper tools/ equipment and take training to correctly and safely maintain Mazda vehicles. These instructions should not be performed by "do-it-yourselfers." Customers should not assume this bulletin applies to their vehicle or that their vehicle will develop the described concern. To determine if the information applies, customers should contact their nearest authorized Mazda dealership. Mazda North American Operations reserves the right to alter the specifications and contents of this bulletin without obligation or advance notice. All rights reserved. No part of this bulletin may be reproduced in any form or by any means, electronic or mechanical---including photocopying and recording and the use of any kind of information storage and retrieval system ---without permission in writing.



- Two appearances per a driver can be registered. Add/Redo alternative appearance recognition with Mazda Connect (Settings > Driver Personalization System > Edit Driver Profile > Add Alternate Appearance /Redo Alternate Appearance).

NOTE: When doing/redoing the appearance recognition, show natural appearance (opening the eyes, closing the mouth etc.).

2 Why is the Driving Position NOT restored?

- If the driver is recognized as a guest, the driving position restoration is NOT activated.
- If the driver is switched with another before the driver recognition is completed, the driving position restoration is NOT activated immediately. In this case, the welcome message is shown when the driver recognition is completed and the driving position restoration will start after selecting "OK" on the center display with the commander knob.



- If there are obstacles on the movement line of the seat or misalignment of the memory seat motor, the driving position may NOT be restored properly. Refer to SA-043/23 - AUTOMATIC SEAT POSITION ADJUSTMENT IS INTERRUPTED.

3 Why does it take time to display the result of the driver recognition?

When the vehicle wakes up by unlocking the door etc. during sleep mode, it takes time to start the vehicle system and to begin the face detection. That may cause a few seconds of a delay in displaying the recognition result.

4 When starting the vehicle, why is the View Monitor displayed on the instrument cluster before the result of the driver recognition?

If "Display Priority View at Start Up" is set "Enable", View Monitor is displayed preferentially when the vehicle is started. Pressing "360° View Monitor switch" closes the View Monitor, and displays the result of the driver recognition.

CONSUMER NOTICE: The information and instructions in this bulletin are intended for use by skilled technicians. Mazda technicians utilize the proper tools/ equipment and take training to correctly and safely maintain Mazda vehicles. These instructions should not be performed by "do-it-yourselfers." Customers should not assume this bulletin applies to their vehicle or that their vehicle will develop the described concern. To determine if the information applies, customers should contact their nearest authorized Mazda dealership. Mazda North American Operations reserves the right to alter the specifications and contents of this bulletin without obligation or advance notice. All rights reserved. No part of this bulletin may be reproduced in any form or by any means, electronic or mechanical---including photocopying and recording and the use of any kind of information storage and retrieval system ---without permission in writing.