



Technical Service Bulletin

SUBJECT:		No: TSB-24-33-002	
FRONT COIL SPRING AND STRUT DESCRIPTION CORRECTION - SERVICE MANUAL REVISION		DATE: August 2024	
		MODEL: Outlander	
CIRCULATE TO:	<input type="checkbox"/> GENERAL MANAGER	<input checked="" type="checkbox"/> PARTS MANAGER	<input checked="" type="checkbox"/> TECHNICIAN
<input checked="" type="checkbox"/> SERVICE ADVISOR	<input checked="" type="checkbox"/> SERVICE MANAGER	<input checked="" type="checkbox"/> WARRANTY PROCESSOR	<input type="checkbox"/> SALES MANAGER

PURPOSE

This TSB provides corrections to the Front Coil Spring and Strut description in the Suspension section of the applicable Service Manuals.

AFFECTED VEHICLES

2022-2024 Outlander

AFFECTED SERVICE MANUAL

2022-2024 Outlander Service Manual

PROCEDURE

Please use the chart below to replace the page in the affected Service Manuals: Suspension, Front Suspension, Removal and Installation, Front Coil Spring and Strut, Disassembly and Assembly sections.

Applicable Manual	Pub.No.	Applicable Title	Content
2022 OUTLANDER Service Manual	MSCD-030B-2022	SUSPENSION └ FRONT SUSPENSION └ REMOVAL AND INSTALLATION	Attached sheet 2
2023 OUTLANDER Service Manual	MSCD-030B-2023	└ FRONT COIL SPRING AND STRUT └ Disassembly and Assembly	
2024 OUTLANDER Service Manual	MSCD-030B-2024		



Copyright 2024, Mitsubishi Motors North America, Inc.

The information contained in this bulletin is subject to change. For the latest version of this document, go to the Mitsubishi Dealer Link, MEDIC, or the Mitsubishi Service Information website(www.mitsubishitechinfo.com).

ASSEMBLY

CAUTION:

Never damage strut assembly piston rod when installing components from strut assembly.

1.Install strut attachment (SST: ST35652000) to strut and secure it in a vise.

CAUTION:


When installing the strut attachment to strut assembly, wrap a shop cloth around strut to protect from damage.

2.Install lower rubber seat with its protrusion (A) on the lower area aligned with the hole (B) on the strut.

3.Compress coil spring using a spring compressor (commercial service tool), and install it onto strut assembly.

CAUTION:

- Be sure a spring compressor is securely attached to coil spring, before compress coil spring.
- Align the lower end of coil spring (1) with lower rubber seat (2) as shown in the figure.

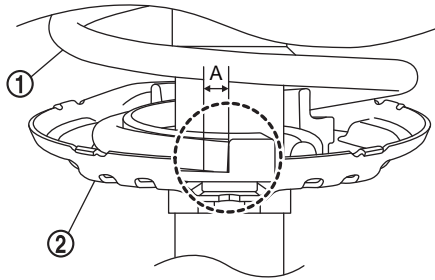


CF100AH0AA00ENG


Dimension (A) : 5 mm (0.20 in) or less

- Set coil spring so that its paint marks are aligned with the position from the bottom end of the coil spring as shown in the figure.


<Corrected>

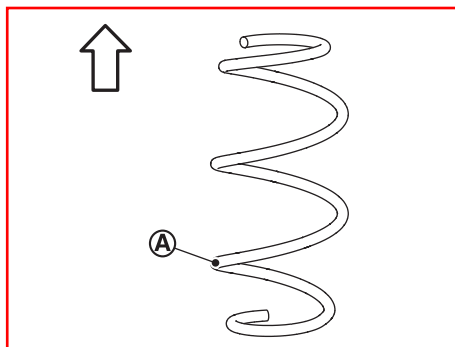

DF100AH1AB00ENG

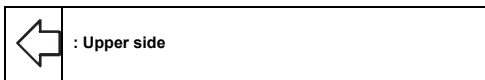

<Deleted>



<Deleted>



4.Apply soapy water to bound bumper.

CAUTION:

Never use machine oil.