

Date: 11/18/2025

CAL FTL 60-005

**Subject: Inspecting Upper Cab Drain Tube**

**Make: Freightliner**

**Model: Cascadia**

**Model Year Affected: 2024 - 2026**

**Build Date Range: Selected Vehicles Built Between February 13, 2023, and August 19, 2025**

Our records indicate that you are the owner of certain vehicles; therefore, DTNA has decided to share the following documentation with you.

Please see the attached communication in this email. We hope you find this information helpful.

Date: 11/18/2025  
CAL FTL 60-005

## Subject: Upper Cab Drain Tube Inspection

**Make: Freightliner**

**Model: Cascadia**

**Model Year Affected: 2024 - 2026**

**Build Date Range: Selected Vehicles Built Between February 13, 2023, and August 19, 2025**

## General Information:


Some water management issues have been discovered and DTNA is investigating to understand the cause. This CAL provides instructions on how to inspect the right-hand (RH) side upper cab drain tube for proper installation. Pictures of the upper drain tube connection to the nipple and lower tube location are requested.

## Work Instructions

1. Park the vehicle on a level surface, shut down the engine, and apply the parking brakes. Chock the tires.
2. Remove the door sill plate.
  - a. Open the door.
  - b. Remove the fasteners and remove the cover. See Fig. 1.

**Fig. 1, A-Pillar Cover Removal**

3. Remove the A-pillar grab handle.
  - a. On the RH side, remove the handle cover and fasteners (LH side shown). See Fig. 2.

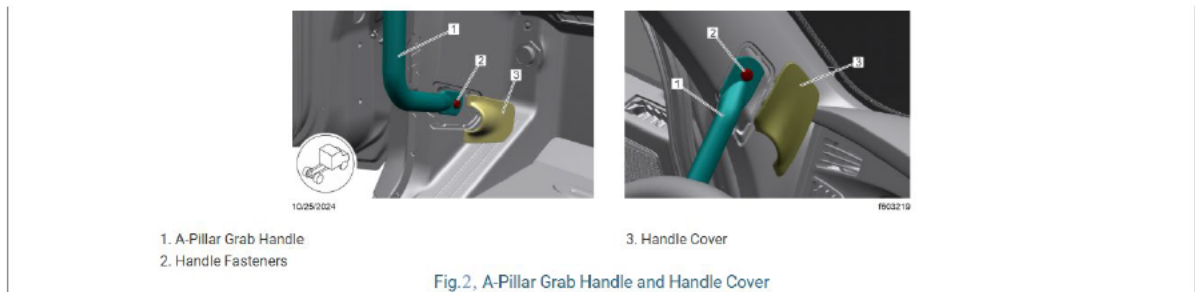

4. Remove the upper A-pillar cover.
  - a. Pull the A-pillar upper cover clip, then remove the upper cover. See Fig. 3.

Date: 11/18/2025  
CAL FTL 60-005

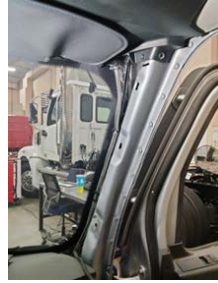


Fig. 3, A-Pillar Upper Cover Clip Removed

**5. Remove Lower A-pillar cover.**

- a. Pull the A-pillar lower cover clips and remove the lower cover. See Fig. 4.




**6. Remove dash electrical bay cover.**

- a. Use the handhold at the lower left of the cover, then pull the corner of the panel loose. See Fig. 5.



- b. Pull the remaining spring clips loose from the dash, then remove the cover. See Fig. 6.

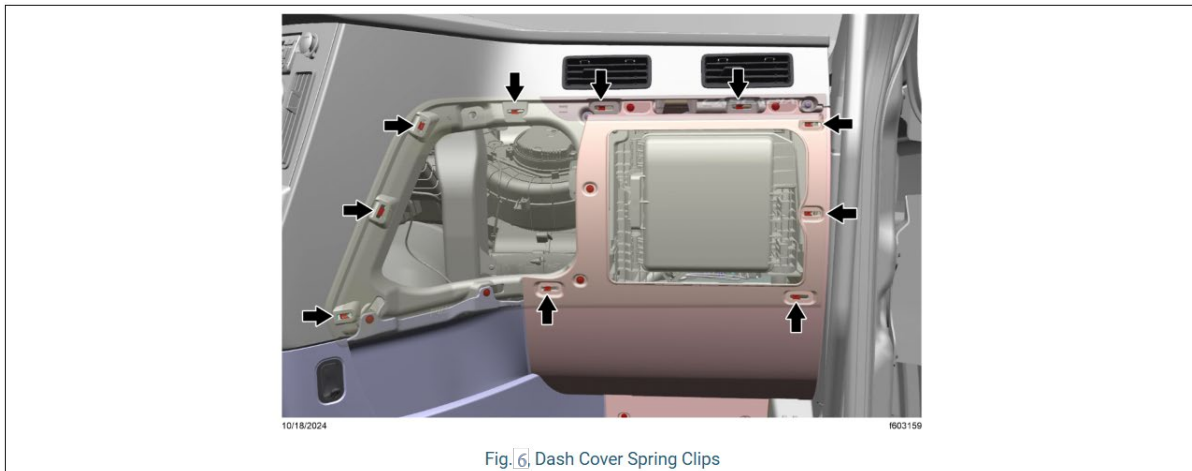


**7. Remove the right-hand lower dash cover.**

- a. Remove the screws that attach the cover to the dash. See Fig. 7.
- b. Pull the clips loose, then remove the cover. See Fig. 7.

Date: 11/18/2025

CAL FTL 60-005

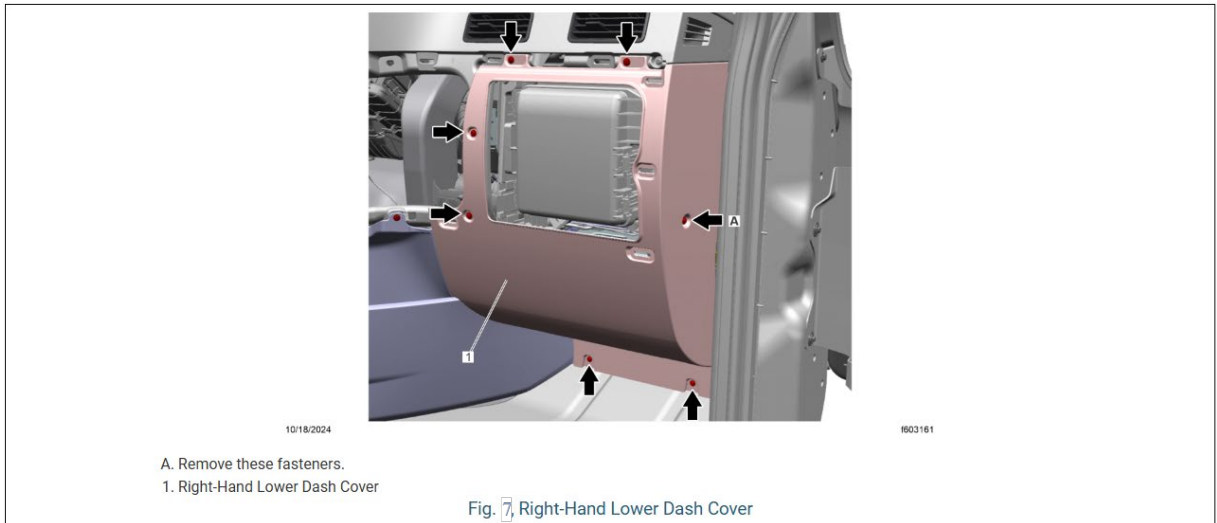

8. Inspect the upper drain tube connection.
  - a. Ensure the hose is on the nipple and secured with a clamp or zip tie. See Fig. 8.



9. Inspect lower end of drain tube.
  - a. Move the harness aside to access the square opening in the inner cowl structure. See Fig. 9.

Date: 11/18/2025  
CAL FTL 60-005



Fig. 9, Inspecting Drain Tube and Accessing Inner Cowl Structure

- b. Using a video/camera inspection scope, take a photo of the lower end of the drain tube. See Fig. 10.

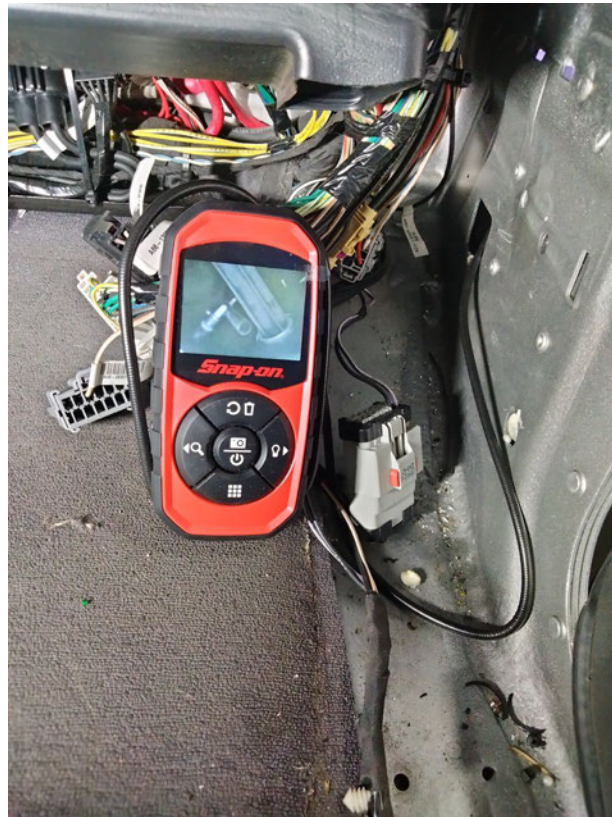


Fig. 10, Video/Camera Inspection of Drain Tube Lower End

10. Install all removed components.