

2026 UX 300h Pre-Delivery Service (PDS)

Service
Category General

Section Pre-Delivery Service

Market USA

Toyota Supports
ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2026	UX300H	

REVISION NOTICE

April 28, 2026 Rev1:

- The Required Tools & Equipment section has been updated.
- The Customize ACC Function section has been removed.

Any previous printed versions of this bulletin should be discarded.

Introduction

Pre-Delivery Service (PDS) is a critical step in satisfying our new car customers. Customer feedback indicates the following areas deserve special attention when performing PDS:

- Careful inspection for paint chips/scratches and body dents/dings.
- Proper operation of electrical accessories (including interior light, clock, and radio reset).
- Interior cleanliness.
- Proper function of mechanical systems.

The PDS process helps identify potential vehicle concerns before customer delivery. After completing the PDS process, maintain accurate PDS records by ensuring the required documents listed below are completed and recorded in accordance with Lexus Warranty Policy.

- GTS+ Health Check
- Completed PDS Check Sheet
- Battery Charge Test Print Out
- GTS+ Tire Pressure Information

Customer retention and proper maintenance of vehicles are and have always been a major focus for Lexus. To help remind customers that regular service is essential to the proper maintenance of the vehicle, dealers are required to install a service reminder sticker before delivery. By doing this, customers will be reminded to return to your dealership for service. Your current service reminder sticker may be used.

2026 UX 300h Pre-Delivery Service (PDS)

Introduction (continued)

This bulletin contains the PDS procedures that apply specifically to the 2026 model year UX 300h.

Refer to [L-PDSB-CS001-D](#) the universal *Check Sheet* that contains PDS steps that apply to all 2026 model year Lexus vehicles. To properly perform a complete PDS, you must complete all procedures contained in this TSB as well as the PDS Check Sheet. In addition, if the vehicle is stored for over 30 days, refer to [L-SB-0011-25](#), *Long-Term Vehicle Storage Guidelines*.

Refer to the table below for a definition of terms that may be used in this bulletin.

Table 1.

TERM	ACRONYM	DEFINITION
Conventional Vehicle	CV	A vehicle with only a gasoline engine for propulsion
Electrified Vehicle	EV	A vehicle that utilizes a hybrid or a plug-in hybrid or battery electric system for propulsion
Hybrid Electric Vehicle	HEV	A vehicle with both a gasoline engine and an HV battery
Plug-in Hybrid Electric Vehicle	PHEV	A vehicle with both a gasoline engine and an HV battery that can be charged externally
Battery Electric Vehicle	BEV	A vehicle with only an HV battery that can be charged externally
State of Charge	SOC	The remaining capacity available in a battery
12-Volt	12V	Standard 12V battery used to power electrical systems separate from high voltage components
High Voltage	HV	HV battery used to power the electrified vehicle

2026 UX 300h Pre-Delivery Service (PDS)

Table of Contents

• Warranty Policy	4
• Warranty Information	4
• Required Tools & Equipment	4
• D/C Cut Fuse Installation	5
• Front License Plate and Mounting Bracket Installation *	6
• Front and Rear Emergency Towing Eyelet Removal and Hole Cover Installation	8
• Installation of Rubber Body Plugs	11
• Power Back Door Initialization *	12
• Tire Pressure Warning System (TPWS) Initialization	12
• Seating Position Control ECU Initialization *	12
• Head Unit System Reset	12
• Deletion of Vehicle Alert History	13
• Dealer Contact Information for Call Dealer Head Unit Function *	13
• Navigation — Set Date & Time by GPS	13

*If applicable.

2026 UX 300h Pre-Delivery Service (PDS)

Warranty Policy

If the need for additional repairs or adjustment is noted during PDS, the required service should be performed under warranty. Reimbursement will be managed under the warranty policy.

The Warranty Policy and Procedures Manual requires that you maintain the completed Check Sheet in the customer's file. If you cannot produce a completed form for each retailed vehicle upon TMS and/or Region/Distributor audit, the PDS payment amount will be subject to debit.

An additional Repair Order completed in conjunction with normal PDS MUST have time punch/flags for service. If multiple repairs are performed, separate time flags MUST be punched for each repair.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

Required Tools & Equipment

REQUIRED EQUIPMENT	SUPPLIER	PART NUMBER	QTY
Techstream ADVi*	ADE	TSADVUNITECP	1
Techstream Lite		TSLP3DLR01	
Techstream Lite (Green Cable)		TSLP2DLR01	

*Essential SST.

NOTE

- Only ONE of the Techstream units listed above is required.
- GTS+ software version 2026.01.003.02 or later is required.
- Additional Techstream units may be ordered by calling Approved Dealer Equipment (ADE) at 1-800-368-6787 or by visiting *TIS – Diagnostics – Tools & Equipment – Techstream Order Portal*.


2026 UX 300h Pre-Delivery Service (PDS)

D/C Cut Fuse Installation

Check the location of the D/C Cut fuse (30A). It may have been removed at the assembly plant and temporarily stored in the blank space of the relay block in the engine compartment to minimize battery discharge during transportation and storage.

- If the D/C Cut fuse (30A) is still in its original location in the relay block, proceed with performing a Health Check using GTS+.
- If the D/C Cut fuse (30A) is NOT in its original location, it is necessary to remove the D/C Cut fuse (30A) from the blank space in the relay block and reinstall it to its original location as shown. After installation, confirm ALL related DTCs are cleared.

Figure 1.

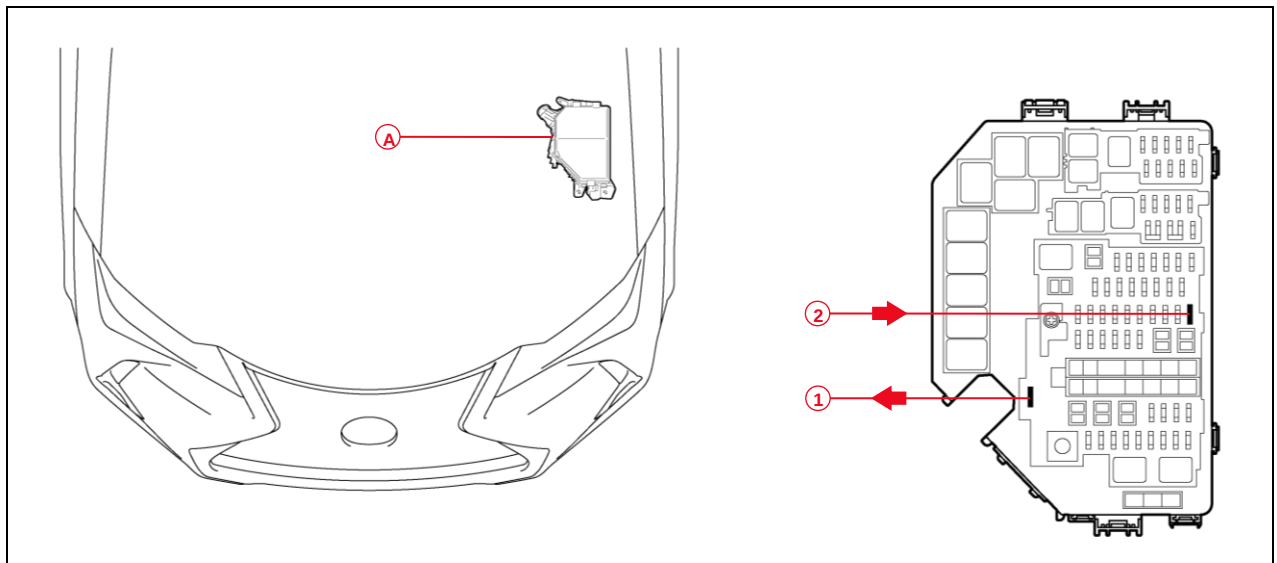

A	Relay Block
1	Remove the D/C Cut Fuse (30A) (Blank Space)

2	Install the D/C Cut Fuse (30A) (Original Location)
----------	---

NOTE

- With the D/C Cut fuse (30A) removed, if ANY DTCs are detected when the ignition is turned ON during transportation, use GTS+ to clear ALL DTCs AFTER ensuring that there are NO malfunctions.
- While the vehicle is stored at the dealership, disconnect the negative (–) battery terminal to prevent battery discharge. Refer to [L-SB-0019-25](#), *Battery Inspection and Maintenance During PDS*, for battery maintenance information.

2026 UX 300h Pre-Delivery Service (PDS)

Front License Plate and Mounting Bracket Installation


The front license plate bracket and two self-tapping screws are loaded in the vehicle at the assembly plant. Follow this procedure to install the front license plate bracket and front license plate in states where it is required by law.

1. Align attachment point "A" of the mounting bracket with the dimples on the radiator lower grille.

NOTE

- Attachment point "A" is used for installation of the front license plate mounting bracket to the radiator lower grille.
- Attachment point "B" is used to install the license plate onto the mounting bracket.

Figure 2.

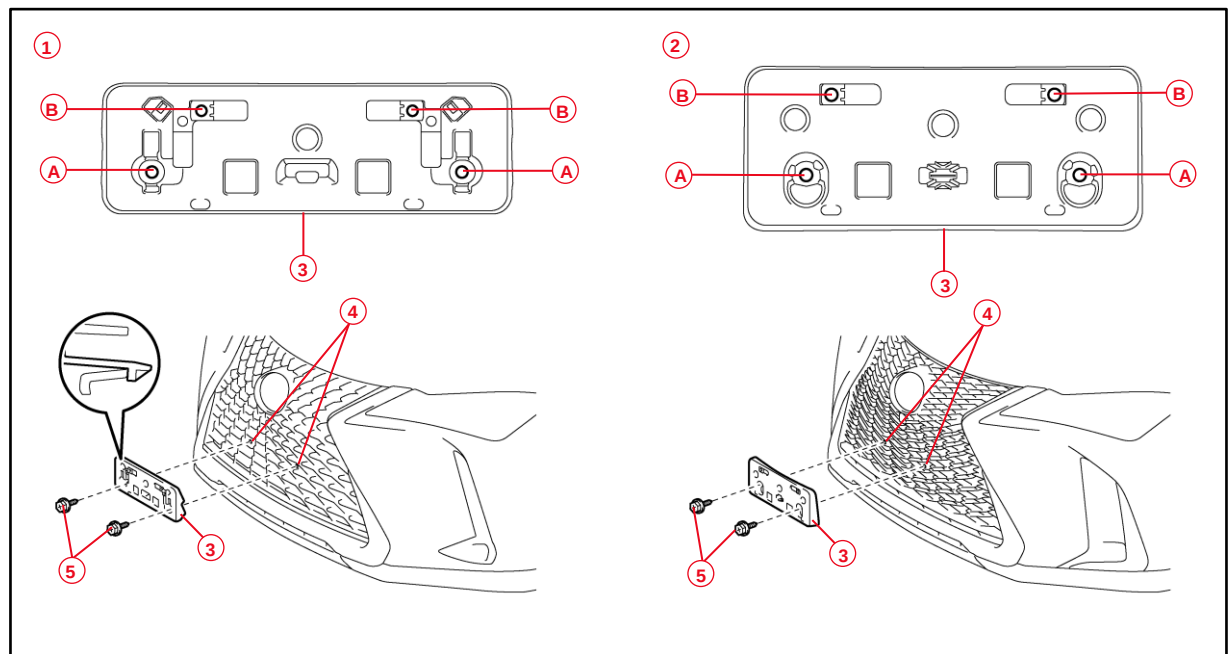

1	Non-F Sport Model
2	F Sport Model
3	Mounting Bracket
4	Dimples

5	Self-tapping Screws
A	Attachment point "A"
B	Attachment point "B"

2026 UX 300h Pre-Delivery Service (PDS)

Front License Plate and Mounting Bracket Installation (continued)

2. Screw the two self-tapping screws directly into the dimples to install the front license plate mounting bracket.

NOTICE


- Do NOT pre-drill holes into the dimples on the front bumper cover.
- Do NOT overtighten the self-tapping screws.

3. Install the front license plate onto the mounting bracket using two noncorroding bolts with the following dimensions:

Nominal Length: 15.0 mm (0.59 in.)


Diameter: 6.0 mm (0.24 in.)

Figure 3.

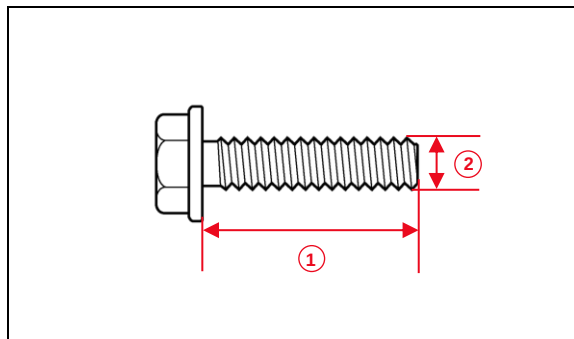

1	Nominal Length
2	Diameter

Figure 4.

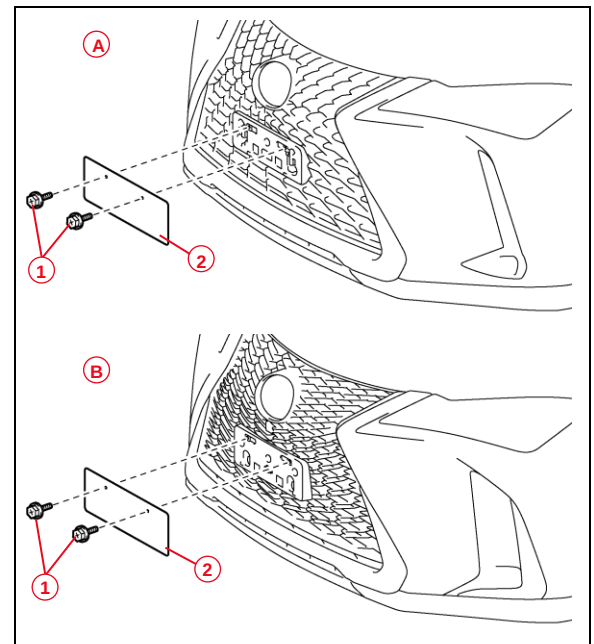

A	Non-F Sport Model
B	F Sport Model
1	Bolts
2	Front License Plate

2026 UX 300h Pre-Delivery Service (PDS)


Front and Rear Emergency Towing Eyelet Removal and Hole Cover Installation

1. Remove the front and rear emergency towing eyelets from the front and rear bumpers by turning them counterclockwise.

NOTE

If it is difficult to loosen the front emergency towing eyelet, use a steel bar.

Figure 5.

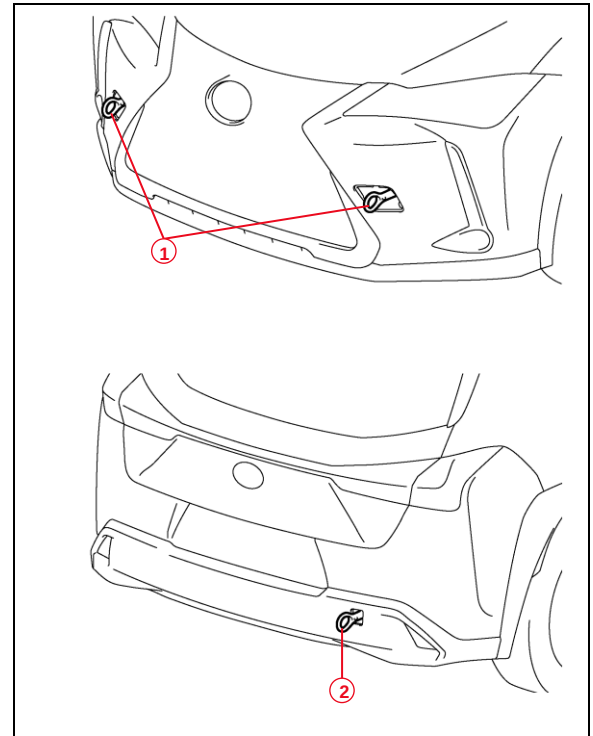

1	Front Emergency Towing Eyelets
2	Rear Emergency Towing Eyelet

2026 UX 300h Pre-Delivery Service (PDS)


Front and Rear Emergency Towing Eyelet Removal and Hole Cover Installation (continued)

2. Place one of the removed emergency towing eyelets into the luggage tray in the luggage compartment.

NOTE

Dispose of the other two removed emergency towing eyelets.

Figure 6.

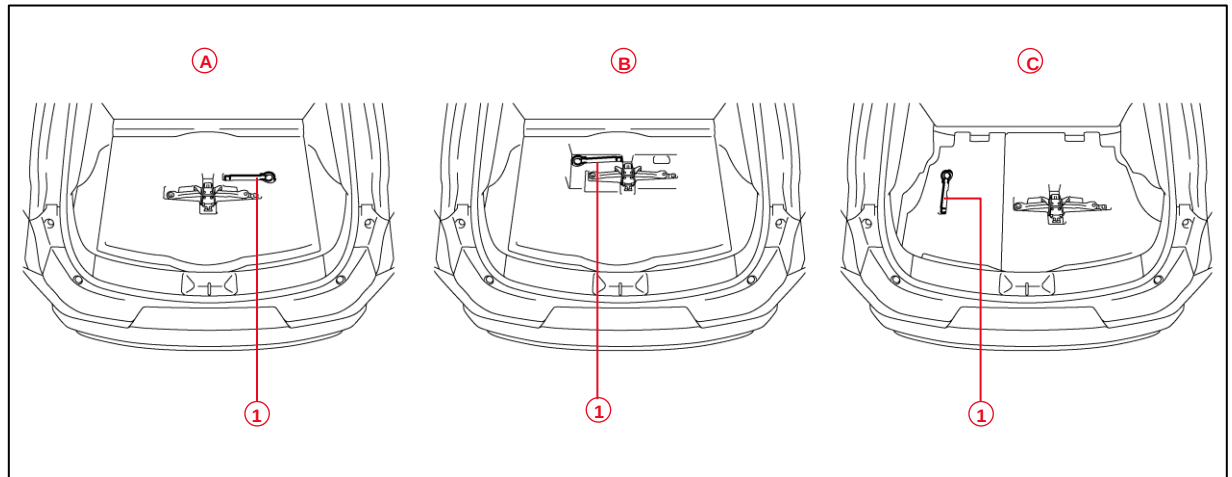

A	Type A
B	Type B
C	Type C
1	Emergency Towing Eyelet

2026 UX 300h Pre-Delivery Service (PDS)


Front and Rear Emergency Towing Eyelet Removal and Hole Cover Installation (continued)

3. Install the front AND rear emergency towing eyelet hole covers, which are stored in the glove box, on the front and rear bumpers.
 - A. Insert the arrow-shaped part of the emergency towing eyelet hole cover "A" into the eyelet hole "B" as shown.
 - B. Install the emergency towing eyelet hole cover to the hole of the bumper.

NOTE

Make sure the front emergency towing eyelet cover is installed in the front, and the rear emergency towing eyelet cover is installed in the rear.

Figure 7.

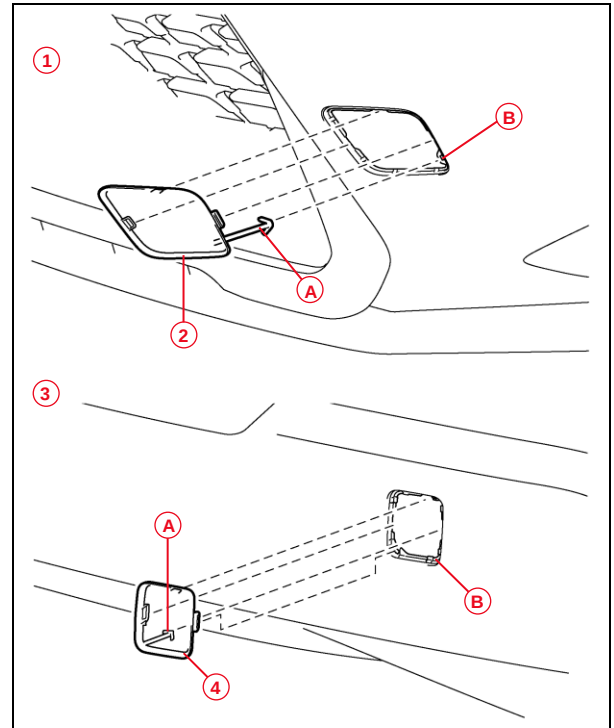


1	Front
2	Front Emergency Towing Eyelet Hole Cover
3	Rear
4	Rear Emergency Towing Eyelet Hole Cover
A	Arrow-shaped Part
B	Eyelet Hole

2026 UX 300h Pre-Delivery Service (PDS)

Installation of Rubber Body Plugs

1. Confirm the number of plugs in the glove box. If two plugs are present, perform substep 2A ONLY. If four plugs are present, perform substep 2A AND substep 2B.
2. Install plugs according to the instructions below by confirming the number of plugs in the glove box.
 - A. Install two plugs in the rear side member hole or rocker inner hole as shown.
 - B. Install two plugs in the torque box hole or rocker inner hole as shown.

Figure 8.

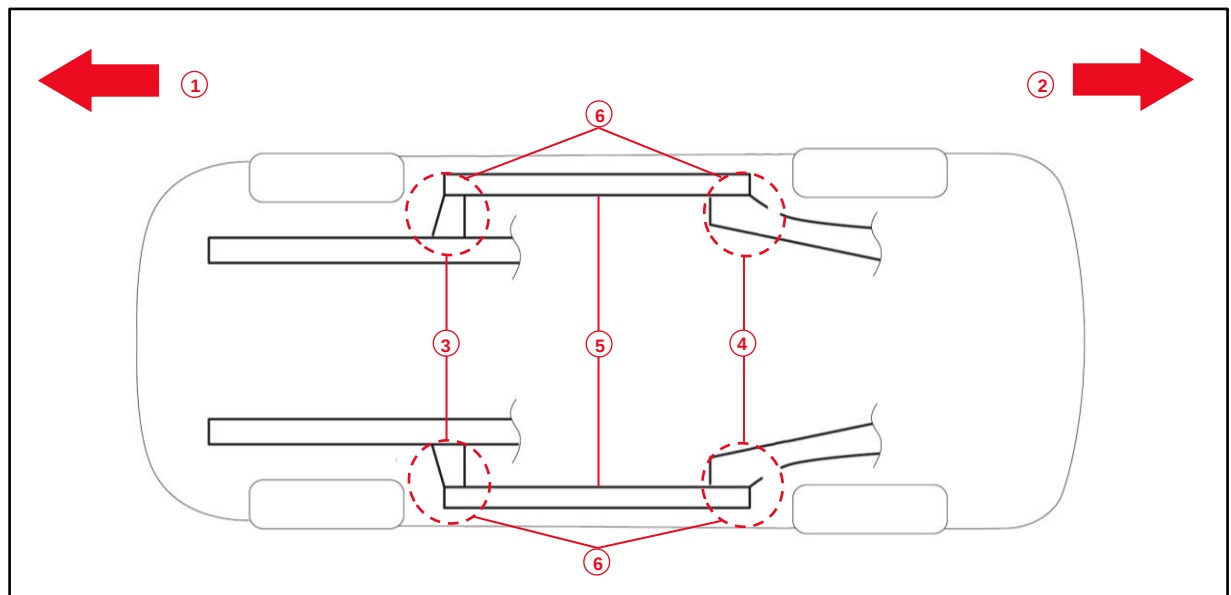

1	Front Side
2	Rear Side
3	Torque Box Hole or Rocker Inner Hole

4	Rear Side Member Hole or Rocker Inner Hole
5	Rocker Inner
6	Install Plug Here (if Applicable)

NOTICE

- The installation of these plugs is required to prevent rust.
- These plugs are stored in the glove box.
- The number of plugs may vary according to production locations in the same vehicle model.

2026 UX 300h Pre-Delivery Service (PDS)

Power Back Door Initialization

Refer to the applicable Repair Manual for the power back door initialization procedure.

- [2026](#) UX 300h:
Vehicle Exterior – Door / Hatch – Power Back Door System – Initialization

Tire Pressure Warning System (TPWS) Initialization

Refer to the applicable Repair Manual for the TPWS initialization procedure.

- [2026](#) UX 300h:
Suspension – Tire Pressure Monitoring – Tire Pressure Warning System – Initialization

NOTE

- When the outside temperature is significantly colder than the shop's temperature, or there is a significant ambient temperature change overnight, use GTS+ to determine the proper tire pressure.
- From the Health Check Result Status pane, select the refresh button within the Compensation Pressure data display.
- This model has four TPWS sensors.

Seating Position Control ECU Initialization

Refer to the applicable Repair Manual for the seating position control ECU initialization procedure (procedure 2).

- [2026](#) UX 300h:
Vehicle Interior – Seat – Front Power Seat Control System (w/ Memory) – Registration

Head Unit System Reset

Prior to vehicle delivery confirm radio displays the welcome screen with language options when Ignition is ON.

If the welcome screen with language options does not display complete the following steps:

1. Turn the engine switch (power switch) to the ON position (ON mode).
2. Enter the Following menus: *Settings – Info & Security – Info & Security Reset*.
3. Select yes when the system reset dialogue box appears.
4. Cycle engine switch (power switch) OFF – On to confirm welcome screen appears.

2026 UX 300h Pre-Delivery Service (PDS)

Deletion of Vehicle Alert History

As the D/C Cut fuse is removed, the communication between the various ECUs is interrupted. When the D/C Cut fuse is reinstalled, the communication status is restored, but Lexus Enform Service Connect may store malfunction history in the form of vehicle alert history. Therefore, it is necessary to operate the multi-display and delete the vehicle alert history AFTER installing the D/C Cut fuse during PDS at the dealership.

Deletion Procedure

1. Turn the engine switch (power switch) to the ON position (ON mode).
2. Enter the Following menus: *Vehicle – Vehicle Alert*.
3. If there is vehicle alert history present, use the delete button to the right of the alert.

HINT

If there is no vehicle alert history stored, the screen will indicate “There are no vehicle alert messages at this time.”

4. A banner will display confirming, “Deleted vehicle alert information.”

Dealer Contact Information for Call Dealer Head Unit Function

Refer to the *Multimedia System Owner’s Manual* to add dealer contact information.

- [2026](#) UX 300h:
Section 2-8 *Vehicle Settings – Setting Dealer Information*

Navigation — Set Date & Time by GPS

Prior to vehicle delivery, it is necessary to turn the Set date & time by GPS setting to the ON position.

1. Turn the engine switch (power switch) to the ON position (ON mode).
2. Navigate the following menus in the head unit: *Settings – General – Date & Time – Set Date & Time by GPS*.
3. Ensure the Set date & time by GPS function is set to the ON position.