INFORMATION REDACTED PURSUANT TOTHE FREEDOM
OF INFORMATION ACT (FOIA), 5 U.S.C.552(B)(6)

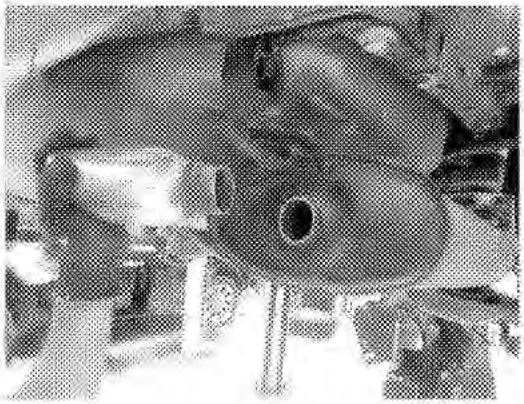

Figure 15- Article 14-16-NA

Figure 16 – Article 14-16-NA

17. Reinstall the rear exhaust system.

18. Visually inspect the new tip's relative relationship with the rear bumper fascia to resemble the current product. Make sure to check symmetry between the two tips and bumper before tack welding.

19. Install the new exhaust tip, butt up against the muffler, and tack weld into place. (Figure 17-18)

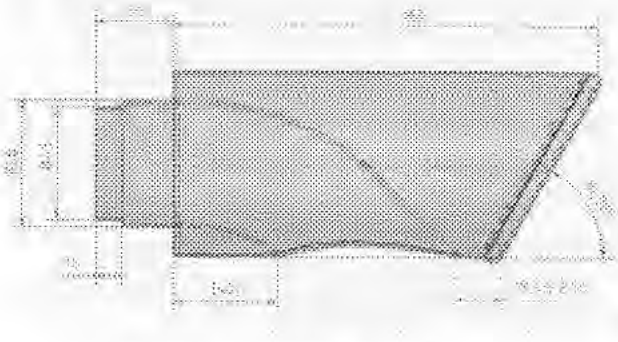

Figure 17 - Article 14-16-NA

Figure 18 – Article 14-16-NA

20. Once the tips are located properly, finish welding around the entire exhaust-tip joint, and grind smooth the weld. **NOTE:** It will be necessary to drop the exhaust hanger on each side to completely weld the entire diameter. Reinstall back the rear exhaust system. (Figures 19-22)

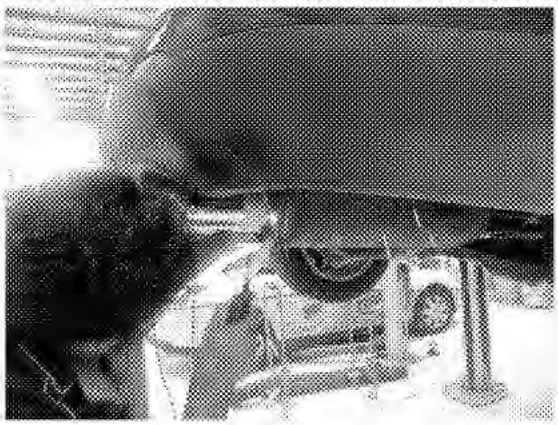

Figure 19 – Article 14-16-NA

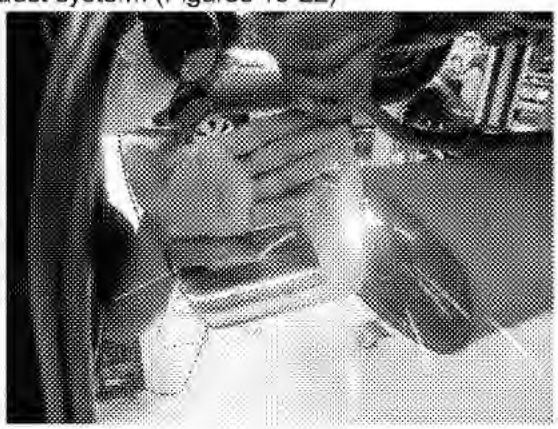

Figure 20 – Article 14-16-NA