

Bendix® Piggyback Spring Brake Chamber Assembly

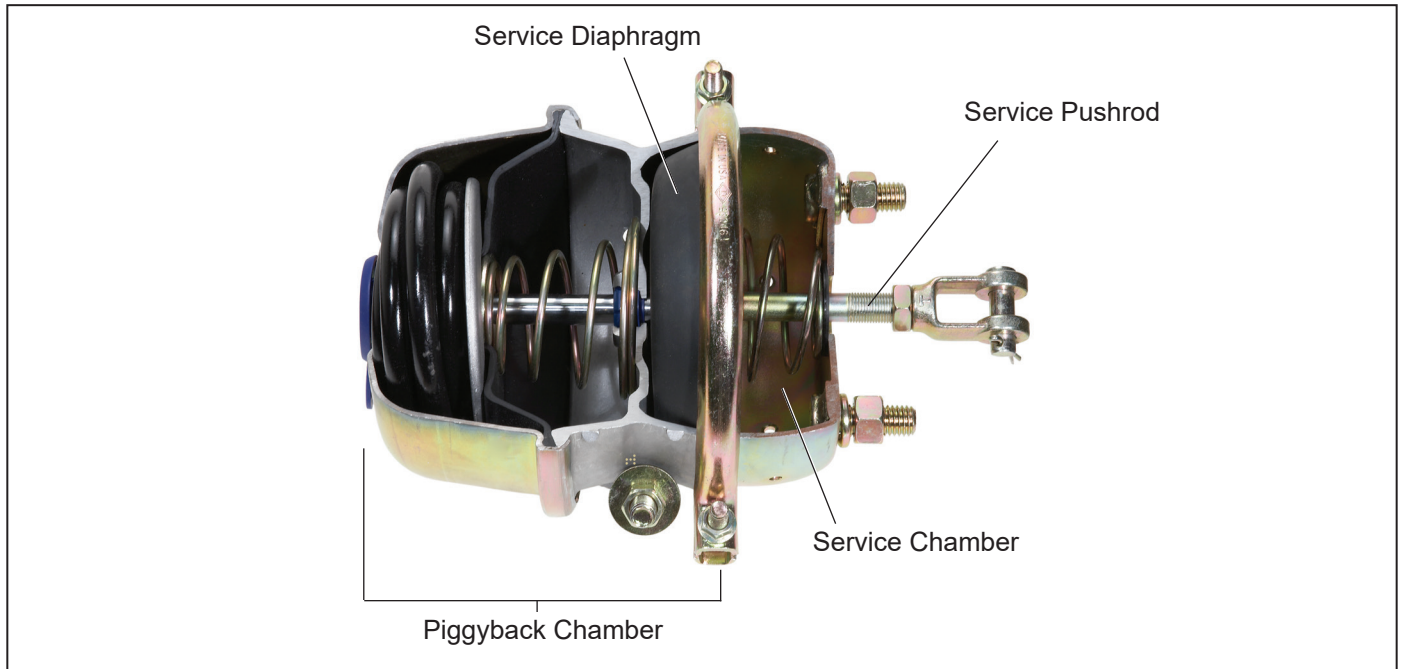


Figure 1 - Bendix® Piggyback Spring Brake Chamber Assembly

DESCRIPTION

The Bendix® piggyback spring brake chamber is made up of a conventional service brake chamber and an emergency, or parking, spring mechanism for use on vehicles equipped with cam foundation brakes. The spring brake chamber provides: (1) service braking; (2) parking; and (3) emergency braking. The chamber can be piped with various system arrangements to be automatically or manually applied under emergency braking conditions.

The spring brake is a diaphragm-type actuator which converts the energy of air pressure into mechanical force. The diaphragm is held between the pressure plate and non-pressure plate by a two-piece clamp ring.

Different size brake chambers are identified by numbers which specify the effective area of a diaphragm. For example, a Type 30/30 spring brake chamber has 30 square inches of effective area on each diaphragm.

The standard diaphragm material is a compound of natural rubber with a fabric interior of nylon.

PREVENTIVE MAINTENANCE



Review the warranty policy before performing any intrusive maintenance procedures. An extended warranty may be voided if intrusive maintenance is performed during this period.


Because no two vehicles operate under identical conditions, maintenance intervals will vary. Experience is a valuable guide in determining the best maintenance interval for a vehicle.


GENERAL SAFETY GUIDELINES WARNING! PLEASE READ AND FOLLOW THESE INSTRUCTIONS

TO AVOID PERSONAL INJURY OR DEATH:

When working on or around a vehicle, the following guidelines should be observed AT ALL TIMES:

- ▲ Park the vehicle on a level surface, apply the parking brakes and always block the wheels. Always wear personal protection equipment.
- ▲ Stop the engine and remove the ignition key when working under or around the vehicle. When working in the engine compartment, the engine should be shut off and the ignition key should be removed. Where circumstances require that the engine be in operation, EXTREME CAUTION should be used to prevent personal injury resulting from contact with moving, rotating, leaking, heated or electrically-charged components.
- ▲ Do not attempt to install, remove, disassemble or assemble a component until you have read, and thoroughly understand, the recommended procedures. Use only the proper tools and observe all precautions pertaining to use of those tools.
- ▲ If the work is being performed on the vehicle's air brake system, or any auxiliary pressurized air systems, make certain to drain the air pressure from all reservoirs before beginning ANY work on the vehicle. If the vehicle is equipped with a Bendix® AD-IS® air dryer system, a Bendix® DRM™ dryer reservoir module, a Bendix® AD-9si®, AD-HF®, or AD-HFi™ air dryer, be sure to drain the purge reservoir.
- ▲ Following the vehicle manufacturer's recommended procedures, deactivate the electrical system in a manner that safely removes all electrical power from the vehicle.
- ▲ Never exceed manufacturer's recommended pressures.
- ▲ Never connect or disconnect a hose or line containing pressure; it may whip and/or cause hazardous airborne dust and dirt particles. Wear eye protection. Slowly open connections with care, and verify that no pressure is present. Never remove a component or plug unless you are certain all system pressure has been depleted.
- ▲ Use only genuine Bendix® brand replacement parts, components and kits. Replacement hardware, tubing, hose, fittings, wiring, etc. must be of equivalent size, type and strength as original equipment and be designed specifically for such applications and systems.
- ▲ Components with stripped threads or damaged parts should be replaced rather than repaired. Do not attempt repairs requiring machining or welding unless specifically stated and approved by the vehicle and component manufacturer.
- ▲ Prior to returning the vehicle to service, make certain all components and systems are restored to their proper operating condition.
- ▲ For vehicles with Automatic Traction Control (ATC), the ATC function must be disabled (ATC indicator lamp should be ON) prior to performing any vehicle maintenance where one or more wheels on a drive axle are lifted off the ground and moving.
- ▲ The power MUST be temporarily disconnected from the radar sensor whenever any tests USING A DYNAMOMETER are conducted on a vehicle equipped with a Bendix® Wingman® system.
- ▲ You should consult the vehicle manufacturer's operating and service manuals, and any related literature, in conjunction with the Guidelines above.

 **WARNING:** Not all wheels and valve stems are compatible with Bendix® Air Disc Brakes. Use only wheels and valve stems approved by the vehicle manufacturer to avoid the risk of valve stem shear and other compatibility issues.

 **WARNING: AVOID CREATING DUST. POSSIBLE CANCER AND LUNG DISEASE HAZARD.**

While Bendix Commercial Vehicle Systems LLC does not offer asbestos brake linings, the long-term effects of some non-asbestos fibers have not been determined. Current Occupational Safety and Health Administration (OSHA) Regulations cover exposure levels to some components of non-asbestos linings, but not all. The following precautions must be used when handling these materials.

Avoid creating dust. Compressed air or dry brushing must never be used for cleaning brake assemblies or the work area.

- ▲ Bendix recommends that workers doing brake work must take steps to minimize exposure to airborne brake lining particles. Proper procedures to reduce exposure include working in a well-ventilated area, segregation of areas where brake work is done, use of local filtered ventilation systems or use of enclosed cells with filtered vacuums. Respirators approved by the Mine Safety and Health Administration (MSHA) or National Institute for Occupational Safety and Health (NIOSH) should be worn at all times during brake servicing.
- ▲ Workers must wash before eating, drinking, or smoking; shower after working, and should not wear work clothes home. Work clothes should be vacuumed and laundered separately without shaking.
- ▲ OSHA & EPA Regulations regarding testing, disposal of waste, and methods of reducing exposure for asbestos are set forth in 29 & 40 Code of Federal Regulations §1910.1001 & 61.150, respectively. These Regulations provide valuable information which can be utilized to reduce exposure to airborne particles.
- ▲ Safety Data Sheets on this product, as required by OSHA, are available from Bendix. Call 1-800-247-2725 and speak to the Tech Team or email techteam@bendix.com.

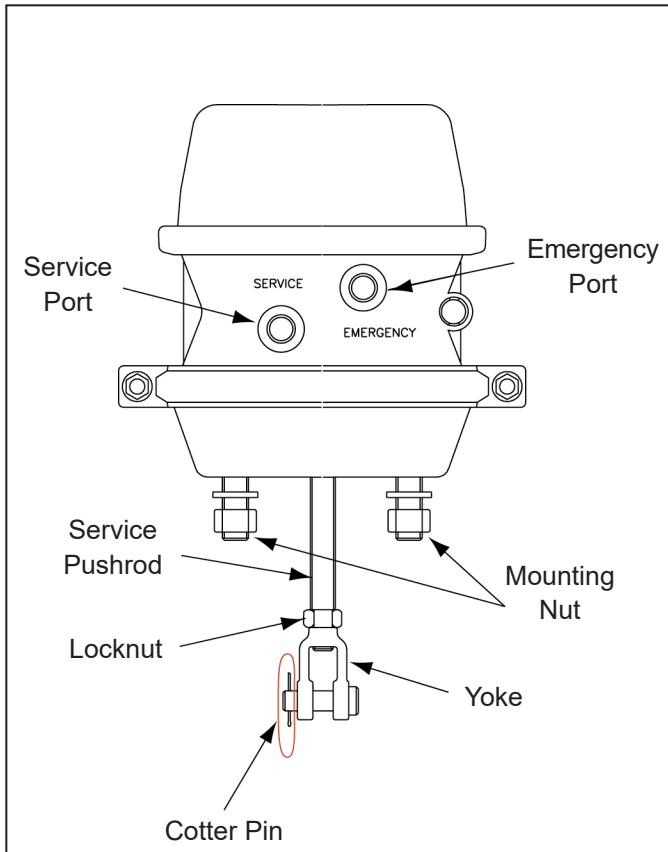


Figure 2 - Piggyback Spring Brake Chamber



Piggyback spring brake chamber assemblies contain a loaded compression spring. Property damage, serious injury, or death may occur if these instructions are not followed completely.

Every 300 operating hours, 8,000 miles, or one (1) month:

1. Check the pushrod travel and adjust the travel at the slack adjuster if needed. The pushrod travel should be as short as possible without the brakes dragging. Excessive pushrod travel reduces braking efficiency, shortens the diaphragm life, gives slow braking response, and wastes air.
2. Check the pushrod-to-slack-adjuster alignment from release to the full stroke position to be sure the pushrod moves out and returns properly without binding at the non-pressure plate hole or with other structures. Also check the angle formed by the slack adjuster arm and pushrod. It should be greater than 90° when the chamber is in the released position, and approach 90° at maximum readjustment stroke.
3. Check the tightness of the mounting nuts. Torque on the non-pressure plate mounting nuts should be 110 ft-lbs.

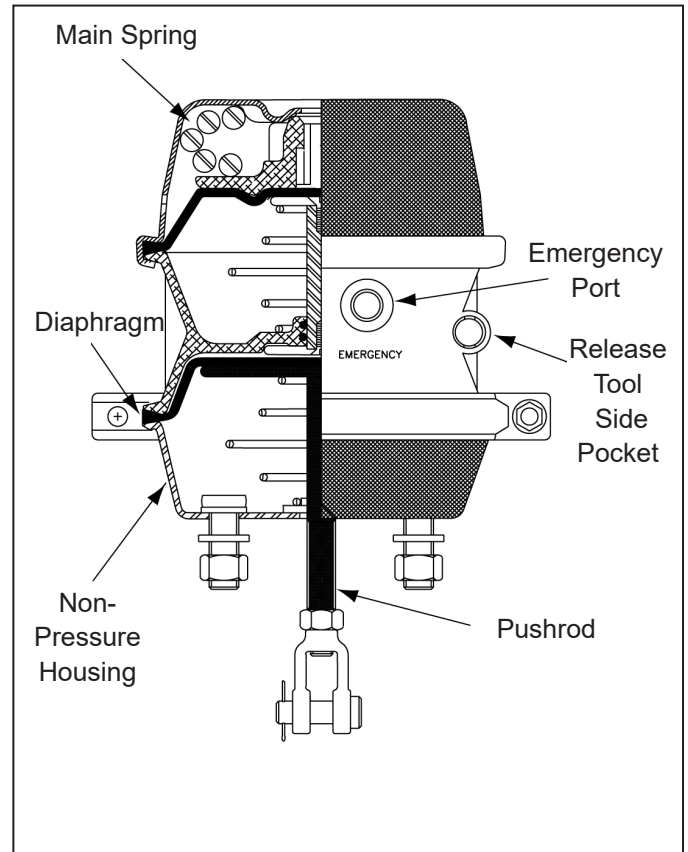


Figure 3 - Piggyback Spring Brake Cut-Away View

4. Check the cotter pins to ensure that they are in place.
5. Check all hoses and lines. They should be secure and in good condition with sufficient length to allow for axle movement.

Every 3,600 operating hours, 100,000 miles, or one (1) year:

1. Disassemble and clean all parts. Clean all metal parts in cleaning solvent, removing all rust and scale. Carefully inspect all metal parts for cracks, distortion, or damage. All diaphragm sealing surfaces should be smooth and clean.
2. Install a new diaphragm or any other parts if they are worn or deteriorated. Perform steps outlined in "Replacing the Service Diaphragm". When the diaphragm, spring, or both are replaced, they should be replaced in the corresponding chamber on the same axle.



The emergency diaphragm in a piggyback spring brake chamber cannot be replaced. Replace the piggyback chamber portion of the spring brake chamber.

OPERATION & LEAKAGE TESTS

OPERATING TEST

1. Apply the brakes and observe that the pushrods move out promptly and without binding.
2. Release the brakes and observe that the pushrods return to the released position promptly and without binding.
3. Check the pushrod travel. The pushrod travel should be as short as possible without the brakes dragging. Adjust the travel of the pushrod at the slack adjuster if necessary.

LEAKAGE TEST

1. Make and hold a full brake application.
2. Using a soap solution, coat the clamping ring. If leakage is detected, tighten the clamping ring only enough to stop leakage. **DO NOT OVERTIGHTEN** as this can distort the sealing surface or clamping ring. Coat the area around the pushrod hole (loosen the boot if necessary). Minimal leakage is permitted (100 SCCM). If excessive leakage is detected, the service diaphragm must be replaced.

OPERATION: GENERAL

The Bendix® piggyback spring brake chamber assembly is made up of the service chamber and the piggyback chamber and provides service braking, parking, and emergency braking.

The chamber can be mounted with the mounting bolts in either a vertical or horizontal plane on standard mounting stud centers. Two air lines are used: the service air line and the emergency air line.

Controlled air pressure enters the service chamber through the inlet port and acts upon the diaphragm moving the push plate and rod assembly forward.

When the service chamber is used to actuate cam-type brake foundation assemblies, the yoke (which is threaded on the pushrod) is connected to a slack adjuster, which in turn is connected to the brake cam shaft. This forward motion of the pushrod rotates the slack adjuster, cam shaft, and cam applying the vehicle brakes.

The greater the air pressure admitted into the service chamber, the greater the force applied by the pushrod and, conversely, the less pressure applied to the service chamber the less force applied by the pushrod. Pushrod force is determined by multiplying the delivered air pressure by the effective diaphragm area. For example, if 60 psi is admitted to a type 30 service chamber, the lineal force on the end of the pushrod is approximately 1,800 lbs.

When air pressure is released from the spring brake chamber, the pushrod return spring in combination with the brake shoe return spring returns the diaphragm, push

plate and rod assembly, slack adjuster, and brake cam to their released positions releasing the brakes.

When the driver operates the parking brake, air is exhausted from the piggyback chamber. The main spring is allowed to extend, which forces the pushrod and the emergency diaphragm forward. This forces the service diaphragm and service pushrod forward which applies the brakes.

When the air pressure in the piggyback spring brake chamber drops to below 78 psi, the main spring overcomes chamber pressure and forces the pushrod and emergency diaphragm forward.



- **The piggyback spring brake chamber contains a loaded compression spring. Property damage, serious injury or death may occur if instructions are not followed completely.**
- **When replacing the piggyback spring brake chamber, make sure to block the wheels to prevent vehicle rollaway.**
- **DO NOT service a piggyback spring brake chamber if it has structural damage of any kind. Replace the complete assembly. Dismount a damaged spring brake chamber by first cutting the service pushrod with an acetylene torch to relieve any force it might have.**
- **Do not strike any part of a spring brake chamber for any reason. This may cause structural damage.**
- **Be careful not to drop a spring brake chamber at anytime.**
- **The emergency diaphragm in a piggyback spring brake chamber cannot be replaced. Replace the piggyback chamber portion of the spring brake chamber.**
- **Always work from the side of the piggyback spring brake chamber assembly. Never work from the front or back.**

MECHANICAL RELEASE (CAGING) OF THE BENDIX PIGGYBACK CHAMBER

NOTE: The Bendix piggyback chamber is not shipped caged. It must be caged prior to any work being done.

1. Remove the dust cap from the keyhole in the center of the piggyback spring brake chamber.
2. Remove the release tool assembly from the side pocket of the adapter base.
3. Insert the release tool (T-bolt) through the release tool keyhole and into the pressure plate.
4. Turn the release tool 1/4 turn clockwise.

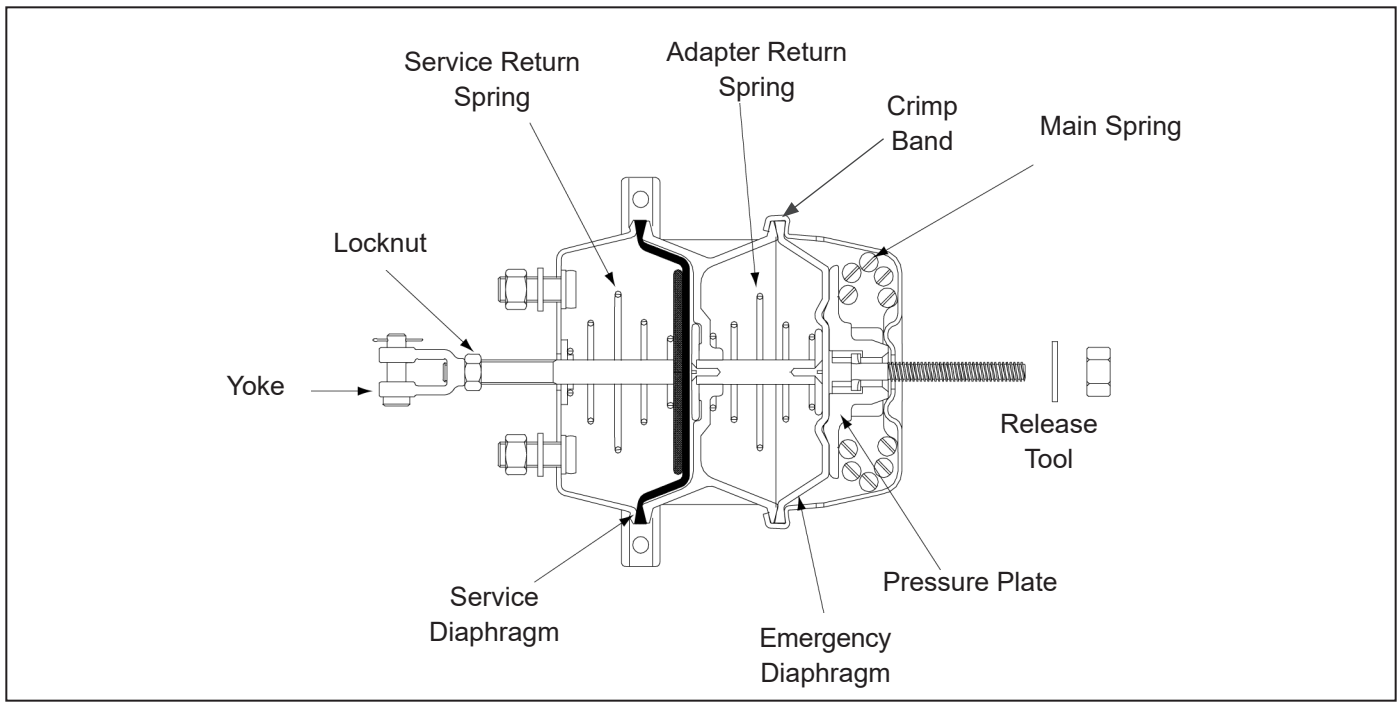


Figure 4 - Caging the Piggyback Chamber

5. Pull on the release tool to seat it in the pressure plate properly.
6. Add the release washer and nut to the tool.
7. To cage the main spring, tighten the release nut with a hand wrench and ensure the service pushrod is retracting.
8. Do not over torque the release tool assembly. The maximum torque is 35 ft-lbs.



Do not use an impact wrench. An impact wrench may over torque the release tool and cause damage to the pressure plate.

9. The threaded portion of the release tool will extend approximately 2.9 inches out of the nut when fully released.

MECHANICAL RELEASE (CAGING) AND REMOVAL OF THE PIGGYBACK SPRING BRAKE CHAMBER TO BE REPLACED

NOTE: The piggyback spring brake chamber can be replaced with the service brake chamber mounted to the vehicle or removed for ease of access. To remove the assembly from the vehicle, perform the steps outlined in "Removal and Installation of the Combination Spring Brake."



- **Do not mechanically release (cage) the spring if there is any structural damage of any kind. Caging the spring in such a chamber may cause serious injury or death. Replace the complete assembly.**
 - **Do not remove the piggyback spring chamber crimp band.**
1. Mechanically release the old piggyback spring brake by following the original manufacturer's instructions.
 2. Ensure the air pressure is removed from all air reservoirs before removing the air hoses or working on the spring brake.
 3. Remove the air hoses from the piggyback spring brake chamber. Be sure to mark both hoses to ensure proper reinstallation.
 4. Clamp a pair of vise grips around the service pushrod touching the non-pressure housing. This cages the service return spring.
 5. Remove the clamp nuts and service clamp assembly and carefully remove the old piggyback chamber.

INSTALLING THE BENDIX® PIGGYBACK SPRING BRAKE CHAMBER

1. Visually inspect the service diaphragm for excessive wear, damage, or cracks. Replace if needed. To replace the service diaphragm, perform the steps outlined in "Replacing the Service Diaphragm".

2. Line up the new piggyback spring brake chamber, the service diaphragm, and the non-pressure housing, ensuring that they are centered.
3. Reassemble the service clamp assembly. Ensure all parts are seated properly and remain centered.
4. Torque the clamp nuts to 25 ft-lbs. Remove the vise grips from the service pushrod.
5. Reconnect the emergency air line to the emergency port and reconnect the service air line to the service port.
6. Pressurize the service half by putting air into the service port. Do not exceed 120 psig. Test for leaks around the clamps. Minimal leakage is permitted (100 SCCM).
7. Uncage the main spring and return the release tool into the release tool side pocket.
8. Replace the dust cap in the keyhole.



Check for proper service and emergency operation after servicing any part of the brake chamber. Check the brake adjustment if the combination spring brake was removed/installed. (Follow vehicle manufacturer's instructions to adjust the brakes).

REMOVAL AND INSTALLATION OF THE COMBINATION SPRING BRAKE



Do not mechanically release (cage) the spring if there is any structural damage to the piggyback spring brake chamber. Caging the spring in such a chamber may cause serious injury or death. Replace the complete assembly.

REMOVAL:

1. Mechanically release (cage) the old piggyback spring brake chamber by following the original manufacturer's instructions.
2. Ensure air pressure is removed from all air reservoirs before removing the air hoses or working on the spring brake.
3. Remove air hoses from the piggyback spring brake chamber. Be sure to mark both hoses to ensure proper reinstallation.
4. Remove the yoke pin, disconnect the yoke from the slack adjuster, remove the mounting nuts, washer, and lock washers and remove the combination spring brake. While removing, use care to prevent the combination spring brake from falling.

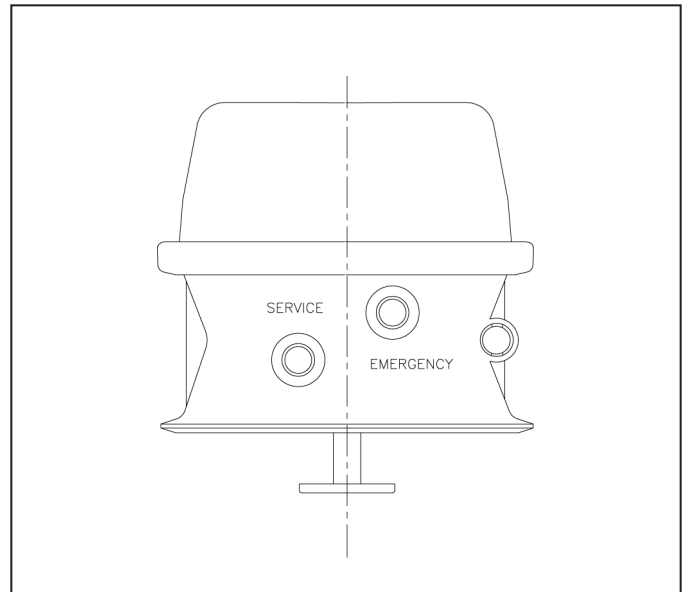


Figure 5 - Piggyback Chamber

INSTALLATION:

1. Install the piggyback spring brake assembly using the furnished hardware. Torque the mounting nuts to 110 ft-lbs. Connect the yoke to the slack adjuster and install the yoke pin and the cotter pin.
2. Reconnect the emergency air line to the emergency port and reconnect the service air line to the service port.
3. Pressurize the service chamber by putting air into the service port. Do not exceed 120 psig. Test for leaks around the clamps. Minimal leakage is permitted (100 SCCM).
4. Uncage the main spring and return the release tool into the release tool side pocket.
5. Replace the dust cap in the keyhole.



Check for proper service and emergency operation after servicing any part of the brake chamber(s). Check the brake adjustment if the combination spring brake was removed/installed. (Follow vehicle manufacturer's instructions to adjust the brakes).

REPLACING THE SERVICE DIAPHRAGM

To replace the service diaphragm, it is not necessary to remove the complete combination spring brake from the vehicle. However, it can be removed for ease of access. To remove the combination spring brake, perform the steps outlined in "Removal and Installation of the Combination Spring Brake".

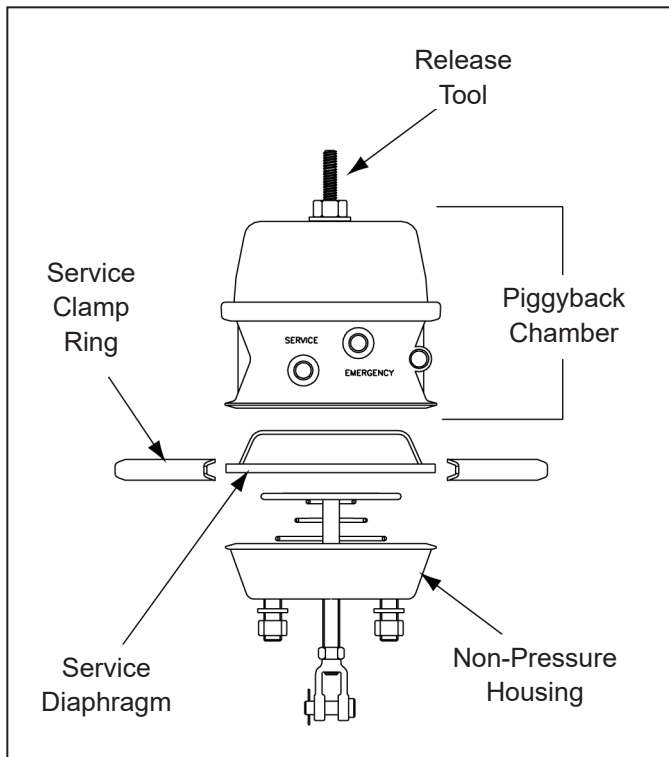


Figure 6 - Service Diaphragm



- **The emergency diaphragm in a piggyback spring brake chamber cannot be replaced. Replace the piggyback chamber portion of the spring brake chamber.**
 1. Protect the service pushrod with tape, and lock the vise grips on the pushrod close to the non-pressure plate. (This will hold the rod in the applied position).
 2. Ensure that the piggyback spring brake chamber is caged. To cage the piggyback spring brake chamber, perform the steps outlined in either "Mechanical Release of the Bendix Piggyback Spring Brake" or "Mechanical Release of the Piggyback Spring Brake to be Replaced".
 3. Mark the service clamp ring and non-pressure plate to ensure proper alignment of parts during reassembly.
 4. Remove the service clamp ring assembly and the piggyback chamber. The service clamp ring is closest to the non-pressure plate and slack adjuster. *See provided illustrations if in doubt.*



Do not remove the spring chamber clamps.

5. Visually inspect the service diaphragm for excessive wear, damage, or cracks. Replace if needed.
6. Line up the piggyback spring brake chamber, the service diaphragm, and the non-pressure housing, ensuring that they are centered.
7. Reassemble the service clamp assembly. Ensure all parts are seated properly and remain centered.
8. Torque the clamp nuts to 25 ft-lbs. Remove the vise grips from the service pushrod.
9. Reconnect the emergency air line to the emergency port and reconnect the service air line to the service port.
10. Pressurize the service half by putting air into the service port. Do not exceed 120 psig. Test for leaks around the clamps. Minimal leakage is permitted (100 SCCM).
11. Uncage the main spring and return the release tool into the release tool side pocket.
12. Replace the dust cap in the keyhole.



Check for proper service and emergency operation after servicing any part of the brake chamber(s). Check the brake adjustment if the combination spring brake was removed/installed. (Follow vehicle manufacturer's instructions to adjust the brakes).

B2BENDIX.COM 24/7/365 ACCESS FULL SERVICE AT YOUR FINGERTIPS	KNOWLEDGE-DOCK.COM BLOGS, PODCASTS, AND MORE INDUSTRY INSIGHTS FROM INDUSTRY EXPERTS	BRAKE-SCHOOL.COM WEB-BASED TRAINING LOG ON AND LEARN FROM THE BEST
---	---	---

